

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ACE	ACE24C02	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C02A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C04	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C08A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C128A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C16	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C256	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C256A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C32A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C512	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24C64A	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24LC02	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24LC02(SOT23)	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24LC04	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24LC08	XSPROM.EXE	M1-UN-DP48	
ACE	ACE24LC16	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C100G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C160G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C320G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C400G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C512G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE25C800G	XSPROM.EXE	M1-UN-DP48	
ACE	ACE93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
ACE	ACE93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
ACTRANS	AC29LV004B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ACTRANS	AC29LV004T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ACTRANS	AC29LV400B	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ACTRANS	AC29LV400T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ACTRANS	AC39LV010	XMEM2.EXE	M1-UN-DP48	
ACTRANS	AC39LV020	XMEM2.EXE	M1-UN-DP48	
ACTRANS	AC39LV040	XMEM2.EXE	M1-UN-DP48	
ACTRANS	AC39LV080	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ACTRANS	AC39LV088	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ACTRANS	AC39LV512	XMEM2.EXE	M1-UN-DP48	
ACTRANS	AC39LV800	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ACTRANS	AC25LV010	XSPROM.EXE	M1-UN-DP48	
ACTRANS	AC25LV512	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT25DF011	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT25DN512C	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT25SF041	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT25SF081	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT45DB081E-256	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT45DB081E-264	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT45DB641E-256	XSPROM.EXE	M1-UN-DP48	
ADESTO	AT45DB641E-264	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM24C128A	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM24C32B	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM24C64B	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM25C128A	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM25C32B	XSPROM.EXE	M1-UN-DP48	
ADESTO	RM25C64B	XSPROM.EXE	M1-UN-DP48	
AIT	A24C02	XSPROM.EXE	M1-UN-DP48	
AIT	A24C04	XSPROM.EXE	M1-UN-DP48	
AIT	A24C08	XSPROM.EXE	M1-UN-DP48	
AIT	A24C128	XSPROM.EXE	M1-UN-DP48	
AIT	A24C16	XSPROM.EXE	M1-UN-DP48	
AIT	A24C256	XSPROM.EXE	M1-UN-DP48	
AIT	A24C32	XSPROM.EXE	M1-UN-DP48	
AIT	A24C64	XSPROM.EXE	M1-UN-DP48	
AKM	AK6002A	XSPROM.EXE	M1-UN-DP48	
AKM	AK6004A	XSPROM.EXE	M1-UN-DP48	
AKM	AK6008A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AKM	AK6416C	XSPROM.EXE	M1-UN-DP48	
AKM	AK6420A	XSPROM.EXE	M1-UN-DP48	
AKM	AK6440A	XSPROM.EXE	M1-UN-DP48	
AKM	AK6480A	XSPROM.EXE	M1-UN-DP48	
AKM	AK6512C	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C45	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C46	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C57	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C65A	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C67	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C75A	XSPROM.EXE	M1-UN-DP48	
AKM	AK93C95A	XSPROM.EXE	M1-UN-DP48	
ALI	M8720	XMEM2.EXE	M1-UN-DP48	
ALLIANCE	AS29F200B-S	XA28F1.EXE	M1-UN-PS44	
ALLIANCE	AS29F200B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALLIANCE	AS29F200T-S	XA28F1.EXE	M1-UN-PS44	
ALLIANCE	AS29F200T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALLIANCE	AS29LV400B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALLIANCE	AS29LV400T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALLIANCE	AS29LV800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALLIANCE	AS29LV800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ALTERA	5M160ZT100	XEPM.EXE	M1-UN-DP48	ADP-EPM240-TQ100V2
ALTERA	EP1800I(PGA)	XA1810.EXE	M1-UN-DP48	ADP-1810PGA
ALTERA	EP1800I(PLCC)	XA1810.EXE	M1-UN-DP48	ADP-1810PLCC
ALTERA	EP1810(PGA)	XA1810.EXE	M1-UN-DP48	ADP-1810PGA
ALTERA	EP1810(PLCC)	XA1810.EXE	M1-UN-DP48	ADP-1810PLCC
ALTERA	EP1830(PGA)	XA1810.EXE	M1-UN-DP48	ADP-1810PGA
ALTERA	EP1830(PLCC)	XA1810.EXE	M1-UN-DP48	ADP-1810PLCC
ALTERA	EP320IPC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP600	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
ALTERA	EP600IDC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP600ILC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
ALTERA	EP610DC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP610DI	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP610IDC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP610LC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
ALTERA	EP610PC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP610SC	XEPLD1.EXE	M1-UN-DP48	CNV-SOP-DIP28A
ALTERA	EP630I	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
ALTERA	EP630PC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP900IDC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP900ILC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP910
ALTERA	EP900IPC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP910ALC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP910
ALTERA	EP910DC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP910DI	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP910ILC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP910
ALTERA	EP910IPC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EP910LC	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP910
ALTERA	EP910PC	XEPLD1.EXE	M1-UN-DP48	
ALTERA	EPC1064LC20	XEPC.EXE	M1-UN-DP48	CNV-PLCC-EPC1213
ALTERA	EPC1441LC20	XEPC.EXE	M1-UN-DP48	CNV-PLCC-EPC1213
ALTERA	EPC1441PC8	XEPC.EXE	M1-UN-DP48	CNV-DIP-EPC
ALTERA	EPC16QC100	XEPC.EXE	M1-UN-DP48	ADP-EPC16-Q100
ALTERA	EPC1LC20	XEPC.EXE	M1-UN-DP48	CNV-PLCC-EPC1213
ALTERA	EPC1PC8	XEPC.EXE	M1-UN-DP48	CNV-DIP-EPC
ALTERA	EPC1PI8N	XEPC.EXE	M1-UN-DP48	CNV-DIP-EPC
ALTERA	EPC2LC20	XEPC.EXE	M1-UN-DP48	CNV-PLCC-EPC2
ALTERA	EPC2LC20 (ISP)	XEPC.EXE	M1-JTAG-CN10	
ALTERA	EPC2LI20	XEPC.EXE	M1-UN-DP48	CNV-PLCC-EPC2
ALTERA	EPC2TC32	XEPC.EXE	M1-UN-DP48	CNV-QFP-EPC2
ALTERA	EPC8QC100	XEPC.EXE	M1-UN-DP48	ADP-EPC16-Q100

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ALTERA	EPCS16SI16N	XEPC.EXE	M1-UN-DP48	CNV-SOP-DIP28A/CNV-SOP-SPI16A
ALTERA	EPCS16SI8N	XEPC.EXE	M1-UN-DP48	CNV-SOP-NDIP16F/G
ALTERA	EPCS1S18	XEPC.EXE	M1-UN-DP48	CNV-SOP-NDIP16/E/F/G
ALTERA	EPCS1S18N	XEPC.EXE	M1-UN-DP48	CNV-SOP-NDIP16/E/F/G
ALTERA	EPCS4S18	XEPC.EXE	M1-UN-DP48	CNV-SOP-NDIP16/E/F/G
ALTERA	EPCS4S18N	XEPC.EXE	M1-UN-DP48	CNV-SOP-NDIP16/E/F/G
ALTERA	EPCS64SI16N	XEPC.EXE	M1-UN-DP48	CNV-SOP-SPI16A
ALTERA	EPM1270F256	XEPM.EXE	M1-UN-DP48	ADP-EPM1270-FBG256
ALTERA	EPM1270T144	XEPM.EXE	M1-UN-DP48	ADP-EPM570-TQ144
ALTERA	EPM240F100	XEPM.EXE	M1-UN-DP48	ADP-EPM570-FBG100
ALTERA	EPM240GT100	XEPM.EXE	M1-UN-DP48	ADP-EPM240-TQ100/V2
ALTERA	EPM240T100	XEPM.EXE	M1-UN-DP48	ADP-EPM240-TQ100/V2
ALTERA	EPM3032ALC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-PL44
ALTERA	EPM3032ATC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-TQ
ALTERA	EPM3064ALC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-PL44
ALTERA	EPM3064ATC100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
ALTERA	EPM3064ATC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-TQ
ALTERA	EPM3064ATI44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-TQ
ALTERA	EPM3128ATC100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
ALTERA	EPM3128ATC100[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM3128ATC144	XAEPM7.EXE	M1-UN-DP48	ADP-3128A-TQ144
ALTERA	EPM3128ATC144[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM3256AQC208	XAEPM7.EXE	M1-UN-DP48	ADP-3256A-PQ208
ALTERA	EPM3256AQC208[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM3256ATC144	XAEPM7.EXE	M1-UN-DP48	ADP-3128A-TQ144
ALTERA	EPM3256ATC144[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM5032LC	XAMAX.EXE	M1-UN-DP48	CNV-PLCC-EPM5032
ALTERA	EPM5064JC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50B
ALTERA	EPM5064JC-2(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50B
ALTERA	EPM5064LC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50B
ALTERA	EPM5064LC-1(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5064-PL44
ALTERA	EPM5064LC-1(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50B
ALTERA	EPM5128ALC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5128A-PL
ALTERA	EPM5128GC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C-PG
ALTERA	EPM5128JC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C
ALTERA	EPM5128LC(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5128A-PL
ALTERA	EPM5128LC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C
ALTERA	EPM5130GC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PG
ALTERA	EPM5130JC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PL
ALTERA	EPM5130JC-1(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130A-PL
ALTERA	EPM5130JC-1(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PL
ALTERA	EPM5130LC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PL
ALTERA	EPM5130LC-1(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130A-PL
ALTERA	EPM5130LC-1(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PL
ALTERA	EPM5130QC-1(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130A-Q
ALTERA	EPM5192JC(NEW ID)	XAMAX.EXE	M1-UN-DP48	ADP-EPM5192A-PL
ALTERA	EPM5192JC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50E
ALTERA	EPM5192JC-1(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50E
ALTERA	EPM5192LC(OLD ID)	XAMAX.EXE	M1-UN-DP48	ADP-MAX50E
ALTERA	EPM570F100	XEPM.EXE	M1-UN-DP48	ADP-EPM570-FBG100
ALTERA	EPM570F256	XEPM.EXE	M1-UN-DP48	ADP-EPM1270-FBG256
ALTERA	EPM570GF256	XEPM.EXE	M1-UN-DP48	ADP-EPM1270-FBG256
ALTERA	EPM570T100	XEPM.EXE	M1-UN-DP48	ADP-EPM240-TQ100/V2
ALTERA	EPM570T144	XEPM.EXE	M1-UN-DP48	ADP-EPM570-TQ144
ALTERA	EPM7032AELC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032
ALTERA	EPM7032AETC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032-Q
ALTERA	EPM7032BLC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032
ALTERA	EPM7032BTC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032-Q
ALTERA	EPM7032BTC44[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM7032LC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032
ALTERA	EPM7032LI44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032
ALTERA	EPM7032SLC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ALTERA	EPM7032SLI44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032
ALTERA	EPM7032STC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032-Q
ALTERA	EPM7032TC44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032-Q
ALTERA	EPM7032TI44	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7032-Q
ALTERA	EPM7064AELC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-PL44
ALTERA	EPM7064AETC100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
ALTERA	EPM7064AETC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064AE-TQ
ALTERA	EPM7064LC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL44
ALTERA	EPM7064LC68	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL68
ALTERA	EPM7064LC84	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL84
ALTERA	EPM7064LI44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL44
ALTERA	EPM7064QC100	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PQ100
ALTERA	EPM7064QI100	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PQ100
ALTERA	EPM7064SLC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL44
ALTERA	EPM7064SLC68	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL68
ALTERA	EPM7064SLC84	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL84
ALTERA	EPM7064SLI44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-PL44
ALTERA	EPM7064STC100	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-TQ100
ALTERA	EPM7064STC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-TQ44
ALTERA	EPM7064TC44	XAEPM7.EXE	M1-UN-DP48	ADP-7064S-TQ44
ALTERA	EPM7096LC68	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7096-PL68
ALTERA	EPM7096LC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7096-PL84
ALTERA	EPM7096QC100 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7096-QA
ALTERA	EPM7128AELC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128AE-PL84
ALTERA	EPM7128AETC100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
ALTERA	EPM7128AETC100[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM7128AETC144	XAEPM7.EXE	M1-UN-DP48	ADP-3128A-TQ144
ALTERA	EPM7128AETC144[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM7128ATC144	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128-TQ144
ALTERA	EPM7128ATI100	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-TQ
ALTERA	EPM7128BTC100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
ALTERA	EPM7128BTC100[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM7128ELC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-PL
ALTERA	EPM7128EQC100	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-Q
ALTERA	EPM7128EQC100 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-QA
ALTERA	EPM7128SLC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-PL
ALTERA	EPM7128SQC100	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-Q
ALTERA	EPM7128SQC100 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-QA
ALTERA	EPM7128STC100	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-TQ
ALTERA	EPM7128STI100	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7128E-TQ
ALTERA	EPM7160ELC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7160E-PL
ALTERA	EPM7160EQC100 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7160E-QA
ALTERA	EPM7160EQC160	XAEPM7.EXE	M1-UN-DP48	ADP-7160E-Q160
ALTERA	EPM7160EQC160 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-7160E-QA160
ALTERA	EPM7160SLC84	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7160E-PL
ALTERA	EPM7160SQC160	XAEPM7.EXE	M1-UN-DP48	ADP-7160E-Q160
ALTERA	EPM7160SQC160 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-7160E-QA160
ALTERA	EPM7192EQC160	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7192E-Q160
ALTERA	EPM7192EQC160 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7192E-QA
ALTERA	EPM7192SQC160	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7192E-QA
ALTERA	EPM7192SQC160 in carrier	XAEPM7.EXE	M1-UN-DP48	ADP-EPM7192E-QA
ALTERA	EPM7256AETC144	XAEPM7.EXE	M1-UN-DP48	ADP-3128A-TQ144
ALTERA	EPM7256AETC144[ISP]	XAEPM7.EXE	M1-JTAG-CN10	
ALTERA	EPM7256AETI100	XAEPM7.EXE	M1-UN-DP48	ADP-3064A-TQ100
AMD	AM27128(21V)	XMEM1.EXE	M1-UN-DP48	
AMD	AM2716(25V)	XMEM1.EXE	M1-UN-DP48	
AMD	AM2716B(12.5V)	XMEM1.EXE	M1-UN-DP48	
AMD	AM27256HV(21V)	XMEM1.EXE	M1-UN-DP48	
AMD	AM2732(25V)	XMEM1.EXE	M1-UN-DP48	
AMD	AM2732B	XMEM1.EXE	M1-UN-DP48	
AMD	AM27512	XMEM1.EXE	M1-UN-DP48	
AMD	AM2764(21V)	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMD	AM27C010	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C020	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C040	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C080	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C100	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C1024	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C1024(PLCC44)	XMEM1.EXE	M1-UN-PL44	
AMD	AM27C128	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C2048	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C256	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C4096	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C512	XMEM1.EXE	M1-UN-DP48	
AMD	AM27C64	XMEM1.EXE	M1-UN-DP48	
AMD	AM27H010	XMEM1.EXE	M1-UN-DP48	
AMD	AM27H256	XMEM1.EXE	M1-UN-DP48	
AMD	AM27HB010	XMEM1.EXE	M1-UN-DP48	
AMD	AM27LV010	XMEM1.EXE	M1-UN-DP48	
AMD	AM27LV010B	XMEM1.EXE	M1-UN-DP48	
AMD	AM27LV020	XMEM1.EXE	M1-UN-DP48	
AMD	AM27LV020B	XMEM1.EXE	M1-UN-DP48	
AMD	AM27P256	XMEM1.EXE	M1-UN-DP48	
AMD	AM27S191	XBPPGM.EXE	M1-UN-DP48	
AMD	AM28F010	XMEM2.EXE	M1-UN-DP48	
AMD	AM28F010A	XMEM2.EXE	M1-UN-DP48	
AMD	AM28F020	XMEM2.EXE	M1-UN-DP48	
AMD	AM28F020A	XMEM2.EXE	M1-UN-DP48	
AMD	AM28F256	XMEM2.EXE	M1-UN-DP48	
AMD	AM28F512	XMEM2.EXE	M1-UN-DP48	
AMD	AM29DL161DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL161DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL162CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL162CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL162DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL162DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL163CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL163CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL163DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL163DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL164DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL164DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL320GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL320GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL322GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL323GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL324DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL324DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL324GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL324GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL640D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL640G-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMD	AM29DL800B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29DL800T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F002B	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002BB	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002BT	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002NB	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002NBB	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002NBT	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002NT	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F002T	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F004BB	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F004BT	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F010	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F010A	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F010B	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F016-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F016B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F016B-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F016D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F016D-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F016D-EF	XA28F1.EXE	M1-UN-TS48A/TS56	
AMD	AM29F017B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F017B-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F017D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F017D-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F032B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F040	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F040B	XMEM2.EXE	M1-UN-DP48	
AMD	AM29F080-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F080B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29F100B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F100T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F160DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F160DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200AB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200AT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F200T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F400AT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F400B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F400T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F800AB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F800B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29F800T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV001BB	XMEM2.EXE	M1-UN-DP48	
AMD	AM29LV001BT	XMEM2.EXE	M1-UN-DP48	
AMD	AM29LV002B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV002BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV002BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV002T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV004B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV004BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV004BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMD	AM29LV004T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV008B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV008BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV008BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV008T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV010B	XMEM2.EXE	M1-UN-DP48	
AMD	AM29LV017B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV017D-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV033C-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV033MU-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV040B	XMEM2.EXE	M1-UN-DP48	
AMD	AM29LV081B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV116BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV116BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV116DB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV116DT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMD	AM29LV128MH-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV128ML-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV160BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160DB-F	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160MB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV160MT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV200B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV200BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV200BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV200T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV256MH-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV256ML-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV320DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV320DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV320MB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV320MH-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV320ML-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV320MT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV400B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV400T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV640MB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV640MH-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV640ML-E	XA28F1.EXE	M1-UN-TS56	
AMD	AM29LV640MT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV641DH-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV641DH-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMD	AM29LV641DL-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV641GH-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV641ML-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29LV800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL160CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL160CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL400CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL400CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL800CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL800CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL800DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM29SL800DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMD	AM25FL005D	XSPROM.EXE	M1-UN-DP48	
AMD	AM25FL010D	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMD	AM25FL020D	XSPROM.EXE	M1-UN-DP48	
AMD	S25FL004D	XSPROM.EXE	M1-UN-DP48	
AMD	8751H	XPGM51.EXE	M1-UN-DP48	
AMD	87C51	XPGM51.EXE	M1-UN-DP48	
AMD	87C521	XPGM51.EXE	M1-UN-DP48	
AMD	87C52T2	XPGM51.EXE	M1-UN-DP48	
AMD	87C541	XPGM51.EXE	M1-UN-DP48	
AMD	AMPAL16L8A	XPLD3.EXE	M1-UN-DP48	
AMD	AMPAL22V10A	XPLD3.EXE	M1-UN-DP48	
AMD	PAL22V10-15	XPLD3.EXE	M1-UN-DP48	
AMD	PALCE16V8H	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8H/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8H/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8HD	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8Q	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8Q/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE16V8Z	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20RA10H	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8H	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8H/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8H/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8Q	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8Q/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE20V8Q/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10H/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10H/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10Q	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10Q/4	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10Q/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE22V10Z	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE26V12H	XPLD1.EXE	M1-UN-DP48	
AMD	PALCE610H	XPLD1.EXE	M1-UN-DP48	
AMD	PALLV16V8	XPLD1.EXE	M1-UN-DP48	
AMD	PALLV16V8Z/5	XPLD1.EXE	M1-UN-DP48	
AMD	PALLV22V10	XPLD1.EXE	M1-UN-DP48	
AMD	PALLV22V10Z	XPLD1.EXE	M1-UN-DP48	
AMI	FS6370	XSPROM.EXE	M1-UN-DP48	
AMI	PEEL18CV8	XPLD2.EXE	M1-UN-DP48	
AMI	PEEL18CV8(DIP20)	XPLD2.EXE	M1-UN-DP48	ADP-18CV8-DIP20
AMI	PEEL22CV10A	XPLD2.EXE	M1-UN-DP48	
AMIC	A27020	XMEM1.EXE	M1-UN-DP48	
AMIC	A27020A	XMEM1.EXE	M1-UN-DP48	
AMIC	A275308	XMEM1.EXE	M1-UN-DP48	
AMIC	A276308A	XMEM1.EXE	M1-UN-DP48	
AMIC	A277308	XMEM1.EXE	M1-UN-DP48	
AMIC	A277308A	XMEM1.EXE	M1-UN-DP48	
AMIC	A278308A	XMEM1.EXE	M1-UN-DP48	
AMIC	A279308	XMEM1.EXE	M1-UN-DP48	
AMIC	A290011AU	XMEM2.EXE	M1-UN-DP48	
AMIC	A290011T	XMEM2.EXE	M1-UN-DP48	
AMIC	A290011U	XMEM2.EXE	M1-UN-DP48	
AMIC	A29001T	XMEM2.EXE	M1-UN-DP48	
AMIC	A290021T	XMEM2.EXE	M1-UN-DP48	
AMIC	A290021U	XMEM2.EXE	M1-UN-DP48	
AMIC	A29002T	XMEM2.EXE	M1-UN-DP48	
AMIC	A29002U	XMEM2.EXE	M1-UN-DP48	
AMIC	A29010	XMEM2.EXE	M1-UN-DP48	
AMIC	A29010A	XMEM2.EXE	M1-UN-DP48	
AMIC	A29040	XMEM2.EXE	M1-UN-DP48	
AMIC	A29040A	XMEM2.EXE	M1-UN-DP48	
AMIC	A29040B	XMEM2.EXE	M1-UN-DP48	
AMIC	A29040C	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMIC	A29160TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29160UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29400TM	XA28F1.EXE	M1-UN-PS44	
AMIC	A29400TV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29400UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29512	XMEM2.EXE	M1-UN-DP48	
AMIC	A29800ATV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29800TM	XA28F1.EXE	M1-UN-PS44	
AMIC	A29800TV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29800UM	XA28F1.EXE	M1-UN-PS44	
AMIC	A29800UM-F	XA28F1.EXE	M1-UN-PS44	
AMIC	A29800UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29800UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29801AUV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29801TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29801UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL163TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL163UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29DL163UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL164TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL164UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL320FUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29DL322TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL322UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL323TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL323UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL324TV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29DL324UV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29L004T	XMEM2.EXE	M1-UN-DP48	
AMIC	A29L004TW	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMIC	A29L004U	XMEM2.EXE	M1-UN-DP48	
AMIC	A29L004UW	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMIC	A29L008ATV-F	XA28F1.EXE	M1-UN-DP48/TS48A/TS56	
AMIC	A29L008AUV-F	XA28F1.EXE	M1-UN-DP48/TS48A/TS56	
AMIC	A29L008TV	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMIC	A29L008UV	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
AMIC	A29L040	XMEM2.EXE	M1-UN-DP48	
AMIC	A29L160ATV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160ATV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29L160AUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160BTV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160FTV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160HTV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160HUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160TV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L160UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L320ATV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29L320AUV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29L400ATV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L400AUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L400TG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L400TV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L400UG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L400UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L800ATG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800ATG-F	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800ATV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L800ATV-F	XA28F1.EXE	M1-UN-TS48A/TS56	
AMIC	A29L800AUG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800AUG-F	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800AUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L800HTV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AMIC	A29L800HUV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L800TG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800TV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A29L800UG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
AMIC	A29L800UV	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
AMIC	A49LF004	XMEM2.EXE	M1-UN-DP48	
AMIC	A49LF004M	XMEM2.EXE	M1-UN-DP48	
AMIC	A49LF004T	XMEM2.EXE	M1-UN-DP48	
AMIC	A49LF040A	XMEM2.EXE	M1-UN-DP48	
AMIC	A49LF040T	XMEM2.EXE	M1-UN-DP48	
AMIC	A50FW040	XMEM2.EXE	M1-UN-DP48	
AMIC	A50FW040M	XMEM2.EXE	M1-UN-DP48	
AMIC	A50LPW040	XMEM2.EXE	M1-UN-DP48	
AMIC	A82DL1632TG-F	XA28F1.EXE	M1-UN-BG68	TOP-K5A3240-BG69
AMIC	A25L010	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L010A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L016	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L020	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L020A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L020B	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L020C	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L032	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L032(SOP16)	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L040	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L040A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L05PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L05PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L080	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L080A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L080B	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L10PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L10PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L16PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L16PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L20PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L20PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L40PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L40PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L42PT	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L42PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L512	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L512A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L80P	XSPROM.EXE	M1-UN-DP48	
AMIC	A25L82PU	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LQ16	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LQ32A	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LQ32B	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LQ64	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LQ64-xE	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LS080	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LS512	XSPROM.EXE	M1-UN-DP48	
AMIC	A25LTQ016	XSPROM.EXE	M1-UN-DP48	
AMIC	AP160(87C52)	XPGM51.EXE	M1-UN-DP48	
AMIC	AP180	XPGM51.EXE	M1-UN-DP48/PL44	
AMIC(KOERA)	AMI29LV160BT	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ANACHIP	AM93LC86	XSPROM.EXE	M1-UN-DP48	
ANACHIP	PA7540	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL18CV8	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL18CV8(DIP20)	XPLD2.EXE	M1-UN-DP48	ADP-18CV8-DIP20
ANACHIP	PEEL18CV8Z	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL18LV8Z	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22CV10A	XPLD2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ANACHIP	PEEL22CV10A+	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22CV10A++	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22CV10AZ	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22CV10AZ+	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22CV10AZ++	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22LV10AZ	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22LV10AZ+	XPLD2.EXE	M1-UN-DP48	
ANACHIP	PEEL22LV10AZ++	XPLD2.EXE	M1-UN-DP48	
ANALOG	ADE7169	XASIG.EXE	M1-UN-TQ64	
ANALOG	ADM1026	XASIG.EXE	M1-UN-DP48	ADP-ADM1026-Q48
ANALOG	ADM1065	XASIG.EXE	M1-UN-DP48	ADP-ADM106X-Q48
ANALOG	ADM1066	XASIG.EXE	M1-UN-DP48	ADP-ADM106X-Q48
ANALOG	ADUC812	XASIG.EXE	M1-UN-DP48	ADP-ADUC812-Q
ANALOG	ADUC814	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
ANALOG	ADUC831	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC834	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC841BCP62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC841BS62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC842BCP32-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC842BCPZ62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC842BS62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC842BS62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC843BS62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-Q/-QV2
ANALOG	ADUC845BS62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QV2
ANALOG	ADUC847BCP62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC847BCP62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC848BCP62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC848BCP62-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QFN
ANALOG	ADUC848BSZ32-5	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QV2
ANALOG	ADUC848BSZ62-3	XASIG.EXE	M1-UN-DP48	ADP-ADUC8XX-QV2
AOV	TVC201-03(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-Q48/-Q48V2
APLUS	AF27C010	XMEM1.EXE	M1-UN-DP48	
APLUS	AF27C040	XMEM1.EXE	M1-UN-DP48	
APLUS	AF24BC02	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC04	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC08	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC128	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC16	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC256	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC32	XSPROM.EXE	M1-UN-DP48	
APLUS	AF24BC64	XSPROM.EXE	M1-UN-DP48	
APLUS	AF25BC08	XSPROM.EXE	M1-UN-DP48	
APLUS	AF25BC128	XSPROM.EXE	M1-UN-DP48	
APLUS	AF25BC64	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC46(128*8)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC46(64*16)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC56(128*16)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC56(256*8)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC66(256*16)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC66(512*8)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC86(1024*16)	XSPROM.EXE	M1-UN-DP48	
APLUS	AF93BC86(2048*8)	XSPROM.EXE	M1-UN-DP48	
ART	AR50P11	XAMPU3.EXE	M1-UN-DP48	ADP-AR50P11-TQ
ASD	AE29F2008	XMEM2.EXE	M1-UN-DP48	
ASD	AE49F2008	XMEM2.EXE	M1-UN-DP48	
ASIX	AX22001	XAX220.EXE	M1-UN-DP48	ADP-AX220-QF128
ASLIC	AX87C60	XASIG.EXE	M1-UN-DP48	ADP-P87C234-Q
AT&T	ATT17128/F	XSPROM.EXE	M1-UN-DP48	
AT&T	ATT17128A	XSPROM.EXE	M1-UN-DP48	
AT&T	ATT1736/F	XSPROM.EXE	M1-UN-DP48	
AT&T	ATT1736A	XSPROM.EXE	M1-UN-DP48	
AT&T	ATT1765/F	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
AT&T	ATT1765A	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C02	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C02P	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C02S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C02W	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C04	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C04P	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C04S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C04W	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24C08	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC02	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC02P	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC02S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC02W	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC04	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC04P	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC04S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC04W	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC08	XSPROM.EXE	M1-UN-DP48	
ATC	ATC24LC16	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C46	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C46S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C56S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93C66S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC46	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC46S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC56(128*16)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC56(256*8)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC56S	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC66(256*16)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC66(512*8)	XSPROM.EXE	M1-UN-DP48	
ATC	ATC93LC66S	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT27BV010	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV020	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV040	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV1024	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV256	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV400(SO44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
ATMEL	AT27BV4096	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27BV512	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C010	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C010L	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C020	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C040	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C080	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C1024/L	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C128	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C2048	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C256	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C256R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C4096	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C512	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C512R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C513R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27C520	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27HC1024	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27HC256R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27HC64	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT27HC641	XBPPGM.EXE	M1-UN-DP48	
ATMEL	AT27HC641R	XBPPGM.EXE	M1-UN-DP48	
ATMEL	AT27HC64L	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV010/A	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV020/A	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV040/A	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV080	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV1024	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV256A	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV256R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV4096	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV512A	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV512R	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT27LV520	XMEM1.EXE	M1-UN-DP48	
ATMEL	AT28BV256	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28BV64	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28BV64B	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C16	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C17	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C256	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C64	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28C64B	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28HC256	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28HC64B	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28LV010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28MC020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT28MC040	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29BV010A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29BV020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29BV040A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C010A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C040A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C1024	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C1024(TSOP48)	XMEM2.EXE	M1-UN-TS48/M1-UN-TS48A	
ATMEL	AT29C256	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C257	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29C512	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV010A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV040A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV1024	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV256	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT29LV512	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT47BV163A-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BN1604T-T	XA28F1.EXE	M1-UN-TS56	
ATMEL	AT49BV001	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001AN	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001ANT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001AT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001N	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV001T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002AN	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002ANT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002AT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002N	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT49BV002NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV002T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV008AT-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49BV010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV040	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV040A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV040B	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV040T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV080-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49BV080T-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49BV080T-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49BV160-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV1604-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV160C-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV160CT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV160D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV160DT-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV160T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV161-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV1614-C	XA28F1.EXE	M1-UN-BG68	TOP-36VF160-BG48
ATMEL	AT49BV1614-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV1614A-C	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49BV1614A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV1614AT-C	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49BV1614T-C	XA28F1.EXE	M1-UN-BG68	TOP-36VF160-BG48
ATMEL	AT49BV1614T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV161T-C	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49BV161T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV162A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV162AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV163A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV163AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV163D-CU	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49BV163D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV163DT-CU	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49BV163DT-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV2048-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV2048A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320C-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320CT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320D-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV320D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV320DT-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV320T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV321-C	XA28F1.EXE	M1-UN-BG68	TOP-69LW3241-BG66
ATMEL	AT49BV321-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV3218T-C	XA28F1.EXE	M1-UN-BG68	TOP-69LW3241-BG66
ATMEL	AT49BV321T-C	XA28F1.EXE	M1-UN-BG68	TOP-69LW3241-BG66
ATMEL	AT49BV321T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV322A-C	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49BV322A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV322AT-C	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49BV322AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV322D-CU	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49BV322D-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV322D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV322DT-CU	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49BV322DT-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV4096-R	XA28F1.EXE	M1-UN-PS44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT49BV4096-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV4096A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV4096AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV512	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49BV640D-CU	XA28F1.EXE	M1-UN-BG68	TOP-49BV640D-BG48
ATMEL	AT49BV6416-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV6416T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV642D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV642DT-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49BV802A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV802AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV8192-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49BV8192-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV8192A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV8192AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49BV8192T-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49BV8192T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F001	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001AN	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001ANT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001AT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001N	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F001T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002AN	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002ANT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002AT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002N	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F002T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F040	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F040A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F080-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F080-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49F1024	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F1025	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F1604-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F1614-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F1614T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F2048-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F2048-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F4096-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F4096-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F4096A-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F4096A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F4096AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F512	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49F8011-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F8011T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F8192-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F8192-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F8192A-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F8192A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F8192AT-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F8192AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49F8192T-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49F8192T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT49HBV010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49HF010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49HLV010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LH002(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LH002(TSOP)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LH004(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LH004(TSOP)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LH00B4(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LL080(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LL080(TSOP)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV001	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV001N	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV001NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV001T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV002	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV002N	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV002NT	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV002T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV008A-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49LV010	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV020	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV040	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV040T	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV080-R	XA28F1.EXE	M1-UN-PS44	
ATMEL	AT49LV080-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
ATMEL	AT49LV1024	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV1024A	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV1025	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LV1614-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV1614A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV2048-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV320-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV320T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV321T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV321T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV4096-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV4096A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV8192-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV8192A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV8192AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LV8192T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49LW040(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LW040(TSOP)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LW080(PLCC)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49LW080(TSOP)	XMEM2.EXE	M1-UN-DP48	
ATMEL	AT49SV322A-CU	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49SV322A-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49SV322AT-CU	XA28F1.EXE	M1-UN-BG68	TOP-49BV322A-BG48
ATMEL	AT49SV322AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49SV322D-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT49SV802A-C	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49SV802A-CU	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ATMEL	AT49SV802A-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ATMEL	AT49SV802A-TU	XA28F1.EXE	M1-UN-TS48A/TS56	
ATMEL	AT52BR3248T-C	XA28F1.EXE	M1-UN-BG68	TOP-69LW3241-BG66
ATMEL	AT17C002	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C002A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C010	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C010A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C020	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C020A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C128	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT17C128A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C256A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C512A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C65	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17C65A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17F040	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17F040A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17F080	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17F080A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17F16A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV002	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV002A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV010	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV010A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV020	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV020A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV040	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV128	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV128A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV256A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV512A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV65	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17LV65A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17N002	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17N010	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17N040	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17N256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT17N512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT18F002	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
ATMEL	AT18F010	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
ATMEL	AT18F040	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
ATMEL	AT18F080	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
ATMEL	AT24C01	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C01A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C01B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C01B(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02B(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02C(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C02D	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04B(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C04C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C08	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C08A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C08B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C08C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C08D	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C1024	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C1024B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C128	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C128B	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT24C128C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C16	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C164	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C16A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C16B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C16B(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C16C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C21	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C256B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C256C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C32	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C32A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C32C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C32D	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C32D(SOT23)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C512B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C512C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C64	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C64A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C64B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C64C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24C64D	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24CM01	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24HC02B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24HC02C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24HC04B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT24RF08C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25010	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25010A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25010B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25020	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25020A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25020B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25040	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25040A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25040B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25080	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25080A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25080B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25128	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25128A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25128B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25160	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25160A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25256A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25256B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25320	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25320A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25320B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25640	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25640A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25640B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25BCM512B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25C01	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25C02	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25C04	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF021	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF041A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT25DF081	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF081A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF161	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF321	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF321(SOP16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF321A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF641	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25DF641(SOP16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F1024	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F1024A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F2048	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F4096	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F512A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25F512B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25FS010	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25FS040	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25HP256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25HP512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT25P1024(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF041	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF081	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF081A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF161	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF161A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF321(SOP16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26DF321(SOP8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT26F004	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT30TSE004	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT34C02	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT34C02C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45BCM021B(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D021(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D021(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D021(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D041(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D041(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D041(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D041A(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D081(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D081(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D161(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D161(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45D161(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011(TSSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011B(SOP8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011D-256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB011D-264	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021B(SOP28)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021B(SOP8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021B(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021D-256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021D-264	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021E-256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB021E-264	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041(SOP)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT45DB041(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041B(SON8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041B(SOP28)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041B(SOP8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041B(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041D-256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB041D-264	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081A(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081A(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081B(SON8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081B(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081B(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081D-256	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB081D-264	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161(PLCC)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161B(SON8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161B(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161B(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161D-512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161D-512(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161D-528	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161D-528(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161E-512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB161E-528	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321B(SOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321B(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321C(SON8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321C(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321D-512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321D-512(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321D-528	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB321D-528(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB642(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB642D-1024	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB642D-1024(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB642D-1056	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DB642D-1056(TSOP)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB001	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB002	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB002D-512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB002D-528	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB004	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB004D-512	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB004D-528	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB008D-1024	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT45DCB008D-1056	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT59C11(128x8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT59C11(64x16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0104C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0104CA	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0204C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0204CA	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0404C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0404CA	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0808C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC0808CA	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT88SC25616C	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46(128*8)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46A	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46B	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46D(128*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46D(64*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C46E	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C56A(128*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C56A(256*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C57(128*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C57(256*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66A(256*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66A(512*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66B(256*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C66B(512*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C86A(1024*16)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT93C86A(2048*8)	XSPROM.EXE	M1-UN-DP48	
ATMEL	AT32UC3A0128	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q144
ATMEL	AT32UC3A0256	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q144
ATMEL	AT32UC3A0512	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q144
ATMEL	AT32UC3A1256	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q100
ATMEL	AT32UC3A1512	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q100
ATMEL	AT32UC3A3256	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3A-Q144
ATMEL	AT32UC3B0128	XASIG.EXE	M1-AT32UC3B-ML64	
ATMEL	AT32UC3B0256	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3B-Q64
ATMEL	AT32UC3B0512	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3B-Q64
ATMEL	AT32UC3B064	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3B-Q64
ATMEL	AT32UC3B164	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3B-Q48
ATMEL	AT32UC3C0512C	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3C-Q144
ATMEL	AT32UC3C1512C	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3C-QF100
ATMEL	AT32UC3C164C	XASIG.EXE	M1-UN-DP48	ADP-AT32UC3C-QF100
ATMEL	AT87251G2D	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT87C5103(SSOP16)	XASIG.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
ATMEL	AT87C5103[24-PIN]	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT87C5111	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT87C5112(LQFP52)	XASIG.EXE	M1-UN-DP48	ADP-T87C5112-LQ
ATMEL	AT87C5112(PLCC48)	XASIG.EXE	M1-UN-DP48	ADP-T87C5112-PL
ATMEL	AT87C51RB2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87C51RC2	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT87C52X2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87C54X2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87C58X2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87F51	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87F51RC	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT87F52	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT87F55WD	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C1051	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C1051U	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C2051	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C2051X2	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C4051	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C51	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C5115(PLCC28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-PL
ATMEL	AT89C5115(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-Q
ATMEL	AT89C5115(SOP28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-S/-SV2
ATMEL	AT89C5130A(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-PLV2
ATMEL	AT89C5130A(QFN32)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-QFN

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT89C5130A(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-QV2
ATMEL	AT89C5131(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-PL/-PLV2
ATMEL	AT89C5131(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-Q/-QV2
ATMEL	AT89C5131(SOP28)	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
ATMEL	AT89C5131A(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-PLV2
ATMEL	AT89C5131A(QFN32)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-QFN
ATMEL	AT89C5131A(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-AT89C5131-QV2
ATMEL	AT89C5131A(SOP28)	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
ATMEL	AT89C5132(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-T89C51SND1-Q
ATMEL	AT89C51AC2(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	AT89C51AC2(TQFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	AT89C51AC3(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	AT89C51AC3(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC03-PL52
ATMEL	AT89C51AC3(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	AT89C51AC3(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC03-Q64
ATMEL	AT89C51CC01(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	AT89C51CC01(TQFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	AT89C51CC02(PLCC28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-PL
ATMEL	AT89C51CC02(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-Q
ATMEL	AT89C51CC02(SOP28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-S/-SV2
ATMEL	AT89C51CC03(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	AT89C51CC03(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC03-PL52
ATMEL	AT89C51CC03(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	AT89C51CC03(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC03-Q64
ATMEL	AT89C51ED2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51IC2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51ID2	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C51RB2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51RC	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89C51RC2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51RD2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51RE2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C51SND1(BGA81)	XASIG.EXE	M1-UN-DP48	ADP-T89C51SND1-BG
ATMEL	AT89C51SND1(PLCC84)	XASIG.EXE	M1-UN-DP48	ADP-T89C51SND1-PL
ATMEL	AT89C51SND1(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-T89C51SND1-Q
ATMEL	AT89C51SND2	XASIG.EXE	M1-UN-DP48	ADP-T89C51SND2-BG
ATMEL	AT89C52	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C55	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89C55WD	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LP2052	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP213	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP214	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP216	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP3240	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP4052	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP428	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP51	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP51ED2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LP51ID2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LP51RB2	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP51RC2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LP51RD2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LP52	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP6440	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LP828	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LS51	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LS52	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LS53	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LS8252	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89LV51	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LV52	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89LV55	XPGM52.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT89S2051	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89S4051	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89S51	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89S52	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89S52E	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89S53	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89S54	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89S58	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89S64	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT89S8252	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT89S8253	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	AT90CAN128(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	AT90CAN128(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90CAN128(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90CAN32(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90CAN32(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90CAN64(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90CAN64(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90LS2323	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90LS2333	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90LS2343	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90LS4433	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90LS4434	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90LS8535	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90PWM2	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90PWM2B	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90PWM3	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90PWM316	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90PWM3B	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S1200	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S1200A	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S2313	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S2323	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S2333	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S2343	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S4414	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S4433	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S4434	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S8515	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90S8535	XAVR.EXE	M1-UN-DP48	
ATMEL	AT90USB1286(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	AT90USB1286(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90USB1287(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	AT90USB1287(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90USB1287(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90USB162(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	AT90USB162(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	AT90USB646(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90USB646-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90USB647	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	AT90USB647(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	AT90USB82(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	AT91SAM7S128(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S128(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S128C(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S256(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S256(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S256B(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S256C(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S256D(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S256D(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S32(LQFP48)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S32-Q48/V2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	AT91SAM7S321(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S321(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S512(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S512(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S64(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S64(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S64B(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7S64B(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-MLF64
ATMEL	AT91SAM7S64C(LQFP64)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S64-Q64
ATMEL	AT91SAM7SE256(LQFP128)	XSAM.EXE	M1-UN-DP48	ADP-91SAMSE512-Q128
ATMEL	AT91SAM7SE32(LQFP128)	XSAM.EXE	M1-UN-DP48	ADP-91SAMSE512-Q128
ATMEL	AT91SAM7SE512(LQFP128)	XSAM.EXE	M1-UN-DP48	ADP-91SAMSE512-Q128
ATMEL	AT91SAM7X128(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	AT91SAM7X256B(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	AT91SAM7X256C(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	AT91SAM7X512(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	AT91SAM7XC128(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	AT91SAM7XC256(LQFP100)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7X-Q100
ATMEL	ATA6617	XAVR.EXE	M1-ATA661X-QN38	
ATMEL	ATMEGA128(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA128(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA128(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA1280	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA1281(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA1281V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA1284P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA1284P(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA1284P(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA128A(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA128L(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA128L(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA128L(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA128RFA1-ZU(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-MEGA128RFA-QN64
ATMEL	ATMEGA16	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA16(L)(QFP)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA161	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA161L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA162	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA162(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML44/A
ATMEL	ATMEGA162(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA162V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA163	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA163L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA164	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA164P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA164PA	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA164PV(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA165(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA165(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA165(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA165V(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA165V(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA165V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA168	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA168(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA168(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA168A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA168A(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA168P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA168P(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA168P(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA168PA	XAVR.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATMEGA168PA(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA168PA(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA168V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA168V(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA168V(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA169(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA169(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA169(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA169L(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA169P(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA169P(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA169P(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA169PV(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA169PV(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA169PV(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA169V(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA169V(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA169V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA16A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA16A(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA16A(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA16L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA16M1	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA16M1(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA16U4(MLF44)	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML44A
ATMEL	ATMEGA16U4(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA2560(BGA100)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA2560-BG100
ATMEL	ATMEGA2560(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA2561(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA2561(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA2561(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA32	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA32(L)(QFP)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA323	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA323L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA324	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA324A(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA324P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA324P(BGA49)	XAVR.EXE	M1-UN-BG68	TOP-ATMEGA324P-BG49
ATMEL	ATMEGA324P(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA324P(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA324PA	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA324PA(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA324PA(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA324PV	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA325(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA325(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA325(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA3250	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA3250P	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA3250V	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA325P(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA325V(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA325V(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA325V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA328	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA328(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA328P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA328P(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA328P(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA329(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA329(MLF64)*	XASIG.EXE	M1-UN-ML64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATMEGA3290P	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA3290V	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA329P(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA329V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA32A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA32A(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA32A(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA32L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA32M1	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA32M1(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA32U2(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA32U2(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA32U4(MLF44)	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML44A
ATMEL	ATMEGA32U4(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA32U4RC(MLF44)	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML44A
ATMEL	ATMEGA32U4RC(QFP44)	XAVR.EXE	M1-AVR-QF44	
ATMEL	ATMEGA406	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA406-Q48
ATMEL	ATMEGA48	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA48(MLF28)	XAVR.EXE	M1-UN-BG68	TOP-AVR-ML28
ATMEL	ATMEGA48(MLF28)*	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATMEGA48(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA48(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA48A(MLF28)	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATMEGA48P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA48P(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA48PA	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA48PA(MLF28)	XAVR.EXE	M1-UN-BG68	TOP-AVR-ML28
ATMEL	ATMEGA48PA(MLF28)*	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATMEGA48PA(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA48PA(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA48PV	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA48PV(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA48V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA48V(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA48V(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA64(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA64(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA64(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA640	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA644	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA644P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA644PA	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA644PA(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA644PV	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA644PV(MLF44)	XAVR.EXE	M1-UN-BG68/A	TOP-ATMEGA324-ML44/A
ATMEL	ATMEGA644V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA645(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA645(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA645(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA6450	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA6450V	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA645V(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA645V(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA645V(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA649(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA649(MLF64)*	XASIG.EXE	M1-UN-ML64	
ATMEL	ATMEGA649(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA6490	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-Q100
ATMEL	ATMEGA64A(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA64L	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA603-Q
ATMEL	ATMEGA64L(MLF64)	XASIG.EXE	M1-UN-DP48	ADP-ATMEGA128-MLF64
ATMEL	ATMEGA64L(MLF64)*	XASIG.EXE	M1-UN-ML64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATMEGA8	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA8515	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8515(PLCC44)	XAVR.EXE	M1-UN-PL44	
ATMEL	ATMEGA8515L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8515L(PLCC44)	XAVR.EXE	M1-UN-PL44	
ATMEL	ATMEGA8535	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8535L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA88A(MLF28)	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATMEGA88P	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88P(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA88PA	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88PA(MLF28)	XAVR.EXE	M1-UN-BG68	TOP-AVR-ML28
ATMEL	ATMEGA88PA(MLF28)*	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATMEGA88PA(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA88PA(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA88PV	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88PV(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA88V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA88V(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATMEGA88V(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA8A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8A(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATMEGA8L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATMEGA8L(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATSAM3S1AA(QFP48)	XSAM.EXE	M1-UN-DP48	ADP-91SAM7S32-Q48V2
ATMEL	ATSAM4S4BA(QFN64)	XSAM.EXE	M1-UN-DP48	ADP-ATSAM3-MLF64
ATMEL	ATTINY10	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY11	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY11L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY12	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY12L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY12V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY13	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY13(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY13A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY13A(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY13V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY15	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY15L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY1634	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY1634(MLF)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY167	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY167(SOP20)	XAVR.EXE	M1-UN-SO28	
ATMEL	ATTINY20	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY22L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY2313	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY2313(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY2313A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY2313V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY2313V(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY24	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY24(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY24A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY24A(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY24V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY25	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY25(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY25V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY25V(MLF20)	XAVR.EXE	M1-UN-ML20	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATTINY26	XAVR.EXE	M1-UN-DP48/SO28	
ATMEL	ATTINY26(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY261	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY261V(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY26L	XAVR.EXE	M1-UN-DP48/SO28	
ATMEL	ATTINY26L(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY28L	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY28V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY4	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY40	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY4313	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY4313(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY43U	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY43U(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY44	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY44(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY44A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY44A(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY44V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY44V(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY45	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY45V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY45V(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY461	XAVR.EXE	M1-UN-DP48/SO28	
ATMEL	ATTINY461(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY48	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY48(MLF28)	XAVR.EXE	M1-UN-BG68	TOP-AVR-ML28
ATMEL	ATTINY48(MLF28)*	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATTINY48(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY48(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATTINY48V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY5	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY828	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY828(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATTINY84	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY84(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY84V(MLF20)	XAVR.EXE	M1-UN-ML20	
ATMEL	ATTINY85	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY85V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY861	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY861A	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY861V	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY88	XAVR.EXE	M1-UN-DP48	
ATMEL	ATTINY88(MLF28)	XAVR.EXE	M1-UN-BG68	TOP-AVR-ML28
ATMEL	ATTINY88(MLF28)*	XAVR.EXE	M1-UN-BG68A	TOP-AVR-ML28A
ATMEL	ATTINY88(MLF32)	XAVR.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
ATMEL	ATTINY88(QFP32)	XAVR.EXE	M1-UN-QF32	
ATMEL	ATTINY9	XAVR.EXE	M1-UN-DP48	
ATMEL	ATXMEGA128A1-AU(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-Q100
ATMEL	ATXMEGA128A1-CU(BGA100)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-BG100
ATMEL	ATXMEGA128A1U-AU(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-Q100
ATMEL	ATXMEGA128A3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA128A3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA128A3U-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA128A3U-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA128A4U-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA128D3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA128D4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA16A4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA16A4-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A
ATMEL	ATXMEGA16A4U-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA16A4U-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATXMEGA16D4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA16D4-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A
ATMEL	ATXMEGA192A3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA192A3U-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA192A3U-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA256A3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA256A3BU-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64
ATMEL	ATXMEGA256A3U-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA256A3U-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA256D3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA256D3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA32A4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA32A4-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A
ATMEL	ATXMEGA32A4U-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA32A4U-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A
ATMEL	ATXMEGA32D4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA32D4-MH(QFN44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML44/-ML44A
ATMEL	ATXMEGA384D3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA64A1-AU(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-Q100
ATMEL	ATXMEGA64A3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA64A3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA64A3U-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA64A3U-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA64A4U-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	ATXMEGA64D3-AU(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF64
ATMEL	ATXMEGA64D3-MH(QFN64)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-ML64/-ML64A
ATMEL	ATXMEGA64D4-AU(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-XMEGA-QF44
ATMEL	T87C5101	XPGM52.EXE	M1-UN-DP48	
ATMEL	T89C5115(PLCC28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-PL
ATMEL	T89C5115(SOP28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-SI-SV2
ATMEL	T89C51AC2(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	T89C51AC2(QFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	T89C51CC01(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-PL
ATMEL	T89C51CC01(TQFP44)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC01-TQ
ATMEL	T89C51CC02(PLCC28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-PL
ATMEL	T89C51CC02(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-Q
ATMEL	T89C51CC02(SOP24)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-SV2
ATMEL	T89C51CC02(SOP28)	XASIG.EXE	M1-UN-DP48	ADP-89C51CC02-SI-SV2
ATMEL	T89C51IC2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	T89C51RB2	XPGM52.EXE	M1-UN-DP48	
ATMEL	T89C51RC2	XPGM52.EXE	M1-UN-DP48/PL44	
ATMEL	T89C51RD2	XPGM52.EXE	M1-UN-DP48	
ATMEL	TS87C51RD2	XPGM52.EXE	M1-UN-DP48	
ATMEL	TS87C51U2	XPGM52.EXE	M1-UN-DP48	
ATMEL	TS87C52X2	XPGM52.EXE	M1-UN-DP48	
ATMEL	TS87C54X2	XPGM52.EXE	M1-UN-DP48	
ATMEL	TS87C58X2	XPGM52.EXE	M1-UN-DP48	
ATMEL	AT94S05AL(BGA256)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-BG256
ATMEL	AT94S05AL(TQFP144)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-TQ144
ATMEL	AT94S10AL(BGA256)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-BG256
ATMEL	AT94S10AL(TQFP144)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-TQ144
ATMEL	AT94S40AL(BGA256)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-BG256
ATMEL	AT94S40AL(TQFP144)	XA94S.EXE	M1-UN-DP48	ADP-AT94SXX-TQ144
ATMEL	ATF1500A	XA1500.EXE	M1-UN-DP48	ADP-ATF1500-PL-Q
ATMEL	ATF1500ABV	XA1500.EXE	M1-UN-DP48	ADP-ATF1500-PL-Q
ATMEL	ATF1500AL	XA1500.EXE	M1-UN-DP48	ADP-ATF1500-PL-Q
ATMEL	ATF1502AS-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1502AS-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1502ASL-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1502ASL-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1502ASV-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1502ASV-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATF1502ASVL-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1502ASVL-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1502BE-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V3
ATMEL	ATF1504AS-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1504AS-J68	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL68V2
ATMEL	ATF1504AS-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1504AS-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1504AS-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1504AS-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1504ASL-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1504ASL-J68	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL68V2
ATMEL	ATF1504ASL-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1504ASL-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1504ASL-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1504ASL-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1504ASV-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1504ASV-J68	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL68V2
ATMEL	ATF1504ASV-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1504ASV-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1504ASV-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1504ASV-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1504ASVL-J44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL44V2
ATMEL	ATF1504ASVL-J68	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-PL68V2
ATMEL	ATF1504ASVL-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1504ASVL-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1504ASVL-Q44	XA1500.EXE	M1-UN-DP48	ADP-ATF1504-Q44V2/V3
ATMEL	ATF1504ASVL-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1504BE-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V3/V4
ATMEL	ATF1508AS-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1508AS-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1508AS-Q160	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q160V2
ATMEL	ATF1508AS-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1508ASL-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1508ASL-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1508ASL-Q160	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q160V2
ATMEL	ATF1508ASL-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1508ASV-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1508ASV-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1508ASV-Q160	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q160V2
ATMEL	ATF1508ASV-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1508ASVL-J84	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-PL84V2
ATMEL	ATF1508ASVL-Q100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q100V2
ATMEL	ATF1508ASVL-Q160	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-Q160V2
ATMEL	ATF1508ASVL-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V2/V3/V4
ATMEL	ATF1508BE-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V3/V4
ATMEL	ATF1508RE-T100	XA1500.EXE	M1-UN-DP48	ADP-ATF1508-V100V3/V4
ATMEL	ATF16LV8C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16LV8CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8B	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8B(16L8)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8B(16R4)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8B(16R6)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8B(16R8)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8BL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8BQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8BQL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF16V8CZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20L8)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20R4)	XPLD3.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATMEL	ATF20V8B(20R6)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20R8)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20RP4)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20RP6)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8B(20RP8)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8BL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8BQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8BQL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8CQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF20V8CZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10C(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CQ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CQZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CQZ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22LV10CZ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10B	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10B(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10BL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10BQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10BQL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10C(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CQ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CQZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CQZ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CZ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF22V10CZ(UES)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500C(V2500)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500C(V2500B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CL(V2500)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CL(V2500B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQ	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQ(V2500)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQ(V2500B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQL(V2500)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF2500CQL(V2500B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750C	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750C(V750)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750C(V750B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750C-SU	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750CEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750CL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750CL(V750)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750CL(V750B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVC	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVC(V750)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVC(V750B)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVCEXT	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVCL	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVCL(V750)	XPLD3.EXE	M1-UN-DP48	
ATMEL	ATF750LVCL(V750B)	XPLD3.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ATO Solution	ATO25Q16	XSPROM.EXE	M1-UN-DP48	
ATO Solution	ATO25Q32	XSPROM.EXE	M1-UN-DP48	
AUO	AUO11303K1	XACC2430.EXE	M1-UN-DP48	ADP-AUO11303-Q64
AUO	AUO11303V1	XACC2430.EXE	M1-UN-DP48	ADP-AUO11303-Q64
AUO	AUO11305K1	XACC2430.EXE	M1-UN-DP48	ADP-AUO11305-Q64
AUO	AUO12301K2	XACC2430.EXE	M1-UN-DP48	ADP-AUO12301-Q64
AUO	AUO12301V1	XACC2430.EXE	M1-UN-DP48	ADP-AUO12301-Q64V2
AUO	AUOG1422	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
AZOTEQ	IQS123	XAMPU3.EXE	M1-UN-DP48	ADP-IQS123-SOT
AZOTEQ	IQS221	XAMPU3.EXE	M1-UN-DP48	ADP-IQS221-MLF32
AZOTEQ	IQS240(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-IQS240-SO20
BELLING	BL24C16	XSPROM.EXE	M1-UN-DP48	
BMI	BM29F020	XMEM2.EXE	M1-UN-DP48	
BMI	BM29F040	XMEM2.EXE	M1-UN-DP48	
BMI	BM29F400B-TC	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
BMI	BM29F400T-TC	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
BMI	BM29FS020	XMEM2.EXE	M1-UN-DP48	
BMI	BM29FS040	XMEM2.EXE	M1-UN-DP48	
BMI	BM29LV010	XMEM2.EXE	M1-UN-DP48	
BMT	BM29LV160B-T	XA28F1.EXE	M1-UN-TS48A/TS56	
BMT	BM29LV160T-T	XA28F1.EXE	M1-UN-TS48A/TS56	
BergMicro	BG25Q16A	XSPROM.EXE	M1-UN-DP48	
BergMicro	BG25Q32AS	XSPROM.EXE	M1-UN-DP48	
BergMicro	BG25Q40A	XSPROM.EXE	M1-UN-DP48	
BergMicro	BG25Q80A	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT27256	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT27512	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT2764A	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT27C010	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT27C128A	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT27C210	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT27HC256L	XMEM1.EXE	M1-UN-DP48	
CATALYST	CAT28C16A	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28C256	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28C512	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28C64B	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28F001-B	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28F001-T	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28F002B	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
CATALYST	CAT28F002P-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
CATALYST	CAT28F002T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
CATALYST	CAT28F010	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28F020	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT28LV65P	XMEM2.EXE	M1-UN-DP48	
CATALYST	CAT24AA01(SOT23)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24AA02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24AA02(SOT23)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24AC128	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C01B	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C02(SOT23)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C021/022	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C023	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C03	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C04/I	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C041/042	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C043	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C08/I	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C081/082	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C083	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C128	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C16(SOT23)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CATALYST	CAT24C16/I	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C161/162	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C163	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C164	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C208	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C21	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C256	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C32	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C44	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24C64	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24FC02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24FC256	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24FC32A	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC01	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC03	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC04	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC08	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC128	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC16	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC256	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC32	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT24WC64	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25040	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25080	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25128	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25160	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25640	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C01	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C04	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C08	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C128	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C16	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C256	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C32	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT25C64	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT34C02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT34WC02	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT35C102(128*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT35C102(256*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT35C104(256*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT35C104(512*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT59C11/I(128x8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT59C11/I(64x16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT64LC10	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT64LC20	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT64LC40	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46A	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46AH	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46AI	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46B(128*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46B(64*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46BI(128*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46BI(64*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46H(128*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46H(64*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46I(128*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C46I(64*16)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CATALYST	CAT93C56I(128*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C56I(256*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C57(128*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C57(256*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93LC56(128*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93LC56(256*8)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93LC56I(128*16)	XSPROM.EXE	M1-UN-DP48	
CATALYST	CAT93LC56I(256*8)	XSPROM.EXE	M1-UN-DP48	
CERAMATE	24LLC02	XSPROM.EXE	M1-UN-DP48	
CFEON	EN27C010	XMEM1.EXE	M1-UN-DP48	
CFEON	EN27C512	XMEM1.EXE	M1-UN-DP48	
CFEON	EN29F001B	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F001NT	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F001T	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002ANB	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002ANT	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002CB	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002CNT	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002CT	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002NB	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F002NT	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F010	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F040	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F040A	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F080-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
CFEON	EN29F512	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29F800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29F800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29GA128H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GA128L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GA256H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GA256L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL064AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29GL064AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29GL064AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29GL064AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29GL064B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29GL064H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL064H-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29GL064L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL064L-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29GL064T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29GL128H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL128H-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29GL128L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL128L-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29GL256H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL256H-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29GL256L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
CFEON	EN29GL256L-ZP	XA28F1.EXE	M1-UN-TS56	
CFEON	EN29LV010	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29LV040	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29LV040A	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29LV160AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV160AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV160AT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CFEON	EN29LV160AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV160B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV160BB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV160BT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV160CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV160CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV160CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV160JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV160JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV160T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV320AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV320B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV320B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV320B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320BB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320BT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV320CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV320T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV320T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV320T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV400AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV400AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV400AT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV400AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV400B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV400B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV400JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV400JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV400T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV512	XMEM2.EXE	M1-UN-DP48	
CFEON	EN29LV640AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV640AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV640AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV640AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV640B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV640B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV640H-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV640H-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV640L-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV640T-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29LV640T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV641H-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV641L-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV800AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800BB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV800BB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CFEON	EN29LV800BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV800BT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV800BT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV800CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV800CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV800CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN29LV800CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29LV800JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29LV800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29PL032-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29PL032A-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29PL064-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29SL160B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL400B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL400B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL400B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
CFEON	EN29SL400T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL400T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29SL800B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL800B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN29SL800T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
CFEON	EN29SL800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
CFEON	EN39LV010	XMEM2.EXE	M1-UN-DP48	
CFEON	EN39SL160AL-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN39SL160L-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN39SL800-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
CFEON	EN71GL032xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN71GL064xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN71GL128xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN71PL032xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN71PL032xxA-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN71PL064xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
CFEON	EN25B05T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B10T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B16T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B20	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B20T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B32(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B40T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B64(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25B80T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25D16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25D80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F05	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F20	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F32(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F64	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25F80A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25LF05	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CFEON	EN25LF10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25LF16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25LF20	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25LF40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25M32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P05	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P20	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P32(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P64(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25P80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q128	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q128(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q16A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q32A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q32A(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q32B	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q32B(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q40A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q64	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q64(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q80A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25Q80B	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QA128	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QA16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QA256	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QA32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QA64	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QF256(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH128	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH128(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH128A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH16A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH256	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH256(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH32A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH64	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QH64(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25QM80A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S16T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S20	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S20A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S256(SOP16)	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S32	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S32T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S40A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S40T	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S64	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25S80	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CFEON	EN25S80A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25SA10	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25SF80	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25T16	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25T16A	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25T40	XSPROM.EXE	M1-UN-DP48	
CFEON	EN25T80	XSPROM.EXE	M1-UN-DP48	
CHIPSWINNER	CW24C16	XSPROM.EXE	M1-UN-DP48	
CHRONTEL	CH9904A	XSPROM.EXE	M1-UN-DP48	
CYPRESS	CY27C010	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27C256A	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27C512	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27H010	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27H256	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27H512	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY27L010	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY7C225A	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY7C245A	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY7C261	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY7C264	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY7C265	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY7C269	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY7C271	XMEM1.EXE	M1-UN-DP48	
CYPRESS	CY7C276	XBPPGM.EXE	M1-UN-DP48	ADP-7C276
CYPRESS	CY7C291	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY7C291A	XBPPGM.EXE	M1-UN-DP48	
CYPRESS	CY14B104NA	XMEM2.EXE	M1-UN-DP48	ADP-FM22L16-TS44
CYPRESS	CY3LV010	XSPROM.EXE	M1-UN-DP48	
CYPRESS	CY2071AF	XACY229X.EXE	M1-UN-DP48	ADP-CY2907-S
CYPRESS	CY2077FS	XACY229X.EXE	M1-UN-DP48	ADP-CY2077-S
CYPRESS	CY2077FZ	XACY229X.EXE	M1-UN-DP48	ADP-CY2077-TS
CYPRESS	CY22050F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(2-3)
CYPRESS	CY22150F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(2-3)
CYPRESS	CY22381F	XACY229X.EXE	M1-UN-DP48	ADP-CY25XXX-SV2(1-2)
CYPRESS	CY22392F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(1-2)
CYPRESS	CY22393F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(1-2)
CYPRESS	CY22394F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(1-2)
CYPRESS	CY22395F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(1-2)
CYPRESS	CY22800KFXI	XACY229X.EXE	M1-UN-DP48	ADP-CY22801-S
CYPRESS	CY22801F	XACY229X.EXE	M1-UN-DP48	ADP-CY22801-S
CYPRESS	CY2291F	XACY229X.EXE	M1-UN-DP48	ADP-CY2291F-S
CYPRESS	CY2292F	XACY229X.EXE	M1-UN-DP48	ADP-CY2292F-S
CYPRESS	CY2292FZ	XACY229X.EXE	M1-UN-DP48	ADP-CY2292F-SS
CYPRESS	CY25100FS	XACY229X.EXE	M1-UN-DP48	ADP-CY25XXX-SV2(2-3)
CYPRESS	CY25100SXCF	XACY229X.EXE	M1-UN-DP48	ADP-CY25XXX-SV2(2-3)
CYPRESS	CY25200F	XACY229X.EXE	M1-UN-DP48	ADP-CY22XXX-TSV2(2-3)
CYPRESS	CY25701	XACY229X.EXE	M1-UN-DP48	ADP-CY25701-L
CYPRESS	CY2907Fx14	XACY229X.EXE	M1-UN-DP48	ADP-CY2907-S
CYPRESS	CY2907Fx8	XACY229X.EXE	M1-UN-DP48	ADP-CY2907-S
CYPRESS	CY7C53120E2(SOP)	XACY7C.EXE	M1-UN-DP48	ADP-CY7C53120-SO32
CYPRESS	CY7C53120E2(TQFP)	XACY7C.EXE	M1-UN-DP48	ADP-7C53120-TQ44/TQ44A
CYPRESS	CY7C53120E2*(SOP)	XACY7C.EXE	AM1-CY7C53120-SO32	NONE
CYPRESS	CY7C53120E4(SOP)	XACY7C.EXE	M1-UN-DP48	ADP-CY7C53120-SO32
CYPRESS	CY7C53120E4(TQFP)	XACY7C.EXE	M1-UN-DP48	ADP-7C53120-TQ44/TQ44A
CYPRESS	CY7C53120E4*(SOP)	XACY7C.EXE	AM1-CY7C53120-SO32	NONE
CYPRESS	CY7C53120L8(SOP)	XACY7C.EXE	M1-UN-DP48	ADP-CY7C53120-SO32
CYPRESS	CY7C53120L8(TQFP)	XACY7C.EXE	M1-UN-DP48	ADP-7C53120-TQ44/TQ44A
CYPRESS	CY7C60123-PVXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63923-SS48
CYPRESS	CY7C60123-PVXC*	XACY8C2X.EXE	AM1-CY8C2XXXX-SS48	
CYPRESS	CY7C60123-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX
CYPRESS	CY7C60223-QXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63823-QS24
CYPRESS	CY7C60223-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX-S24

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY7C60323-LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY7C60323-PVXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY7C60333-LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY7C60413-16LKXC	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY7C60445-32LQXC	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY7C60455-48LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY7C60456-48LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY7C63000-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63000A-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63000A-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63001-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63001A-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63001A-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63001C-PXC	XMPU6.EXE	M1-UN-DP48	ADP-CY63410
CYPRESS	CY7C63001C-SXC	XMPU6.EXE	M1-UN-DP48	ADP-CY63100-S
CYPRESS	CY7C63001C-SXC*	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63100-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63100A-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63101-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63101-WC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63101A-QC	XMPU6.EXE	M1-UN-DP48	CNV-QSOP-DIP28B
CYPRESS	CY7C63101A-WC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63101C-QXC	XMPU6.EXE	M1-UN-DP48	CNV-QSOP-DIP28B
CYPRESS	CY7C63201-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63221A-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63231-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63231A-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63231A-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63231A-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63310-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX
CYPRESS	CY7C63310-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63XXX-S16
CYPRESS	CY7C63413-PVC	XMPU6.EXE	M1-UN-DP48	ADP-CY63410-S48
CYPRESS	CY7C63413-WC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63413-WVC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63413C-PVXC	XMPU6.EXE	M1-UN-DP48	ADP-CY63410-S48
CYPRESS	CY7C63413C-PVXC*	XMPU6.EXE	M1-UN-SS48	
CYPRESS	CY7C63413C-PXC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63513-WVC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63513C-PVXC	XMPU6.EXE	M1-UN-DP48	ADP-CY63410-S48
CYPRESS	CY7C63613-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63613C-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63723-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63723-PXC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63723-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63723-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63723C-PXC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63723C-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63743-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63743-PXC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63743-QXC	XMPU6.EXE	M1-UN-DP48	CNV-QSOP-DIP28B
CYPRESS	CY7C63743-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63743-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63743C-PXC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C63743C-QXC	XMPU6.EXE	M1-UN-DP48	CNV-QSOP-DIP28B
CYPRESS	CY7C63743C-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C63801-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX
CYPRESS	CY7C63801-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63XXX-S16
CYPRESS	CY7C63803-LQXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63803-MLF24
CYPRESS	CY7C63803-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63XXX-S16
CYPRESS	CY7C63813-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX
CYPRESS	CY7C63813-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX-S24
CYPRESS	CY7C63823-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY7C63823-QXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63823-QS24
CYPRESS	CY7C63823-SXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX-S24
CYPRESS	CY7C63833-LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63XXX-MLF32
CYPRESS	CY7C63833-LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63XXX-MLF32
CYPRESS	CY7C63903-PVXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63903-SS28
CYPRESS	CY7C63913-PXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C638XX
CYPRESS	CY7C63923-PVXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C63923-SS48
CYPRESS	CY7C64013-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C64013-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C64013A-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C64013C-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C64113-PVC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C64113-WVC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C64113C-PVXC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C64215-28PVXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C64215-SS28
CYPRESS	CY7C64215-56LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY7C64215-56LFXC*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C24794-MLF56
CYPRESS	CY7C64215-56LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY7C64315-16LKXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6431X-MLF16
CYPRESS	CY7C64316-16LKXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6431X-MLF16
CYPRESS	CY7C64343-32LQXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6434X-QFN32
CYPRESS	CY7C64345-32LQXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6434X-QFN32
CYPRESS	CY7C64355-48LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY7C64356-48LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY7C65013-PVC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C65013-WVC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C65113-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C65113-SC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C65113A-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C65113C-SXC	XMPU6.EXE	M1-UN-SO28	
CYPRESS	CY7C66011-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C66013-PC	XMPU6.EXE	M1-UN-DP48	
CYPRESS	CY7C66013-PVC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C66113-PVC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C66113C-LFXC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66113-ML56
CYPRESS	CY7C66113C-PVXC	XMPU6.EXE	M1-UN-DP48	ADP-CY7C66XX-SS
CYPRESS	CY7C69356-48LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8C20055-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C20055-S16
CYPRESS	CY8C20110-LDX2I	XCY8C2X.EXE	M1-UN-ML16	
CYPRESS	CY8C20110-SX2I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C20140-LDX2I	XCY8C2X.EXE	M1-UN-ML16	
CYPRESS	CY8C20140-SX2I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C20142-SX1I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C20160-LDX2I	XCY8C2X.EXE	M1-UN-ML16	
CYPRESS	CY8C20160-SX2I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C20180-LDX2I	XCY8C2X.EXE	M1-UN-ML16	
CYPRESS	CY8C20180-SX2I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C201A0-LDX2I	XCY8C2X.EXE	M1-UN-ML16	
CYPRESS	CY8C201A0-SX2I	XCY8C2X.EXE	M1-UN-DP48	
CYPRESS	CY8C20224-12LKXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C20234-12LKXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C20234-12SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C20234-S16
CYPRESS	CY8C20236A-24LKXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C20246A-24LKXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C20247S-24LKXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C20324-12LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20334-12LFXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20334-12LKXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20334-12LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20336-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20336A-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20346A-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY8C20366A-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C20424-12LKXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20424-12LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20434-12LKXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20434-12LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20436A-24LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20446-24LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20466-24LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20466A-24LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C20496A-24LQXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6434X-QFN32
CYPRESS	CY8C20524-12PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C20534-12PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C20536A-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C20546A-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C20566A-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C20636A-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8C20646A-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8C20666A-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8C21123-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S8
CYPRESS	CY8C21223-24LFXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8C21223-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S16
CYPRESS	CY8C21234-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S16
CYPRESS	CY8C21323-24LFXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8C21323-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C21334-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C21345-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S28
CYPRESS	CY8C21434-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C21434-24LKXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C21434-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C21534-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C21634-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C21634-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C22213-24LFI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C22213-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C22213-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S20
CYPRESS	CY8C22345-24PVXA	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C22345-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S28
CYPRESS	CY8C23433-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C23533-24LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8C24123-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24123-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S8
CYPRESS	CY8C24123A-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24123A-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S8
CYPRESS	CY8C24223-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24223-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C24223-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C24223A-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C24223A-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24223A-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C24423-24LFI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C24423-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24423-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C24423-24PVI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C24423-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C24423A-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C24423A-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8C24423A-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C24423A-24PVXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C24423A-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C24423A-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C24633-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C24794-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CXXXX-MLF56

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY8C24794-24LFXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C24794-MLF56
CYPRESS	CY8C24794-24LQXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C24X94-QFN56
CYPRESS	CY8C24794-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXXX-MLF56
CYPRESS	CY8C24894-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXXX-MLF56
CYPRESS	CY8C24894-24LFXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C24794-MLF56
CYPRESS	CY8C24894-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXXX-MLF56
CYPRESS	CY8C25122-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C25122-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26233-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26233-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C26233-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C26443-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26233-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C26233-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C26443-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26443-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C26443-24PVI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C26443-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C26443-24PVXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C26443-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26443-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C26443-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C26643-24AI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C26643-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C26643-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C26643-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C26643-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C27143-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C27143-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C27243-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C27243-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-SS
CYPRESS	CY8C27243-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C27243-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26233-S
CYPRESS	CY8C27443-24PI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C27443-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C27443-24PVI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C27443-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C27443-24PVXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C27443-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX
CYPRESS	CY8C27443-24SI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C27443-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C27543-24AI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C27543-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C27643-24LFI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C27643-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C27643-24PVI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C27643-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C28243-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28403-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28413-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28433-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28445-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28452-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C28513-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C28533-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C28545-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C28623-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C28643-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C28645-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C29466-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8C29466-24PVXI*	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-SS
CYPRESS	CY8C29466-24PXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26XXX

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY8C29466-24SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26443-S
CYPRESS	CY8C29566-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-Q44
CYPRESS	CY8C29666-24LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C29666-24LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C27643-MLF48
CYPRESS	CY8C29666-24PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8C29666-24PVXI*	XACY8C2X.EXE	AM1-CY8C2XXXX-SS48	
CYPRESS	CY8C29866-24AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C29866-Q100
CYPRESS	CY8C3244AXI-153	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3245AXI-158	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3245AXI-166	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3245LTI-139	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3245LTI-139*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3245LTI-144	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3245LTI-144*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3245LTI-163	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3246AXI-131	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3246AXI-138	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3246LTI-125	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3246LTI-125*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3246LTI-128	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3246LTI-149	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3246LTI-162	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3246LTI-162*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3444LTI-110	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3444LTI-119	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3444LTI-119*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3445AXI-104	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3445AXI-108	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3445LTI-078	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3445LTI-079	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3445LTI-081	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3446AXI-099	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3446AXI-105	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3446LTI-073	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3446LTI-073*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3446LTI-074	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3446LTI-083	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3446LTI-083*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3446PVI-076	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3XXX-SS48
CYPRESS	CY8C3665AXI-198	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3665LTI-044	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3665LTI-199	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3666AXI-036	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666AXI-037	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666AXI-038	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666AXI-052	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666AXI-200	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666AXI-202	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3666LTI-027	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3666LTI-050	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3666LTI-050*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3666LTI-201	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3666LTI-203	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3865AXI-019	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY8C3865AXI-204	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3865LTI-205	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3866AXA-040	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866AXI-035	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866AXI-039	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866AXI-040	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866AXI-206	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866AXI-208	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C3866LTI-030	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3866LTI-067	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3866LTI-067*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3866LTI-068	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8C3866LTI-068*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8C3866LTI-207	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3866LTI-209	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C3866PVI-021	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3XXX-SS48
CYPRESS	CY8C4013SXI-400	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO8
CYPRESS	CY8C4013SXI-410	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO8
CYPRESS	CY8C4013SXI-411	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO16
CYPRESS	CY8C4014SXI-411	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO16
CYPRESS	CY8C4014SXI-420	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO8
CYPRESS	CY8C4014SXI-421	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C40XX-SO16
CYPRESS	CY8C4124LQI-443	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-QN40
CYPRESS	CY8C4125AXI-483	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-QF44
CYPRESS	CY8C4245AXI-018	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-QF44
CYPRESS	CY8C4245AXI-483	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-QF44
CYPRESS	CY8C4245LQI-483	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-QN40
CYPRESS	CY8C4245PVI-482	XCY8C4X.EXE	M1-UN-DP48	ADP-CY8C4245-SS28
CYPRESS	CY8C5246AXI-054	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5267AXI-LP051	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5268AXI-LP047	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5268LTI-LP030	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5466AXI-064	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5467AXI-LP108	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5467LTI-LP003	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5468AXI-LP106	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5468LTI-LP026	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5568AXI-060	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5588LTI-114	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5666AXI-LP004	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5666LTI-LP005	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5667AXI-LP006	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5667AXI-LP040	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5667LTI-LP009	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5668AXI-LP010	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5668AXI-LP013	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5668AXI-LP034	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5668LTI-LP014	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5866AXI-LP020	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5866AXI-LP021	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5866LTI-LP022	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5867AXI-LP024	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5867LTI-LP025	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5867LTI-LP028	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5868AXI-LP032	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5868AXI-LP035	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C5868LTI-LP038	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5868LTI-LP039	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8C5888AXI-LP061	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8C3X-QF100
CYPRESS	CY8C9560-24AXI	XACY8C9X.EXE	M1-UN-DP48	ADP-CY8C9560-Q100
CYPRESS	CY8C9560A-24AXI	XACY8C9X.EXE	M1-UN-DP48	ADP-CY8C9560-Q100
CYPRESS	CY8CLEDD01D01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLEDD0XXXX-MLF56

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CY8CLED02-8SXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-S8
CYPRESS	CY8CLED02D01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED03D01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED03D02-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED03G01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED04D01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED04D02-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED04G01-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CLED0XXXX-MLF56
CYPRESS	CY8CLED08-28PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8CLED08-48PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8CLED16-28PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8CLED16P01-28PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8CLED16P01-48LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-MLF48
CYPRESS	CY8CMBR2110-24LQXI	XACY8C9X.EXE	M1-UN-DP48	ADP-CY8CMBR2110-QFN32
CYPRESS	CY8CNP102B-AXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CNP102-Q100
CYPRESS	CY8CPLC20-28PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-SS28
CYPRESS	CY8CPLC20-48LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-MLF48
CYPRESS	CY8CTMA120-56LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY8CTMA140-48LQI-01	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA3XXXQ-QFN48
CYPRESS	CY8CTMA300-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA30XX-QFN48/V2
CYPRESS	CY8CTMA300E-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA30XX-QFN48/V2
CYPRESS	CY8CTMA301D-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA30XX-QFN48/V2
CYPRESS	CY8CTMA301E-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA30XX-QFN48/V2
CYPRESS	CY8CTMA340-48LQI-01	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA3XXXQ-QFN48
CYPRESS	CY8CTMA340-48LQI-09	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA3XXXQ-QFN48
CYPRESS	CY8CTMA375-LQI-00	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA3XXXQ-QFN48
CYPRESS	CY8CTMA375-LQI-02	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA3XXXQ-QFN48
CYPRESS	CY8CTMA375-LTI-00	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTMA30XX-QFN48V2
CYPRESS	CY8CTMA395-LTI-00	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN68
CYPRESS	CY8CTMA395-LTI-01	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48
CYPRESS	CY8CTMA395-LTI-01*	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA395-QN48V2
CYPRESS	CY8CTMA445-48LQI	XCY8C3X.EXE	M1-UN-DP48	ADP-TMA5XX-QN48
CYPRESS	CY8CTMA461-48LQI	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA4XX-QN48
CYPRESS	CY8CTMA463-48LQI	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA4XX-QN48
CYPRESS	CY8CTMA500-48LQI	XCY8C3X.EXE	M1-UN-DP48	ADP-TMA5XX-QN48
CYPRESS	CY8CTMA568-70BUI58	XCY8C3X.EXE	M1-UN-DP48	ADP-CYTM568-BG70
CYPRESS	CY8CTMA884LTI-13	XCY8C3X.EXE	M1-UN-DP48	ADP-CY8CTMA884L-QN88
CYPRESS	CY8CTMG110-32LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8CTMG120-56LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY8CTMG200-16LGXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8CTMG200-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8CTMG200-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8CTMG200A-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CY8CTMG200A-48PVXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C26643-SS
CYPRESS	CY8CTMG240-LQI-01	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8CTST110-32LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8C2XXXX-MLF32
CYPRESS	CY8CTST120-56LFXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY8CTST120-56LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY8CTXXXX-MLF56
CYPRESS	CY8CTST200-16LGXI	XACY8C2X.EXE	M1-CY8C20234-ML16	
CYPRESS	CY8CTST200-24LQXI	XACY8C2X.EXE	M1-CY8C20334-ML24	
CYPRESS	CY8CTST200-32LQXI	XACY8C2X.EXE	M1-CY8C2XXXX-ML32A/B	
CYPRESS	CY8CTST200-48LTXI	XACY8C2X.EXE	M1-UN-DP48	ADP-CY7C6045X-MLF48
CYPRESS	CYONS2000-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYONS2001-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYONS2100-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYONS2101-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYONS2110-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYONSFN2051-LBXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYONS2XXX-PQFN42
CYPRESS	CYRF69103-40LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYRF69XXX-MLF40
CYPRESS	CYRF69213-40LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYRF69XXX-MLF40
CYPRESS	CYRF69213-40LTXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYRF69XXX-MLF40
CYPRESS	CYTMA445-48LQI	XCY8C3X.EXE	M1-UN-DP48	ADP-TMA5XX-QN48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	CYWUSB6953-48LFXC	XACY8C2X.EXE	M1-UN-DP48	ADP-CYWUSB6953-MLF48
CYPRESS	CY37032P44	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL44/-Q44
CYPRESS	CY37032VP44	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL44/-Q44
CYPRESS	CY37064P100	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-Q100
CYPRESS	CY37064P44	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL44/-Q44
CYPRESS	CY37064P84	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL84
CYPRESS	CY37064VP100	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-Q100
CYPRESS	CY37064VP44	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL44/-Q44
CYPRESS	CY37064VP84	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL84
CYPRESS	CY37128P100	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-Q100
CYPRESS	CY37128P160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160
CYPRESS	CY37128P84	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL84
CYPRESS	CY37128VP100	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-Q100
CYPRESS	CY37128VP160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160
CYPRESS	CY37128VP84	XACY37X.EXE	M1-UN-DP48	ADP-CY37064-PL84
CYPRESS	CY37192P160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160
CYPRESS	CY37192VP160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160
CYPRESS	CY37256P160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160/-CY37XX-CQ160
CYPRESS	CY37256P208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37256P256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37256VP160	XACY37X.EXE	M1-UN-DP48	ADP-CY37192-Q160/-CY37XX-CQ160
CYPRESS	CY37256VP208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37256VP256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37384P208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37384P256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37384VP208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37384VP256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37512P208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37512P256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37512P352	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG352
CYPRESS	CY37512VP208	XACY37X.EXE	M1-UN-DP48	ADP-CY37256-Q208
CYPRESS	CY37512VP256	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG256
CYPRESS	CY37512VP352	XACY37X.EXE	M1-UN-DP48	ADP-CY37XX-BG352
CYPRESS	CY7C341-XXHC	XAMAX.EXE	M1-UN-DP48	ADP-MAX50E
CYPRESS	CY7C341-XXJC	XAMAX.EXE	M1-UN-DP48	ADP-MAX50E
CYPRESS	CY7C341-XXRMB	XAMAX.EXE	M1-UN-DP48	ADP-EPM5192-PG
CYPRESS	CY7C342-XXHC	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C
CYPRESS	CY7C342-XXHMB	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C
CYPRESS	CY7C342-XXRMB	XAMAX.EXE	M1-UN-DP48	ADP-MAX50C-PG
CYPRESS	CY7C342B-XXHC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5128A-PL
CYPRESS	CY7C342B-XXJC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5128A-PL
CYPRESS	CY7C342B-XXRI	XAMAX.EXE	M1-UN-DP48	ADP-EPM5128A-PG
CYPRESS	CY7C343-XXHC	XAMAX.EXE	M1-UN-DP48	ADP-MAX50B
CYPRESS	CY7C343B-XXJC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5064-PL44
CYPRESS	CY7C346-XXHC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PL
CYPRESS	CY7C346-XXRMB	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130-PG
CYPRESS	CY7C346B-XXNC	XAMAX.EXE	M1-UN-DP48	ADP-EPM5130A-Q
CYPRESS	CY7C371 (PLCC44)	XA7C37X.EXE	M1-UN-DP48	ADP-7C371
CYPRESS	CY7C371i(PLCC44)	XA7C37X.EXE	M1-UN-DP48	ADP-7C371
CYPRESS	CY7C371i(TQFP44)	XA7C37X.EXE	M1-UN-DP48	ADP-7C371-Q
CYPRESS	CY7C372 (PLCC44)	XA7C37X.EXE	M1-UN-DP48	ADP-7C371
CYPRESS	CY7C373 (PLCC84)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-PL
CYPRESS	CY7C374 (PGA84)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-PG
CYPRESS	CY7C374 (PLCC84)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-PL
CYPRESS	CY7C374 (QFP100)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-Q
CYPRESS	CY7C374i(PGA84)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-PG
CYPRESS	CY7C374i(PLCC84)	XA7C37X.EXE	M1-UN-DP48	ADP-7C374-PL
CYPRESS	CY7C375 (PGA160)	XA7C37X.EXE	M1-UN-DP48	ADP-7C375-PG
CYPRESS	CY7C375 (QFP160)	XA7C37X.EXE	M1-UN-DP48	ADP-7C375-Q
CYPRESS	CY7C375i(PGA160)	XA7C37X.EXE	M1-UN-DP48	ADP-7C375-PG
CYPRESS	PALC22V10D	XPLD5.EXE	M1-UN-DP48	
CYPRESS	PALCE16V8	XPLD5.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
CYPRESS	PALCE22V10	XPLD5.EXE	M1-UN-DP48	
CYROD	CRD89C4051	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89C51	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89C512RD	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AA	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AA1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AB1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AB1TA	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AB1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AC1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AD	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AD1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51AR1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51R	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89C51RA	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RA2	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RB2	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RC	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RC1T	XPGM52.EXE	M1-UN-TQ64	
CYROD	CRD89C51RD	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89C51RD1T	XPGM52.EXE	M1-UN-TQ64	
CYROD	CRD89C51RE	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L4051	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89L51	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89L51AA1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AB1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AB1TA	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AB1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AC1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AD	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AD1T	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51AR1TB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51R	XPGM52.EXE	M1-UN-DP48	
CYROD	CRD89L51RA	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RA2	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RB	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RB2	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RC	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RC1T	XPGM52.EXE	M1-UN-TQ64	
CYROD	CRD89L51RD	XPGM52.EXE	M1-UN-DP48/PL44	
CYROD	CRD89L51RD1T	XPGM52.EXE	M1-UN-TQ64	
DALLAS	DS1216B(8k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216C(32k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216C(8k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216D(128k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216D(32k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216E(32k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1216E(8k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1220Y/AB	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1225Y/AB/AD	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1230Y/AB	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1235Y/AB	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1243Y	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1244Y	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1245Y/AB	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1286	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS12887	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS12C887	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1386(32k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1386(8k*8)	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1387	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
DALLAS	DS1630Y	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1642	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1643	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1644	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1646	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1687-5	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS17287	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1742	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1742W	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1743	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1744	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1744W	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1746	XMEM2.EXE	M1-UN-DP48	
DALLAS	DS1620	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2401	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2430	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2430A	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2431	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2433	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS24B33	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2501(SOT23)	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2502	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2502(SOT23)	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS2506	XDS2502.EXE	M1-UN-DP48	
DALLAS	DS1086L	X966X.EXE	M1-UN-DP48	CNV-MSOP-DIP8
DALLAS	DS87C520	XPGM51.EXE	M1-UN-DP48	
DALLAS	DS87C530(PLCC52)	XASIG.EXE	M1-UN-DP48	ADP-530-PL
DALLAS	DS87C530(QFP52)	XASIG.EXE	M1-UN-DP48	ADP-530-Q
DALLAS	DS87C550	XASIG.EXE	M1-UN-DP48	ADP-552
DALLAS	DS89C420 (Revision A)	XPGM51.EXE	M1-UN-DP48	
DALLAS	MAX9660	X966X.EXE	M1-UN-DP48	CNV-TDFN-DIP8
DALLAS	MAX9667	X966X.EXE	M1-UN-DP48	CNV-MLF20-HT82B40R
DALLAS	MAX9668	X966X.EXE	M1-UN-DP48	CNV-MLF20-HT82B40R
DALLAS	MAX9669	X966X.EXE	M1-UN-QN28	
DALLAS	MAX9674	X966X.EXE	M1-UN-QN28	
DALLAS	MAX9679	X966X.EXE	M1-UN-DP48	CNV-QFN-DIP24
DEUTRON	P439LV010	XMEM2.EXE	M1-UN-DP48	
DEUTRON	P439LV040	XMEM2.EXE	M1-UN-DP48	
DEUTRON	P439LV088-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
DEUTRON	P439LV800-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
DEUTRON	AC25LV010	XSPROM.EXE	M1-UN-DP48	
DEUTRON	AC25LV512	XSPROM.EXE	M1-UN-DP48	
DREAM	SAM3416	XACC2430.EXE	M1-UN-DP48	ADP-SAM3416-Q128
DREAM	SAM3516	XACC2430.EXE	M1-UN-DP48	ADP-SAM3516-Q144
DREAM	SAM3703	XACC2430.EXE	M1-UN-DP48	ADP-SAM3703-Q80
DREAM	SAM3716	XACC2430.EXE	M1-UN-DP48	ADP-SAM3716-Q128
DREAM	SAM3816	XACC2430.EXE	M1-UN-DP48	ADP-SAM3816-Q144
Dragon Chip	DC6688F24SAT	XSPROM.EXE	M1-UN-DP48	
DynaColor	D16F51P	XPGM52.EXE	M1-UN-DP48	
DynaColor	D16F54AD	XPGM52.EXE	M1-UN-DP48	
DynaColor	D16F54AL	XPGM52.EXE	M1-UN-DP48	
DynaColor	D16F78BE	XPGM52.EXE	M1-UN-DP48	
DynaColor	D16F78BL	XPGM52.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C02	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C02A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C04	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C04A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C16	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C16A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C32	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC-FT24C32A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C02A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	BausteinTyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
E-CMOS	EC24C04A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C08A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C128A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C16A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C256A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C32A	XSPROM.EXE	M1-UN-DP48	
E-CMOS	EC24C64A	XSPROM.EXE	M1-UN-DP48	
ECHELON	FT3120(SOP)	XACY7C.EXE	M1-UN-DP48	ADP-CY7C53120-SO32
ECHELON	FT3120(TQFP)	XACY7C.EXE	M1-UN-DP48	ADP-7C53120-TQ44/TQ44A
ECHELON	PL3120-E4T10(TSSOP)	XACY7C.EXE	M1-UN-DP48	ADP-PL3120-TS
ECHELON	PL3170-E4T10(TSSOP)	XACY7C.EXE	M1-UN-DP48	ADP-PL3120-TS
EFST	F49B002UA	XMEM2.EXE	M1-UN-DP48	
EFST	F49L004BA	XMEM2.EXE	M1-UN-DP48	
EFST	F49L040A	XMEM2.EXE	M1-UN-DP48	
EFST	F49L400BA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EFST	F49L400UA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EFST	F49L800BA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EFST	F49L800UA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EFST	F25L004A	XSPROM.EXE	M1-UN-DP48	
EMC	EM39LV010	XMEM2.EXE	M1-UN-DP48	
EMC	EM39LV040	XMEM2.EXE	M1-UN-DP48	
EMC	EM39LV088	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EMC	EM39LV800	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EMC	EM25LV010	XSPROM.EXE	M1-UN-DP48	
EMC	EM25LV512	XSPROM.EXE	M1-UN-DP48	
EMC	EM78P153S-N	XELAN.EXE	M1-UN-DP48	CNV-SOP-NDIP16E
EMC	EM78P153S-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P156E-LAS	XELAN.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
EMC	EM78P156E-LKM	XELAN.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
EMC	EM78P156E-LM	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P156E-LP	XELAN.EXE	M1-UN-DP48	
EMC	EM78P156N-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P156N-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P257A-KM	XELAN.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
EMC	EM78P257A-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P257A-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P257B-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P257B-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P447NA-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P447NA-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P447NA-S	XELAN.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
EMC	EM78P447NB-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P447NB-WM	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP40
EMC	EM78P447SA-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P447SA-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P447SA-S	XELAN.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
EMC	EM78P447SB-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P447SB-WM	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP40
EMC	EM78P451-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P451S-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P458A-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMC	EM78P458A-P	XELAN.EXE	M1-UN-DP48	
EMC	EM78P459A-K	XELAN.EXE	M1-UN-DP48	
EMC	EM78P459A-M	XELAN.EXE	M1-UN-DP48	CNV-SOP-DIP28A
EMEMORY	EO064K8FAL2	XAEP42.EXE	M1-UN-TS48	
EMTC	EM27SL512AU	XMEM1.EXE	M1-UN-DP48	
EMTC	EO032K8FA3T35LA	XAEP42.EXE	M1-UN-TS48	
EMTC	eM29SF002AB	XMEM2.EXE	M1-UN-DP48	
EMTC	eM29SF002AT	XMEM2.EXE	M1-UN-DP48	
EMTC	eM29SF002NAB	XMEM2.EXE	M1-UN-DP48	
EMTC	eM29SF002NAT	XMEM2.EXE	M1-UN-DP48	
EMTC	eM29SF020AU	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EMTC	eM29SF020NAU	XMEM2.EXE	M1-UN-DP48	
EMTC	eM24C02	XSPROM.EXE	M1-UN-DP48	
EMTC	eM24C04	XSPROM.EXE	M1-UN-DP48	
EMTC	eM24C08	XSPROM.EXE	M1-UN-DP48	
EMTC	eM24C16	XSPROM.EXE	M1-UN-DP48	
EMTC	eM25SL512EU	XSPROM.EXE	M1-UN-DP48	
ENE	KB9010	XACC2430.EXE	M1-UN-DP48	ADP-KB901X-Q128
EON	EN27C010	XMEM1.EXE	M1-UN-DP48	
EON	EN27C512	XMEM1.EXE	M1-UN-DP48	
EON	EN29F001B	XMEM2.EXE	M1-UN-DP48	
EON	EN29F001NT	XMEM2.EXE	M1-UN-DP48	
EON	EN29F001T	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002ANB	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002ANT	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002CB	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002CNT	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002CT	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002NB	XMEM2.EXE	M1-UN-DP48	
EON	EN29F002NT	XMEM2.EXE	M1-UN-DP48	
EON	EN29F010	XMEM2.EXE	M1-UN-DP48	
EON	EN29F040	XMEM2.EXE	M1-UN-DP48	
EON	EN29F040A	XMEM2.EXE	M1-UN-DP48	
EON	EN29F080-T	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
EON	EN29F512	XMEM2.EXE	M1-UN-DP48	
EON	EN29F800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29F800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29GA128H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GA128L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GA256H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GA256L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL064AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29GL064AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29GL064AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29GL064AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29GL064B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29GL064H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL064H-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29GL064L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL064L-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29GL064T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29GL128H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL128H-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29GL128L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL128L-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29GL256H-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL256H-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29GL256L-BAP	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
EON	EN29GL256L-ZP	XA28F1.EXE	M1-UN-TS56	
EON	EN29LV010	XMEM2.EXE	M1-UN-DP48	
EON	EN29LV040	XMEM2.EXE	M1-UN-DP48	
EON	EN29LV040A	XMEM2.EXE	M1-UN-DP48	
EON	EN29LV160AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV160AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV160AT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV160B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV160BB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV160BT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EON	EN29LV160BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV160CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV160CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV160CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV160JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV160JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV160T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV320AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV320B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV320B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV320B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320BB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320BT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV320CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV320T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV320T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV320T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV400AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV400AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV400AT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV400AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV400B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV400B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV400JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV400JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV400T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV512	XMEM2.EXE	M1-UN-DP48	
EON	EN29LV640AB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV640AB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV640AT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV640AT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV640B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV640B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV640H-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV640H-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV640L-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV640T-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29LV640T-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV641H-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV641L-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800AB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV800AB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800AT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800BB-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV800BB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800BB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV800BT-B	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV800BT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800BT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV800CB-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EON	EN29LV800CB-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV800CT-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN29LV800CT-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29LV800JB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800JT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29LV800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29PL032-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29PL032A-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29PL064-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29SL160B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL400B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL400B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL400B-TP	XA28F1.EXE	M1-UN-TS48A/TS56	
EON	EN29SL400T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL400T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29SL800B-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL800B-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL800B-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN29SL800T-B	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EON	EN29SL800T-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EON	EN39SL160AL-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN39SL160L-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN39SL800-BP	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
EON	EN71GL032xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN71GL064xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN71GL128xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN71PL032xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN71PL032xxA-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN71PL064xx-CP	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
EON	EN25B05T	XSPROM.EXE	M1-UN-DP48	
EON	EN25B10	XSPROM.EXE	M1-UN-DP48	
EON	EN25B10T	XSPROM.EXE	M1-UN-DP48	
EON	EN25B16	XSPROM.EXE	M1-UN-DP48	
EON	EN25B16T	XSPROM.EXE	M1-UN-DP48	
EON	EN25B20	XSPROM.EXE	M1-UN-DP48	
EON	EN25B20T	XSPROM.EXE	M1-UN-DP48	
EON	EN25B32	XSPROM.EXE	M1-UN-DP48	
EON	EN25B32(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25B40	XSPROM.EXE	M1-UN-DP48	
EON	EN25B40T	XSPROM.EXE	M1-UN-DP48	
EON	EN25B64(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25B80	XSPROM.EXE	M1-UN-DP48	
EON	EN25B80T	XSPROM.EXE	M1-UN-DP48	
EON	EN25D16	XSPROM.EXE	M1-UN-DP48	
EON	EN25D80	XSPROM.EXE	M1-UN-DP48	
EON	EN25F05	XSPROM.EXE	M1-UN-DP48	
EON	EN25F10	XSPROM.EXE	M1-UN-DP48	
EON	EN25F16	XSPROM.EXE	M1-UN-DP48	
EON	EN25F20	XSPROM.EXE	M1-UN-DP48	
EON	EN25F32	XSPROM.EXE	M1-UN-DP48	
EON	EN25F32(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25F40	XSPROM.EXE	M1-UN-DP48	
EON	EN25F64	XSPROM.EXE	M1-UN-DP48	
EON	EN25F80	XSPROM.EXE	M1-UN-DP48	
EON	EN25F80A	XSPROM.EXE	M1-UN-DP48	
EON	EN25LF05	XSPROM.EXE	M1-UN-DP48	
EON	EN25LF10	XSPROM.EXE	M1-UN-DP48	
EON	EN25LF16	XSPROM.EXE	M1-UN-DP48	
EON	EN25LF20	XSPROM.EXE	M1-UN-DP48	
EON	EN25LF40	XSPROM.EXE	M1-UN-DP48	
EON	EN25M32	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EON	EN25P05	XSPROM.EXE	M1-UN-DP48	
EON	EN25P10	XSPROM.EXE	M1-UN-DP48	
EON	EN25P16	XSPROM.EXE	M1-UN-DP48	
EON	EN25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25P20	XSPROM.EXE	M1-UN-DP48	
EON	EN25P32	XSPROM.EXE	M1-UN-DP48	
EON	EN25P32(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25P40	XSPROM.EXE	M1-UN-DP48	
EON	EN25P64(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25P80	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q128	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q128(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q16	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q16A	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q32	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q32A	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q32A(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q32B	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q32B(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q40	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q40A	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q64	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q64(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q80	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q80A	XSPROM.EXE	M1-UN-DP48	
EON	EN25Q80B	XSPROM.EXE	M1-UN-DP48	
EON	EN25QA128	XSPROM.EXE	M1-UN-DP48	
EON	EN25QA16	XSPROM.EXE	M1-UN-DP48	
EON	EN25QA256	XSPROM.EXE	M1-UN-DP48	
EON	EN25QA32	XSPROM.EXE	M1-UN-DP48	
EON	EN25QA64	XSPROM.EXE	M1-UN-DP48	
EON	EN25QF256(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH128	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH128(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH128A	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH16	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH16A	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH256	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH256(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH32	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH32A	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH64	XSPROM.EXE	M1-UN-DP48	
EON	EN25QH64(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25QM80A	XSPROM.EXE	M1-UN-DP48	
EON	EN25S10	XSPROM.EXE	M1-UN-DP48	
EON	EN25S16	XSPROM.EXE	M1-UN-DP48	
EON	EN25S16T	XSPROM.EXE	M1-UN-DP48	
EON	EN25S20	XSPROM.EXE	M1-UN-DP48	
EON	EN25S20A	XSPROM.EXE	M1-UN-DP48	
EON	EN25S256(SOP16)	XSPROM.EXE	M1-UN-DP48	
EON	EN25S32	XSPROM.EXE	M1-UN-DP48	
EON	EN25S32T	XSPROM.EXE	M1-UN-DP48	
EON	EN25S40	XSPROM.EXE	M1-UN-DP48	
EON	EN25S40A	XSPROM.EXE	M1-UN-DP48	
EON	EN25S40T	XSPROM.EXE	M1-UN-DP48	
EON	EN25S64	XSPROM.EXE	M1-UN-DP48	
EON	EN25S80	XSPROM.EXE	M1-UN-DP48	
EON	EN25S80A	XSPROM.EXE	M1-UN-DP48	
EON	EN25SA10	XSPROM.EXE	M1-UN-DP48	
EON	EN25SF80	XSPROM.EXE	M1-UN-DP48	
EON	EN25T16	XSPROM.EXE	M1-UN-DP48	
EON	EN25T16A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EON	EN25T40	XSPROM.EXE	M1-UN-DP48	
EON	EN25T80	XSPROM.EXE	M1-UN-DP48	
ESIGMA	ES25Q32B	XSPROM.EXE	M1-UN-DP48	
ESIGMA	ES25QH16	XSPROM.EXE	M1-UN-DP48	
ESIGMA	ES25T16A	XSPROM.EXE	M1-UN-DP48	
ESIGMA	ES25T80	XSPROM.EXE	M1-UN-DP48	
ESMT	F29L064UGA-T	XA28F1.EXE	M1-UN-TS48A/TS56	
ESMT	F49B002UA	XMEM2.EXE	M1-UN-DP48	
ESMT	F49L004BA	XMEM2.EXE	M1-UN-DP48	
ESMT	F49L040A	XMEM2.EXE	M1-UN-DP48	
ESMT	F49L160BA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	F49L160UA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	F49L320BA-T	XA28F1.EXE	M1-UN-TS48A/TS56	
ESMT	F49L320UA-T	XA28F1.EXE	M1-UN-TS48A/TS56	
ESMT	F49L400BA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	F49L400UA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	F49L800BA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	F49L800UA-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
ESMT	FM91D06432UNA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L01604BA-A6BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L01604UA-A6BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L03204UA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L03208BA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L03208BIA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	FM91L03208UA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
ESMT	F25D04PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25D04QA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25D08QA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25D64QA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L004A	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L004A(AAI)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L008A	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L008A(AAI)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L016A	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L016A(AAI)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L01PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L01PA(2D)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L01PTA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L02PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L02PA(2F)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L02PTA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L04PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L04PA(2D)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L04PTA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L04UA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L05PA(2D)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L08PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L08PA(2G)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L08QA(2S)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L16PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L16PA(2S)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L32PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L32PA(2S)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L32QA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L32QA(2S)	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L64PA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L64QA	XSPROM.EXE	M1-UN-DP48	
ESMT	F25L64QA(SOP16)	XSPROM.EXE	M1-UN-DP48	
EVERSPIN	MR2A16A	XMEM2.EXE	M1-UN-DP48	ADP-FM22L16-TS44
EXAR	XRP7704	XACC2430.EXE	M1-XRP77XX-QN40	
EXAR	XRP7708	XACC2430.EXE	M1-XRP77XX-QN40	
EXAR	XRP7713	XACC2430.EXE	M1-UN-DP48	ADP-XRP7713-QN32

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
EXAR	XRP7714	XACC2430.EXE	M1-XRP77XX-QN40	
EXAR	XRP7740	XACC2430.EXE	M1-XRP77XX-QN40	
EXCELSEMI	ES29DL320EB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL320ET-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL322EB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL322ET-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL323EB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL323ET-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL324EB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL324ET-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL328EB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29DL328ET-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV160DB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV160DB-W	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV160DT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV160EB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV160EB-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV160ET-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV160ET-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV160FB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV160FB-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV320DB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV320DT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV320EB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV320ET-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV320ET-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV320FB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV320FT-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV400DB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV400DB-W	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV400DT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV400EB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV400EB-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV400ET-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV400ET-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV800DB-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV800DB-W	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV800DT-T	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
EXCELSEMI	ES29LV800EB-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV800EB-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES29LV800ET-TG	XA28F1.EXE	M1-UN-TS48A/TS56	
EXCELSEMI	ES29LV800ET-WG	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
EXCELSEMI	ES25M16A	XSPROM.EXE	M1-UN-DP48	
EXCELSEMI	ES25M80A	XSPROM.EXE	M1-UN-DP48	
EXCELSEMI	ES25P16	XSPROM.EXE	M1-UN-DP48	
EXCELSEMI	ES25P40	XSPROM.EXE	M1-UN-DP48	
EXCELSEMI	ES25P80	XSPROM.EXE	M1-UN-DP48	
EXEL	XLS28C16A	XMEM2.EXE	M1-UN-DP48	
EXEL	XL24C01A	XSPROM.EXE	M1-UN-DP48	
EXEL	XL24C02P	XSPROM.EXE	M1-UN-DP48	
EXEL	XL24C04P	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93C46	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC06	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC46	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC46A	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC56	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC56A	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC66	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LC66A	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LL46	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LL56	XSPROM.EXE	M1-UN-DP48	
EXEL	XL93LL66	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FAIRCHILD	FM27C010	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	FM27C040	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	FM27C256	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	FM27C512	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	NM27C256	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	NMC27C16B(12.75V)	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	NMC27C64(13V)	XMEM1.EXE	M1-UN-DP48	
FAIRCHILD	FM24C256	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	FM93C46	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM24C02	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM25C020	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM25C160	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM93C46	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM93C56	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM93C86A	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	NM93CS46	XSPROM.EXE	M1-UN-DP48	
FAIRCHILD	ACE1101EMT8	XUBICOM.EXE	M1-UN-DP48	
FAIRCHILD	ACE1202EM8	XUBICOM.EXE	M1-UN-DP48	
FAIRCHILD	ACE1501EM8	XUBICOM.EXE	M1-UN-DP48	
FAIRCHILD	ACE1502EM	XUBICOM.EXE	M1-UN-DP48	
FAIRCHILD	ACE1502EMT8	XUBICOM.EXE	M1-UN-DP48	
FIDELIX	FM25M04A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25M08A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25M16A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25M32A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25M64A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25Q16A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25Q16B	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25Q32A	XSPROM.EXE	M1-UN-DP48	
FIDELIX	FM25S16A	XSPROM.EXE	M1-UN-DP48	
FINTEK	F66100E	XACC2430.EXE	M1-UN-DP48	
FINTEK	F75501	XACC2430.EXE	M1-UN-BG68A	TOP-AVR-ML28A
FMD	FT24C02	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C02A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C02A(SOT23)	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C04	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C04A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C04A(SOT23)	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C08	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C08A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C128A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C16	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C16A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C256A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C32	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C32A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C512A	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C64	XSPROM.EXE	M1-UN-DP48	
FMD	FT24C64A	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46A(128*8)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46A(64*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46R(128*8)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C46R(64*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C66A(256*16)	XSPROM.EXE	M1-UN-DP48	
FMD	FT93C66A(512*8)	XSPROM.EXE	M1-UN-DP48	
FREESCALE	DSP56F801	XA56FXX.EXE	M1-UN-DP48	ADP-56F801-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	DSP56F803	XA56FXX.EXE	M1-UN-DP48	ADP-56F803-TQ
FREESCALE	DSP56F805	XA56FXX.EXE	M1-UN-DP48	ADP-56F805-LQ144
FREESCALE	MC13211	XAMHCS.EXE	M1-UN-ML64	
FREESCALE	MC13212	XAMHCS.EXE	M1-UN-ML64	
FREESCALE	MC13213	XAMHCS.EXE	M1-UN-ML64	
FREESCALE	MC13213A	XAMHCS.EXE	M1-UN-ML64	
FREESCALE	MC13214	XAMHCS.EXE	M1-UN-ML64	
FREESCALE	MC56F8002	XA56FXX.EXE	M1-UN-DP48	
FREESCALE	MC56F8006	XA56FXX.EXE	M1-UN-QF32	
FREESCALE	MC56F8011	XA56FXX.EXE	M1-UN-QF32	
FREESCALE	MC56F8013	XA56FXX.EXE	M1-UN-DP48	ADP-56F8013-TQ
FREESCALE	MC56F8013(ISP)	XA56FXX.EXE	M1-JTAG-CN10	
FREESCALE	MC56F8013*	XA56FXX.EXE	M1-UN-QF32	
FREESCALE	MC56F8014	XA56FXX.EXE	M1-UN-QF32	
FREESCALE	MC56F8023	XA56FXX.EXE	M1-UN-QF32	
FREESCALE	MC56F8025	XA56FXX.EXE	M1-AVR-QF44	
FREESCALE	MC56F8037	XA56FXX.EXE	M1-UN-TQ64	
FREESCALE	MC56F8257MLH	XA56FXX.EXE	M1-UN-TQ64	
FREESCALE	MC56F82723VFN	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFN32
FREESCALE	MC56F82748VLH	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFP64
FREESCALE	MC56F8366	XA56FXX.EXE	M1-56F8366-TQ144	
FREESCALE	MC68701S(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68701
FREESCALE	MC68701U4(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68701
FREESCALE	MC68705P3(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68705P3
FREESCALE	MC68705P5(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68705P3
FREESCALE	MC68HC11A1(DIP48)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2
FREESCALE	MC68HC11A1(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68HC11A1(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC68HC11E1(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68HC11E1(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC68HC11E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68HC11E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC68HC11F1(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC11F1
FREESCALE	MC68HC11F1(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC11F1-Q80
FREESCALE	MC68HC705B16(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
FREESCALE	MC68HC705B16N(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
FREESCALE	MC68HC705B16N(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
FREESCALE	MC68HC705B16N(SDIP56)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-SD
FREESCALE	MC68HC705B32(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
FREESCALE	MC68HC705B5(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
FREESCALE	MC68HC705C8(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
FREESCALE	MC68HC705C8(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
FREESCALE	MC68HC705C8A(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9
FREESCALE	MC68HC705C8A(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
FREESCALE	MC68HC705C8A(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
FREESCALE	MC68HC705C8A(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-Q
FREESCALE	MC68HC705C8A(SDIP42)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-SD
FREESCALE	MC68HC705C9(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
FREESCALE	MC68HC705C9(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
FREESCALE	MC68HC705C9A(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9
FREESCALE	MC68HC705C9A(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
FREESCALE	MC68HC705C9A(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
FREESCALE	MC68HC705C9A(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-Q
FREESCALE	MC68HC705J1A(DIP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705J1AV2
FREESCALE	MC68HC705J1A(SOP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705J1A-SV2
FREESCALE	MC68HC705JJ7(DIP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JJ7
FREESCALE	MC68HC705JJ7(SOP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JJ7-S
FREESCALE	MC68HC705JP7(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JP7-S
FREESCALE	MC68HC705KJ1(DIP16)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705KJ1
FREESCALE	MC68HC705KJ1(SOP16)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705KJ1-S
FREESCALE	MC68HC705L16(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705L5-Q
FREESCALE	MC68HC705L5(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705L5-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC68HC705P6(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
FREESCALE	MC68HC705P6A(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
FREESCALE	MC68HC705P6A(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P9-S
FREESCALE	MC68HC705P9(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
FREESCALE	MC68HC705P9(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P9-S
FREESCALE	MC68HC705X32(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
FREESCALE	MC68HC711D3(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D
FREESCALE	MC68HC711D3(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D3-PL
FREESCALE	MC68HC711D3(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D3-Q
FREESCALE	MC68HC711E20(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68HC711E20(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC68HC711E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68HC711E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC68HC711E9(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E9-Q
FREESCALE	MC68HC711EA9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68711EA9-PL
FREESCALE	MC68HC711K4(PLCC84)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711
FREESCALE	MC68HC711K4(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711K4-Q
FREESCALE	MC68HC711KA2(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711KA4
FREESCALE	MC68HC711KA4(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711KA4
FREESCALE	MC68HC811E2(DIP48)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2
FREESCALE	MC68HC811E2(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2-PL
FREESCALE	MC68HC812A4CPV8	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC812A-Q112
FREESCALE	MC68HC908AB32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
FREESCALE	MC68HC908AP16(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
FREESCALE	MC68HC908AP16(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
FREESCALE	MC68HC908AP32(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
FREESCALE	MC68HC908AP32(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
FREESCALE	MC68HC908AP64(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
FREESCALE	MC68HC908AP64(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
FREESCALE	MC68HC908AP8(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
FREESCALE	MC68HC908AP8(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
FREESCALE	MC68HC908AS60A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
FREESCALE	MC68HC908AZ32A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
FREESCALE	MC68HC908AZ60(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
FREESCALE	MC68HC908AZ60A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
FREESCALE	MC68HC908BD48(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908BD48
FREESCALE	MC68HC908EY16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908EY-TQ32
FREESCALE	MC68HC908GP20(DIP40)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX
FREESCALE	MC68HC908GP32(DIP40)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX
FREESCALE	MC68HC908GP32(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GP32(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908GTX-SD
FREESCALE	MC68HC908GR4(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8-Q
FREESCALE	MC68HC908GR8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8
FREESCALE	MC68HC908GR8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8-Q
FREESCALE	MC68HC908GT16(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GT8(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
FREESCALE	MC68HC908GT8(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908GTX-SD
FREESCALE	MC68HC908GZ32(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908GZ-LQ48
FREESCALE	MC68HC908GZ8(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908GZ-LQ48
FREESCALE	MC68HC908JB12(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-S28
FREESCALE	MC68HC908JB16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-Q
FREESCALE	MC68HC908JB16(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-S28
FREESCALE	MC68HC908JB8(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8
FREESCALE	MC68HC908JB8(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8-S20
FREESCALE	MC68HC908JB8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8-S28
FREESCALE	MC68HC908JK1(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
FREESCALE	MC68HC908JK1(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
FREESCALE	MC68HC908JK1E(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
FREESCALE	MC68HC908JK1E(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
FREESCALE	MC68HC908JK3(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
FREESCALE	MC68HC908JK3(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
FREESCALE	MC68HC908JK3E(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC68HC908JK3E(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
FREESCALE	MC68HC908JK8(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
FREESCALE	MC68HC908JL16(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
FREESCALE	MC68HC908JL16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-Q
FREESCALE	MC68HC908JL16(SDIP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-SD
FREESCALE	MC68HC908JL16(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
FREESCALE	MC68HC908JL3(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
FREESCALE	MC68HC908JL3(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
FREESCALE	MC68HC908JL3E(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
FREESCALE	MC68HC908JL3E(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
FREESCALE	MC68HC908JL8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
FREESCALE	MC68HC908JL8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-Q
FREESCALE	MC68HC908JL8(SDIP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-SD
FREESCALE	MC68HC908JL8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
FREESCALE	MC68HC908JR32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908JR32-Q64
FREESCALE	MC68HC908JW32(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908JW32-LQ52
FREESCALE	MC68HC908JW32(MLF48)	XA908.EXE	M1-UN-DP48	ADP-68HC908JW32-ML
FREESCALE	MC68HC908KX2(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX
FREESCALE	MC68HC908KX2(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX-S
FREESCALE	MC68HC908KX8(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX
FREESCALE	MC68HC908KX8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX-S
FREESCALE	MC68HC908LD64(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LD-QF64
FREESCALE	MC68HC908LJ12(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
FREESCALE	MC68HC908LJ12(LQFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ64
FREESCALE	MC68HC908LJ12(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
FREESCALE	MC68HC908LJ24(LQFP80)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-TQ80
FREESCALE	MC68HC908LJ24(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
FREESCALE	MC68HC908LJ8(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
FREESCALE	MC68HC908LK24(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
FREESCALE	MC68HC908LV8(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
FREESCALE	MC68HC908MR16(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR32-Q
FREESCALE	MC68HC908MR32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR32-Q
FREESCALE	MC68HC908MR8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8
FREESCALE	MC68HC908MR8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8-Q32
FREESCALE	MC68HC908MR8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8-S
FREESCALE	MC68HC908QB4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QB4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QB8(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QB8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QB8(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QC16(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QC16(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QT1(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT1(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QT1A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT1A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QT2(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT2(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QT2A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT2A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QT4(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT4(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QT4A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QT4A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	MC68HC908QY1(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY1(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY1(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY1A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY1A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY1A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY2(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY2(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC68HC908QY2(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY2A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY2A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY2A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY4(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY4A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	MC68HC908QY4A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908QY4A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	MC68HC908QY8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	MC68HC908RF2(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908RF2-TQ
FREESCALE	MC68HC908SR12(QFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908SR12-Q
FREESCALE	MC68HC908SR12(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908SR12-SD
FREESCALE	MC68HC912B32CFU8	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912B-Q80
FREESCALE	MC68HC912DG128ACPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912D-Q112
FREESCALE	MC68S711E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
FREESCALE	MC68S711E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
FREESCALE	MC912DG128ACPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912D-Q112
FREESCALE	MC9RS08KA1CPC	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA1CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9RS08KA2CPC	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA2CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9RS08KA4CPG	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA4CPJ	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9RS08KA4CWG	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9RS08KA4CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9RS08KA8CPG	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA8CPJ	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08KA8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9RS08KA8CWG	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9RS08KA8CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9RS08KB8CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9RS08SA12CBM	XAMHCS.EXE	M1-UN-DP48	CNV-SDIP-DIP32
FREESCALE	MC9RS08SA12CPJ	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9RS08SA12CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08AC16CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AC16CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AC16CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08AC32CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AC32CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AC32CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08AC32CFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AC32CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AC48CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08AC48CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AC48MFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AC48MFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AC48MFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AC60CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AC60CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AC60CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08AC60CFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AC60CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AC8CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AC8CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AC8CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08AC96CLKE	XAMHCS.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MC9S08AW16CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AW16CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AW16CFUE	XAMHCS.EXE	M1-UN-QF64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC9S08AW16CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AW16MFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AW32CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AW32CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AW32CFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AW32CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AW48CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AW48CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AW48CFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AW48CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AW60CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08AW60CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08AW60CFUE	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08AW60CPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08AW60MPUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08DN16CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08DN16CLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DN32CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08DN32CLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DN32CLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08DN60CLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DN60CLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08DN60MLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DZ128CLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DZ16ACLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DZ16CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08DZ32ACLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DZ32AMLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08DZ60MLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08DZ60MLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08DZ60MLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08FL16CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08FL8CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08GB32ACFUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08GB60ACFUE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08GB60CFU	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08GT16ACBE	XAMHCS.EXE	M1-UN-SD42	
FREESCALE	MC9S08GT16ACFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
FREESCALE	MC9S08GT16ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08GT16AMFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
FREESCALE	MC9S08GT16CFD	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08GT32ACBE	XAMHCS.EXE	M1-UN-SD42	
FREESCALE	MC9S08GT32ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08GT32CFB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
FREESCALE	MC9S08GT60ACBE	XAMHCS.EXE	M1-UN-SD42	
FREESCALE	MC9S08GT60ACFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
FREESCALE	MC9S08GT60ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08GT60CB	XAMHCS.EXE	M1-UN-SD42	
FREESCALE	MC9S08GT60CFB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
FREESCALE	MC9S08GT8ACBE	XAMHCS.EXE	M1-UN-SD42	
FREESCALE	MC9S08GT8AMFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08JM16	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08JM16CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08JM32CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08JM32CLD	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08JM32CLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08JM32CQH	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08JM60CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
FREESCALE	MC9S08JM60CLDE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08JM60CLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08JM60CQH	XAMHCS.EXE	M1-UN-QF64	
FREESCALE	MC9S08JM8CLD	XAMHCS.EXE	M1-AVR-QF44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC9S08JR12FAE	XAMHCS.EXE	M1-UN-TQ48/-LQ48	
FREESCALE	MC9S08LC36CLHE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08LG32CLH	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08LL16CLHE	XAMHCS.EXE	M1-UN-TQ64	
FREESCALE	MC9S08LL8CLF	XAMHCS.EXE	M1-UN-LQ48	
FREESCALE	MC9S08PA4	XAMHCS.EXE	M1-MC9S08PA-DN8	
FREESCALE	MC9S08PA4VTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08PA8VTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08QA2CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QA2CFQE	XAMHCS.EXE	M1-UN-DP48	CNV-DFN-HCS08
FREESCALE	MC9S08QA2CPAE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QA4CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QA4CPAE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QD2CPC	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QD2CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QD2MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QD4CPC	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QD4CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QD4MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QE16CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08QE4CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08QE4CPG	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QE4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08QE4CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08QE4CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08QE8CLC	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08QE8CPG	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QE8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08QE8CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08QE8CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08QG4CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QG4CDTE	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08QG4CFE	XAMHCS.EXE	M1-UN-DP48	CNV-QFN16-HCS08
FREESCALE	MC9S08QG4CFQE	XAMHCS.EXE	M1-UN-DP48	CNV-DFN-HCS08
FREESCALE	MC9S08QG4CPAE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QG4CPBE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QG8CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08QG8CDTE	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08QG8CFE	XAMHCS.EXE	M1-UN-DP48	CNV-QFN16-HCS08
FREESCALE	MC9S08QG8CPBE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08QG8MPAE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08RC16CFG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC16CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC32CFG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC32FG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC32FJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RC60FG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC8CFG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RC8CFJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RD16CDWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RD16CPE	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08RD16DWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RD16FG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RD16FJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RD32CDWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RD60DWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RD8CDWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RD8DWE	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08RE16CFG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RE16CFJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RE16CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RE16FGE	XAMHCS.EXE	M1-AVR-QF44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC9S08RE16FJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RE16FJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RE8CFJ	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RE8CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RG32CFGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RG32FGE	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RG32FJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08RG60CFG	XAMHCS.EXE	M1-AVR-QF44	
FREESCALE	MC9S08RG60CFJE	XAMHCS.EXE	M1-UN-QF32	
FREESCALE	MC9S08SE4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SE8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SE8CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08SH16CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SH16CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH16CTL	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH16CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08SH32CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SH32CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH32CTL	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH32CWL	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08SH4CFK	XAMHCS.EXE	M1-UN-DP48	CNV-QFN-DIP24A
FREESCALE	MC9S08SH4CPJ	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08SH4CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08SH4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SH4CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH4CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08SH4MTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SH8CPJ	XAMHCS.EXE	M1-UN-DP48	
FREESCALE	MC9S08SH8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
FREESCALE	MC9S08SH8CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S08SH8CWJ	XAMHCS.EXE	M1-UN-SO28	
FREESCALE	MC9S08SH8MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
FREESCALE	MC9S08SL8CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
FREESCALE	MC9S12A128BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12A128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12A256CCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12A256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12A32CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12A512CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12A64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12A64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12B128CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12B128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12B128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12B256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12B64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12B64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12C128CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
FREESCALE	MC9S12C128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12C32CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
FREESCALE	MC9S12C32CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12C32MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12C32MPB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12C-Q52
FREESCALE	MC9S12C64CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
FREESCALE	MC9S12C64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12C96CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12D64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12D64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12D64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12D64MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12D64MPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12D64VFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MC9S12D64VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DB128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DB128MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DG128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DG128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DG128MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DG128MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DG128VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DG256BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DG256CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DG256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DG256MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DJ128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DJ256BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DJ256CMFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DJ64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12DP256BCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DP512CPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DP512VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DT128BCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12DT256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12E128CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12E128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12E128CPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12E128MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12E256MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12E256MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
FREESCALE	MC9S12E32CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12E64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
FREESCALE	MC9S12G128CLH	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF64
FREESCALE	MC9S12G128CLL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF100
FREESCALE	MC9S12G48CLC	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF32
FREESCALE	MC9S12G64CLC	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF32
FREESCALE	MC9S12GC64MFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
FREESCALE	MC9S12NE64CPVE	XAMHCS.EXE	M1-MC9S12NE-LQ112	
FREESCALE	MC9S12NE64VTU	XAMHCS.EXE	M1-MC9S12NE-TQ80	
FREESCALE	MC9S12P96CLH	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12P-QF64
FREESCALE	MC9S12VR48F2CLC	XAMHCS.EXE	M1-MC9S12VR-LQ32	
FREESCALE	MC9S12XA256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
FREESCALE	MC9S12XA256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XB128MAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
FREESCALE	MC9S12XD128MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XD256CAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
FREESCALE	MC9S12XD256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
FREESCALE	MC9S12XD256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XDP512MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XDT256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
FREESCALE	MC9S12XDT256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XDT512CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
FREESCALE	MC9S12XEP768CAG	XAMHCS.EXE	M1-MC9S12XE-LQ144	
FREESCALE	MC9S12XEP768MAG	XAMHCS.EXE	M1-MC9S12XE-LQ144	
FREESCALE	MC9S12XEQ512MAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
FREESCALE	MC9S12XET256VAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XHZ512VAG	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XHZ-Q144
FREESCALE	MC9S12XHZ512VAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XHZ-Q112
FREESCALE	MC9S12XS128MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
FREESCALE	MC9S12XS256VAAR	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
FREESCALE	MC9S12XS64CAE	XAMHCS.EXE	M1-MC9S12XS-QF64	
FREESCALE	MCF51AC128ACFUE	XAMCF.EXE	M1-UN-QF64	
FREESCALE	MCF51AC128AVLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51AC256ACLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51AC256BCFUE	XAMCF.EXE	M1-UN-QF64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MCF51AC256BCLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51JE256VLL	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q100
FREESCALE	MCF51JF128VLH	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q64
FREESCALE	MCF51JM128EVLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51JM128VLD	XAMCF.EXE	M1-AVR-QF44	
FREESCALE	MCF51JM128VLH	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF51JM128VLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51JM64EVLH	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF51JM64VLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
FREESCALE	MCF51JU32VFM	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-QN32
FREESCALE	MCF51JU64VLF	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q48
FREESCALE	MCF51QM32VFM	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-QN32
FREESCALE	MCF52100CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52100CEP	XAMCF.EXE	M1-UN-ML64	
FREESCALE	MCF52110CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52110CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
FREESCALE	MCF52110CEP	XAMCF.EXE	M1-UN-ML64	
FREESCALE	MCF5211CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF5211CEP	XAMCF.EXE	M1-UN-ML64	
FREESCALE	MCF5212CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF5213CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
FREESCALE	MCF5214CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF5216CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF5216CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF52210CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52210CEP	XAMCF.EXE	M1-UN-ML64	
FREESCALE	MCF52211CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52211CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
FREESCALE	MCF52211CEP	XAMCF.EXE	M1-UN-ML64	
FREESCALE	MCF52212CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52213CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52221CAE	XAMCF.EXE	M1-UN-TQ64	
FREESCALE	MCF52221CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
FREESCALE	MCF52223CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
FREESCALE	MCF52230CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52230CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
FREESCALE	MCF52231CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52231CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
FREESCALE	MCF52232AF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52232CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52233CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52233CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
FREESCALE	MCF52234CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
FREESCALE	MCF52235CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
FREESCALE	MCF52236AF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF52236CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
FREESCALE	MCF5281CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF5281CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF5282CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MCF5282CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
FREESCALE	MK10DN512ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
FREESCALE	MK10DX256ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK10FN1M0VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK10FN1M0VMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK10FX512VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK20DN512VLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK20DN512ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
FREESCALE	MK20DX128VFM5	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-QN32
FREESCALE	MK20DX128VLF5	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q48
FREESCALE	MK20DX128VLH7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q64
FREESCALE	MK20DX256VLK7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
FREESCALE	MK20DX256ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FREESCALE	MK20DX256ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK40DN512VLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK40DN512ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK40DX256VLL7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK40N512VLL100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK40X256VLQ100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK40X256VMD100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60DN512VLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK60DN512VMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60DN512ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK60DN512ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK60DN512ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60DN512ZVMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60DX256ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK60DX256ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK60DX256ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60FN1M0VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK60FN1M0VMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK60FX512VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK61FN1M0VMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
FREESCALE	MK64FN1M0VLL12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
FREESCALE	MK64FN1M0VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
FREESCALE	MK70FN1M0VMJ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG256
FREESCALE	MK70FX512VMJ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG256
FREESCALE	MWCT1000CFM	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFN32
FREESCALE	MWCT1001AVLH	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFP64
FREESCALE	S553104T2(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	S553104T2(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	S553104T4(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
FREESCALE	S553104Y4(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
FREESCALE	S553104Y4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
FREESCALE	S553104Y4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
FREESCALE	XC68C812A4PVE5	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC812A-Q112
FREESCALE	XC68HC705B32(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
FREESCALE	XC68HC805P18(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68805P18-S
FREESCALE	XC68HC912BD32CFU10	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912B-Q80
FTDI	VNC1L-1A	XASIG.EXE	M1-UN-DP48	ADP-VNC1L-QFP48
FTDI	VNC2-48L1B	XASIG.EXE	M1-UN-DP48	ADP-VNC2L-QFP48
FUDAN	FM24C02A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C02B	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C02B(SOT23)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C02C	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C04A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C04B	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C08A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C08B	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C1024A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C128A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C16A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C16B	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C16D	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C256A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C32A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C512A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C512D	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM24C64A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25128	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25256	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25512	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25F005	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25F01	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25F02	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FUDAN	FM25F02A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25F04	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25F04A	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25Q08	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25Q16	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM25Q32	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
FUDAN	FM93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
FUJITSU	MBM27128(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM2716	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM2732A(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM2764(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C1000	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C1024	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C128(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C256	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C256A	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C256H(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C4001	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C4096	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C512	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MBM27C64(21V)	XMEM1.EXE	M1-UN-DP48	
FUJITSU	MB85R256	XMEM2.EXE	M1-UN-DP48	
FUJITSU	MBM29DL161BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL161BE-NC	XA28F1.EXE	M1-UN-TS48A/TS56	
FUJITSU	MBM29DL161TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL162BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL162TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL162TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL163BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL163BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL163TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL164BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL164TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL321BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL321TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL322BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL322TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL323BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL323TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL323TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL324BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL324BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL324TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL324TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL32BF-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL640E-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL800BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29DL800TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F002TC	XMEM2.EXE	M1-UN-DP48	
FUJITSU	MBM29F016-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F016A-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F017A-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F033C-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FUJITSU	MBM29F040A	XMEM2.EXE	M1-UN-DP48	
FUJITSU	MBM29F040C	XMEM2.EXE	M1-UN-DP48	
FUJITSU	MBM29F080-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29F080A-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29F160BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F160DB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F160DT-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F160TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F200B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F200BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F200T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F200TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F400TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F800BA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29F800TA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV002B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV002T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV004B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV004T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV008B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV008T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV016B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV016T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV017-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
FUJITSU	MBM29LV160B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV160BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV160T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV160TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV160TM-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV200B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV200T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV320BE-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV320TE-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV400TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800BA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800TA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MBM29LV800TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
FUJITSU	MB89F202	XAMPU3.EXE	M1-UN-DP48	ADP-MB89F202-SD
FUJITSU	MB89F202RA(SD32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB89F202-SD
FUJITSU	MB89P558A(LQFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB89P558A-Q
FUJITSU	MB89P985	XAMPU3.EXE	M1-UN-DP48	ADP-MB89XX-LQ64
FUJITSU	MB90F342A(LQFP100)	XAMPU3.EXE	M1-MB90F347-LQ100	
FUJITSU	MB90F347AS(LQFP100*)	XAMPU3.EXE	M1-MB90F347-LQ100	
FUJITSU	MB90F347CA(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F347-Q
FUJITSU	MB90F347CA(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	
FUJITSU	MB90F349AS(LQFP100*)	XAMPU3.EXE	M1-MB90F347-LQ100	
FUJITSU	MB90F349AS(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FUJITSU	MB90F349CA(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	
FUJITSU	MB90F349CES(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	
FUJITSU	MB90F352ES(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F352E-Q
FUJITSU	MB90F352TES(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F352E-Q
FUJITSU	MB90F387S(QFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F387-TQ
FUJITSU	MB90F462(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F497G-QV2
FUJITSU	MB90F462A(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F497G-QV2
FUJITSU	MB90F462A(SDIP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F462A-SDIP64
FUJITSU	MB90F497G(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F497G-QV2
FUJITSU	MB90F498G(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F497G-QV2
FUJITSU	MB90F543(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F543GS(LQFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F543-Q
FUJITSU	MB90F543GS(LQFP100*)	XAMPU3.EXE	M1-MB90F543GS-QF100	
FUJITSU	MB90F543GS(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F543GS*(LQFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F543-Q
FUJITSU	MB90F543GS*(LQFP100*)	XAMPU3.EXE	M1-MB90F543GS-QF100	
FUJITSU	MB90F546G(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F548G(LQFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F543-Q
FUJITSU	MB90F548G(LQFP100*)	XAMPU3.EXE	M1-MB90F543GS-QF100	
FUJITSU	MB90F548G(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F562B(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F497G-QV2
FUJITSU	MB90F594G(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F594G*(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F598(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F598*(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F59X-QV2
FUJITSU	MB90F822A(QFP80)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F822-Q
FUJITSU	MB90F823A(QFP80)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F822-Q
FUJITSU	MB90F947(QFP100)	XAMPU3.EXE	M1-UN-DP48	ADP-MB90F347-Q
FUJITSU	MB90F947(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	
FUJITSU	MB90F949A(QFP100*)	XAMPU3.EXE	M1-MB90F347-QF100	
FUJITSU	MB95F136HW(SO28)	XAMPU3.EXE	M1-UN-DP48	
FUJITSU	MB95F202K(SD24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-SD
FUJITSU	MB95F202K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F203K(SD24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-SD
FUJITSU	MB95F203K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F204K(SD24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-SD
FUJITSU	MB95F204K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F212K(DIP8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214
FUJITSU	MB95F212K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214-S
FUJITSU	MB95F213K(DIP8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214
FUJITSU	MB95F213K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214-S
FUJITSU	MB95F214K(DIP8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214
FUJITSU	MB95F214K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F214-S
FUJITSU	MB95F222H(SO16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F223K(DIP16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223
FUJITSU	MB95F223K(SO16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F263K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F264K(QFN32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F264-QN32
FUJITSU	MB95F264K(SD24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-SD
FUJITSU	MB95F264K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F264K(SSOP20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F264-SS20
FUJITSU	MB95F272K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F274K(DIP8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223
FUJITSU	MB95F274K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F282K(SO16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F284K(DIP16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223
FUJITSU	MB95F284K(SO16)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F318(LQFP80)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F318-TQ
FUJITSU	MB95F334K(QFP32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F334-Q
FUJITSU	MB95F354E(SO24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F354-S
FUJITSU	MB95F354E(SSOP24)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F354-SS
FUJITSU	MB95F374E(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F374-LQ64

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
FUJITSU	MB95F378E(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F374-LQ64
FUJITSU	MB95F478K(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F478-LQ64
FUJITSU	MB95F564K(SO20)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F204-S
FUJITSU	MB95F572K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F574K(SO8)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F223-S
FUJITSU	MB95F632K(QFP32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F334-Q
FUJITSU	MB95F634K(QFP32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F334-Q
FUJITSU	MB95F636K(QFP32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F334-Q
FUJITSU	MB95F636K(SDIP32)	XAMPU3.EXE	M1-UN-DP48	ADP-MB95F636-SD32
FUJITSU	MB95F696K(LQFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB96F696-LQ48
FUJITSU	MB96F315R(LQFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB96F315-QF48
FUJITSU	MB96F612R(LQFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB96F61X-QF48
FUJITSU	MB96F613R(LQFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB96F61X-QF48
FUJITSU	MB96F615R(LQFP48)	XAMPU3.EXE	M1-UN-DP48	ADP-MB96F61X-QF48
FUJITSU	MB9BF121L(LQFP64)	XAMPU3.EXE	M1-UN-DP48	ADP-MB9BF12X-LQ64
GENCORE	GC87C510A0(DIP14)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510
GENCORE	GC87C510A0(DIP16)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510
GENCORE	GC87C510A0(DIP20)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510
GENCORE	GC87C510A0(DIP8)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510
GENCORE	GC87C510A0(SOP14)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S16
GENCORE	GC87C510A0(SOP16 3.9mm)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S16
GENCORE	GC87C510A0(SOP16 7.5mm)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S20
GENCORE	GC87C510A0(SOP20)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S20
GENCORE	GC87C510A0(SOP8)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S16
GENCORE	GC87C510A1(SOP8)	XASIG.EXE	M1-UN-DP48	ADP-GC87C510-S16
GENCORE	GC87C520(DIP28)	XASIG.EXE	M1-UN-DP48	ADP-GC87C520
GENCORE	GC87C520(SOP28)	XASIG.EXE	M1-UN-DP48	ADP-GC87C520-S28
GENCORE	GC89C591A0(PLCC44)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
GENCORE	GC89C591A0(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-GC89C591-Q100
GENCORE	GC89C591A0(QFP44)	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
GENCORE	GC89C591A0(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-GC89C591-Q64
GENCORE	GC89C591A0(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-GC89C591-Q80
GENCORE	GC89C591A0(SDIP64)	XASIG.EXE	M1-UN-DP48	ADP-GC89C591-SD
GENITOP	GT16G80	XSPROM.EXE	M1-UN-DP48	
GENITOP	GT32G16	XSPROM.EXE	M1-UN-DP48	
GENITOP	GT32G40	XSPROM.EXE	M1-UN-DP48	
GENITOP	GT40G10	XSPROM.EXE	M1-UN-DP48	
GENITOP	GT64G80	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C02	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C04	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C08	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C08A	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C1024	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C128	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C128A	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C16	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C256	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C256A	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C32	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C32A	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C512	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24C64	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT24E64	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C04	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C08	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C128	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C16	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C256	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C32	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25C64	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT25F512	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT34C02A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
GIANTEC	GT34TS02	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C46A(128*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C46A(64*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C66A(256*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C66A(512*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C76(1024*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C76(512*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	GT93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C04B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C08B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C128B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C16B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C256C	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C32C	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS24C64C	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS25C08B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS25C128A	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS25C16B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS25C32B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS25C64B	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS34C02C	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS34TS02	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C46D(128*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C46D(64*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C46E(128*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C46E(64*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C76A(1024*8)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C76A(512*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C86A(1024*16)	XSPROM.EXE	M1-UN-DP48	
GIANTEC	IS93C86A(2048*8)	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD29GL064CAB-G	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
GIGADEVICE	GD25B128C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25B16B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25B32B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25B64B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25B64C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25D05B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25D10B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25D40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25D80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25E16B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25E32B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25E40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25E64B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25E80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25F40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25F80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ128	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ16	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ256C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ32	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ32C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ64B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ64C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25LQ80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25M21B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25M41B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q10	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
GIGADEVICE	GD25Q128B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q128B(SOP16)	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q128C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q128C(SOP16)	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q16	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q16B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q20	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q21B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q32	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q32B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q41B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q512	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q64B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q64C	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25Q80B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25T80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25VQ21B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD25VQ41B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D05	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D10	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D16	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D16B	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D40	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	MD25D80	XSPROM.EXE	M1-UN-DP48	
GIGADEVICE	GD32F103CBTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
GIGADEVICE	GD32F103RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
GIGADEVICE	GD32F103TBUx(QFN36)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F103T-QFN36
GIGADEVICE	GD32F103VBTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
GMT	AUOG1422.59	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
GMT	CM601	X966X.EXE	M1-UN-DP48	CNV-QFN-DIP24
GMT	CM602	X966X.EXE	M1-UN-QN28	
GMT	G1576	X966X.EXE	M1-UN-QN28	
GMT	G1601	X966X.EXE	M1-UN-QN28	
GMT	G1601A	X966X.EXE	M1-UN-QN28	
GMT	G7311C	XASIG.EXE	M1-UN-DP48	ADP-G7311-TSS16
GMT	G7311D-D(2KB)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/-DIP20/-DIP28
GMT	G7311D-D(4KB)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/-DIP20/-DIP28
GMT	HX1572	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
GOAL	VRS1000	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS1100	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS540	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS550	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS560	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS570	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS580	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS700	XPGM52.EXE	M1-UN-DP48/PL44	
GOAL	VRS900	XPGM52.EXE	M1-UN-DP48/PL44	
GREENLIANT	GLS27SF512	XMEM2.EXE	M1-UN-DP48	
GREENLIANT	GLS29EE010	XMEM2.EXE	M1-UN-DP48	
GREENLIANT	GLS29EE512	XMEM2.EXE	M1-UN-DP48	
GREENWICH	GR881	XMEM2.EXE	M1-UN-DP48	
GSSP	GM1003P	XASIG.EXE	M1-UN-DP48	
GSSP	GM120BP	XASIG.EXE	M1-UN-DP48	ADP-GM120-Q64
GTK	AVF35LV040	XMEM2.EXE	M1-UN-DP48	
HANBIT	HMNR5128DV	XMEM2.EXE	M1-UN-DP48	
HIMAX	HX8915-E01	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
HITACHI	27256G	XMEM1.EXE	M1-UN-DP48	
HITACHI	27512G	XMEM1.EXE	M1-UN-DP48	
HITACHI	27512P	XMEM1.EXE	M1-UN-DP48	
HITACHI	27C256AG	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HITACHI	27C256HG	XMEM1.EXE	M1-UN-DP48	
HITACHI	27C512G	XMEM1.EXE	M1-UN-DP48	
HITACHI	4827128(21V)	XMEM1.EXE	M1-UN-DP48	
HITACHI	482764(21V)	XMEM1.EXE	M1-UN-DP48	
HITACHI	4827C64(21V)	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27128AG	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C101A	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C1024	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C301AG	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C4000G	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C4001G	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C4096	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN27C64(21V)	XMEM1.EXE	M1-UN-DP48	
HITACHI	HN58X2402I	XSPROM.EXE	M1-UN-DP48	
HITACHI	HN58X2402SI	XSPROM.EXE	M1-UN-DP48	
HITACHI	HN58X2404SI	XSPROM.EXE	M1-UN-DP48	
HITACHI	HN58X2408I	XSPROM.EXE	M1-UN-DP48	
HITACHI	HD4074008C	XAHMPU.EXE	M1-UN-DP48	ADP-4019
HITACHI	HD4074008F	XAHMPU.EXE	M1-UN-DP48	ADP-4019-Q
HITACHI	HD4074008S	XAHMPU.EXE	M1-UN-DP48	ADP-4019
HITACHI	HD4074019C	XAHMPU.EXE	M1-UN-DP48	ADP-4019
HITACHI	HD4074019F	XAHMPU.EXE	M1-UN-DP48	ADP-4019-Q
HITACHI	HD4074019H	XAHMPU.EXE	M1-UN-DP48	ADP-4019H-Q
HITACHI	HD4074019S	XAHMPU.EXE	M1-UN-DP48	ADP-4019
HITACHI	HD4074054H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
HITACHI	HD4074054S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
HITACHI	HD4074094H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
HITACHI	HD4074094S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
HITACHI	HD4074224S	XAHMPU.EXE	M1-UN-DP48	ADP-4224-SD
HITACHI	HD4074308C	XAHMPU.EXE	M1-UN-DP48	ADP-4308
HITACHI	HD4074308P	XAHMPU.EXE	M1-UN-DP48	ADP-4308
HITACHI	HD4074308S	XAHMPU.EXE	M1-UN-DP48	ADP-4308-SD
HITACHI	HD4074318H	XAHMPU.EXE	M1-UN-DP48	ADP-4318-Q
HITACHI	HD4074318S	XAHMPU.EXE	M1-UN-DP48	ADP-4318-SD
HITACHI	HD4074329C	XAHMPU.EXE	M1-UN-DP48	ADP-4329
HITACHI	HD4074329FS	XAHMPU.EXE	M1-UN-DP48	ADP-4329-Q
HITACHI	HD4074329S	XAHMPU.EXE	M1-UN-DP48	ADP-4329
HITACHI	HD4074339S	XAHMPU.EXE	M1-UN-DP48	ADP-4339
HITACHI	HD4074344FP	XAHMPU.EXE	M1-UN-DP48	ADP-4344-S28
HITACHI	HD4074344S	XAHMPU.EXE	M1-UN-DP48	ADP-4344-SD
HITACHI	HD4074394FP	XAHMPU.EXE	M1-UN-DP48	ADP-4344-S28
HITACHI	HD4074394S	XAHMPU.EXE	M1-UN-DP48	ADP-4344-SD
HITACHI	HD4074408C	XAHMPU.EXE	M1-UN-DP48	ADP-4418
HITACHI	HD4074408F	XAHMPU.EXE	M1-UN-DP48	ADP-4418-Q
HITACHI	HD4074408S	XAHMPU.EXE	M1-UN-DP48	ADP-4418
HITACHI	HD4074418C	XAHMPU.EXE	M1-UN-DP48	ADP-4418
HITACHI	HD4074418F	XAHMPU.EXE	M1-UN-DP48	ADP-4418-Q
HITACHI	HD4074418S	XAHMPU.EXE	M1-UN-DP48	ADP-4418
HITACHI	HD4074459H	XAHMPU.EXE	M1-UN-DP48	ADP-4459-Q
HITACHI	HD4074608FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD4074608H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
HITACHI	HD4074618FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD4074618H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
HITACHI	HD4074629FS	XAHMPU.EXE	M1-UN-DP48	ADP-4629-Q
HITACHI	HD4074629H	XAHMPU.EXE	M1-UN-DP48	ADP-4629-TQ
HITACHI	HD4074629TF	XAHMPU.EXE	M1-UN-DP48	ADP-4629-TQ
HITACHI	HD4074654H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
HITACHI	HD4074654S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
HITACHI	HD4074808FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD4074808H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
HITACHI	HD4074818FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD4074818H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HITACHI	HD4074889H	XAHMPU.EXE	M1-UN-DP48	ADP-4889-Q
HITACHI	HD4074889TE	XAHMPU.EXE	M1-UN-DP48	ADP-4889-TQ
HITACHI	HD4074899TE	XAHMPU.EXE	M1-UN-DP48	ADP-4889-TQ
HITACHI	HD407A4096H	XAHMPU.EXE	M1-UN-DP48	ADP-4669-Q
HITACHI	HD407A4374FT	XAHMPU.EXE	M1-UN-DP48	ADP-4384-S
HITACHI	HD407A4389FT	XAHMPU.EXE	M1-UN-DP48	ADP-4389-S
HITACHI	HD407A4639RF	XAHMPU.EXE	M1-UN-DP48	ADP-4639-Q
HITACHI	HD407A4669H	XAHMPU.EXE	M1-UN-DP48	ADP-4669-Q
HITACHI	HD407C4389FT	XAHMPU.EXE	M1-UN-DP48	ADP-4389-S
HITACHI	HD407L4808FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD407L4808H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
HITACHI	HD407L4818FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
HITACHI	HD407L4818H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
HITACHI	HD647180X0CP	XAHMPU.EXE	M1-UN-DP48	ADP-647180-PL
HITACHI	HD647180X0FS	XAHMPU.EXE	M1-UN-DP48	ADP-647180-Q
HITACHI	HD647180X0P	XAHMPU.EXE	M1-UN-DP48	ADP-647180
HITACHI	HD6472237F	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-QA
HITACHI	HD6472237TE	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-QB
HITACHI	HD6472237TF	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-TQ
HITACHI	HD6472246F	XAHMPU.EXE	M1-UN-DP48	ADP-6472246-Q
HITACHI	HD6472246TF	XAHMPU.EXE	M1-UN-DP48	ADP-6472246-Q
HITACHI	HD6473035F	XAHMPU.EXE	M1-UN-DP48	ADP-6473035-Q
HITACHI	HD6473035TE	XAHMPU.EXE	M1-UN-DP48	ADP-6473035-TQ
HITACHI	HD6473042F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
HITACHI	HD6473042FP	XAHMPU.EXE	M1-UN-DP48	ADP-6473042FP-QA
HITACHI	HD6473042TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
HITACHI	HD6473048F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
HITACHI	HD6473048TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
HITACHI	HD6473214F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
HITACHI	HD6473214P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
HITACHI	HD6473217F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
HITACHI	HD6473217P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
HITACHI	HD6473228CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
HITACHI	HD6473228F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
HITACHI	HD6473228P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325
HITACHI	HD6473238CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
HITACHI	HD6473238F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
HITACHI	HD6473238P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325
HITACHI	HD6473256CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3257-PL
HITACHI	HD6473256F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
HITACHI	HD6473256P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
HITACHI	HD6473257C	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
HITACHI	HD6473257CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3257-PL
HITACHI	HD6473257F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
HITACHI	HD6473257P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
HITACHI	HD6473258CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
HITACHI	HD6473258F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
HITACHI	HD6473258P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325
HITACHI	HD6473278F	XAHMPU.EXE	M1-UN-DP48	ADP-6473278-Q
HITACHI	HD6473294F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3297-Q
HITACHI	HD6473297F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3297-Q
HITACHI	HD6473298P	XAHMPU.EXE	M1-UN-DP48	ADP-6473298-SD
HITACHI	HD6473308CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
HITACHI	HD6473308F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
HITACHI	HD6473332CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3332
HITACHI	HD6473332TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3332-Q
HITACHI	HD6473334F	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-Q
HITACHI	HD6473334TF	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-TQ
HITACHI	HD6473337YCP	XAHMPU.EXE	M1-UN-DP48	ADP-6473337-PL
HITACHI	HD6473337YTF	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-TQ
HITACHI	HD6473378CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
HITACHI	HD6473378F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HITACHI	HD6473378VCP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
HITACHI	HD6473378VF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
HITACHI	HD6473388CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
HITACHI	HD6473388F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
HITACHI	HD6473388VCP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
HITACHI	HD6473388VF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
HITACHI	HD6473434F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434-Q
HITACHI	HD6473434TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434-Q
HITACHI	HD6473614H	XAHMPU.EXE	M1-UN-DP48	ADP-6473614-Q
HITACHI	HD6473644H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3644-Q
HITACHI	HD6473644P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3644-SD
HITACHI	HD6473657H	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-QA
HITACHI	HD6473657W	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-TQ
HITACHI	HD6473657X	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-TQF
HITACHI	HD6473714H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3714-Q
HITACHI	HD6473714P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3714-SD
HITACHI	HD6473724F	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QB
HITACHI	HD6473724H	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QA
HITACHI	HD6473726H	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QA
HITACHI	HD6473802FP	XAHMPU.EXE	M1-UN-DP48	ADP-6473802-QE
HITACHI	HD6473827H	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-Q
HITACHI	HD6473827RH	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-TQ
HITACHI	HD6473827W	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-TQ
HITACHI	HD6473834F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-QA
HITACHI	HD6473834H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-Q
HITACHI	HD6473834X	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-Q
HITACHI	HD6473837F	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-QA
HITACHI	HD6473837H	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-Q
HITACHI	HD6473837X	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-Q
HITACHI	HD6473847H	XAHMPU.EXE	M1-UN-DP48	ADP-6473847-Q
HITACHI	HD6473847RH	XAHMPU.EXE	M1-UN-DP48	ADP-6473847-Q
HITACHI	HD6473867W	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-TQ
HITACHI	HD6473927X	XAHMPU.EXE	M1-UN-DP48	ADP-6473927-TQ
HITACHI	HD6473937X	XAHMPU.EXE	M1-UN-DP48	ADP-6473937-TQ
HITACHI	HD6475208C	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520
HITACHI	HD6475208CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520-PL
HITACHI	HD6475208F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520-Q
HITACHI	HD6475208P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520
HITACHI	HD6475328CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
HITACHI	HD6475328F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
HITACHI	HD6475348CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
HITACHI	HD6475348SF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
HITACHI	HD6475368CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
HITACHI	HD6475368F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
HITACHI	HD6477034F	XAHMPU.EXE	M1-UN-DP48	ADP-6477034F
HITACHI	HD6477042F	XAHMPU.EXE	M1-UN-DP48	ADP-6477042-Q
HITACHI	HD6477043F	XAHMPU.EXE	M1-UN-DP48	ADP-6477043-Q
HITACHI	HD64F2145BFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2145BTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2148AFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2148FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2149TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2149YTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
HITACHI	HD64F2169YVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2169ATE-TQ
HITACHI	HD64F2345TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2345-TQ
HITACHI	HD64F3039F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3039-Q
HITACHI	HD64F3039TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3039-TQ
HITACHI	HD64F3048F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048F-Q
HITACHI	HD64F3048TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048F-Q
HITACHI	HD64F3062ATE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
HITACHI	HD64F3062BF	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
HITACHI	HD64F3062F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HITACHI	HD64F3062TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
HITACHI	HD64F3064F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
HITACHI	HD64F3064TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
HITACHI	HD64F3067F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
HITACHI	HD64F3068F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
HITACHI	HD64F3334F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-Q
HITACHI	HD64F3334TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-TQ
HITACHI	HD64F3337F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-Q
HITACHI	HD64F3337TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-TQ
HITACHI	HD64F3642AH	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
HITACHI	HD64F3642AP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-SD
HITACHI	HD64F3643H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
HITACHI	HD64F3644H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
HITACHI	HD64F3644W	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-TQ
HITACHI	HD64F3664BP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-SD
HITACHI	HD64F3664FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
HITACHI	HD64F3664FY	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q48
HITACHI	HD64F3664H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q
HITACHI	HD64F3687FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
HITACHI	HD64F3687H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
HITACHI	HD64F3694GH	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q
HITACHI	HD64F38024F	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-QB
HITACHI	HD64F38024H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-Q
HITACHI	HD64F38024W	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-TQ
HITACHI	HD64F7044F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7044-Q
HITACHI	HD64F7045F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7045-Q
HITACHI	HD64N3664FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
HOLTEK	HT27C010	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27C020	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27C040	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27C4096	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27C512	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27C512-B(PLCC)	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC010	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC020	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC040	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC4096	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC512	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27LC512-B(PLCC)	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27PC256	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT27PC512	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT28C040	XMEM1.EXE	M1-UN-DP48	
HOLTEK	HT2201	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24C01	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24C02	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24C04	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24C08	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24C16	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC01	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC02	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC02A(SOT23)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC04	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC08	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC16	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC256	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC32	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT24LC64	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT25LC512	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93C46/LC46(*16)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93C46/LC46(*8)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93C56(256*8)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT93C66/LC66(*16)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93C66/LC66(*8)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93LC56(128*16)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93LC56(256*8)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93LC86(1024*16)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	HT93LC86(2048*8)	XSPROM.EXE	M1-UN-DP48	
HOLTEK	BS83B08-3(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	BS83B12-3(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	BS83B16-3(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT32F1755(100PIN)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-LQ100
HOLTEK	HT32F1755(48PIN)	XHT32R.EXE	M1-UN-LQ48	
HOLTEK	HT32F1755(64PIN)	XHT32R.EXE	M1-UN-LQ64	
HOLTEK	HT32F1755(QFN48)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-QN48
HOLTEK	HT32F1765(100PIN)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-LQ100
HOLTEK	HT32F1765(48PIN)	XHT32R.EXE	M1-UN-LQ48	
HOLTEK	HT32F1765(64PIN)	XHT32R.EXE	M1-UN-LQ64	
HOLTEK	HT32F1765(QFN48)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-QN48
HOLTEK	HT32F2755(100PIN)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-LQ100
HOLTEK	HT32F2755(48PIN)	XHT32R.EXE	M1-UN-LQ48	
HOLTEK	HT32F2755(64PIN)	XHT32R.EXE	M1-UN-LQ64	
HOLTEK	HT32F2755(QFN48)	XHT32R.EXE	M1-UN-DP48	ADP-HT32F1755-QN48
HOLTEK	HT36RA4(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT36RA4(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R35(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R35(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R35(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R35(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R35(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R37(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R37(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R37(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT45R37-A(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT45R37-B(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F46E(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F46E(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F47E(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F47E(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F47E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F48E(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46F49E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R01-1(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R01B(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R01N(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R02B(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R02N(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R064(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R064(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R066(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R066(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R066(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R066(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R0662(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R0662(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R0662(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT46R067(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R067(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R067(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT46R12(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R14(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R22(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R23(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R23(28PIN)	XHT48R.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT46R232(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R232(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT46R232(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R24(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R24(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT46R24(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R24(LQFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT46R46(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R46(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R46(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R47(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R47(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R47(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R48(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R49(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R51(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R51(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R51A(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R51A(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R52(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R52(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R52A(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R53A(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R54(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R54A(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46R62(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R63(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT46R63(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R64(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT46R64(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R65(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT46R65(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46R652(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT46R652-QF100
HOLTEK	HT46RB50(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46RU22(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46RU232(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT46RU232(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT46RU232(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU24(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT46RU24(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU25(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT46RU25(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU25(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU26(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU66(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT46RU66-Q100
HOLTEK	HT46RU66(52PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT46RU66-QF52
HOLTEK	HT46RU66(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT46RU67(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT46RU66-Q100
HOLTEK	HT47R20A-1(64PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-Q64
HOLTEK	HT48E06(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48E06(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48E30(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48E50(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48E50(48PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT48F06E(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F06E(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F06E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F10E(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F30E(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F30E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F50E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48F50E(48PIN)	XHT48R.EXE	M1-UN-SS48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT48F50E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT48F70E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT48F70E(64PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-Q64
HOLTEK	HT48R01B(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R02B(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R02M(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R02N(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R05A-1(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R05A-1(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R063(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R063B(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R064(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R064(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R064(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R064B(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R065(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R065(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R065(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R065(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R065B(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R066(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R066(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R066(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R0662(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R0662(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R0662(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT48R067(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R067(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R067(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT48R06A-1(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R06A-1(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R06A-1(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R07A-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R08A-1(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R08A-1(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R08V(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT48R09A-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R0AA-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R0AA-1(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R10A(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R10A-1(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R10A-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R11-F-0(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R12(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R12-F(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30A-1(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30A-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R30A-1(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R31(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R31(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R31(32PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R32(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R32(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R50(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R50(40PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R502(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT48R50A-1(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R50A-1(40PIN)	XHT48R.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT48R50A-1(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT48R50A-1(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT48R51(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R52(52PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF52
HOLTEK	HT48R53(52PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF52
HOLTEK	HT48R54A(52PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF52
HOLTEK	HT48R70A-1(40PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48R70A-1(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT48R70A-1(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT48R70A-1(64PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-Q64
HOLTEK	HT48RA0-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA0-2(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA0-3(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA0-6(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA0A(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA0A(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA1(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA3(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RA5(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RB8(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT48RB8(48PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT48RU80(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT49R10A-1(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT49R30A-1(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT49R30A-1(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT49R50A-1(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT49R50A-1(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT49R50A-1(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT49R50A-1(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT49R70A-1(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT49R70A-1(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT49RA1(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT49RU80(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT49RU80-Q100
HOLTEK	HT66F04(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F13(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F20(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F30(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F30(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F30(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F40(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F40(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT66F40(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F50(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT66F50(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT66F50(SSOP48)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT66FU40(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT66FU40(SSOP48)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT67F40(48PIN)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT67F50(48PIN)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT67F50(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT68F03(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F04(10PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F13(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F30(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F30(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F30(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F30-1(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F40(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F50(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT68F50(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT68F50(SSOP48)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT68FB540(MLF20)	XHT48R.EXE	M1-UN-ML20	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT68FU40(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT68FU40(SSOP48)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT68FU50(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT81R36(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82A523R(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82A523R(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT82A525R(48PIN)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT82A821R(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82A822R(48PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82A832R(48PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82A834R(QFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT82A834R(SSOP48)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82A836R(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT82A836-QF100
HOLTEK	HT82A836R(80PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT82A836-QF80
HOLTEK	HT82A850R(48PIN)	XHT48R.EXE	M1-UN-TQ48	
HOLTEK	HT82A851R(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40R(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40R(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40R(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82B40R(MLF20)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40R(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40R(QFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT82B40RE(MLF20)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B40REW(MLF40)	XHT48R.EXE	M1-UN-ML40	
HOLTEK	HT82B42R(16PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82B42R(MLF20)	XHT48R.EXE	M1-UN-ML20	
HOLTEK	HT82D20R(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82D22R(48PIN)	XHT48R.EXE	M1-UN-BG68/A	TOP-UN-QN48/A
HOLTEK	HT82D40REW(MLF40)	XHT48R.EXE	M1-UN-ML40	
HOLTEK	HT82J30R(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82J30R(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT82J97E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82J97E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E(32PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E(40PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K68E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82K68E(MLF32)	XHT48R.EXE	M1-UN-BG68	TOP-AVR-ML32
HOLTEK	HT82K68E-L(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K68E-L(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K68E-L(QFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT82K70E-L(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K70E-L(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K70E-L(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K70E-L(QFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT82K72E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K72E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82K73E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K73E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82K73EE(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K74EE(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K75RE(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K75REW(64PIN)	XHT48R.EXE	M1-UN-LQ64	
HOLTEK	HT82K76E-L(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K76E-L(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K76E-L(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K94E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K94E(48PIN)	XHT48R.EXE	M1-UN-SS48/LQ48	
HOLTEK	HT82K94E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82K95E(20PIN)	XHT48R.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HOLTEK	HT82K95E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K95E(32PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K95E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K95E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82K95EE(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K96E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K96E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K96E(40PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82K96E(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT82K96E(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT82M72E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M72E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M73E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M73E(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M75RE(MLF32)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M75REW(MLF40)	XHT48R.EXE	M1-UN-ML40	
HOLTEK	HT82M99E(18PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M99E(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M99EE(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9AE(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9AE(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9AEE(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9BE(20PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9BE(24PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT82M9BE(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT83F10(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT83F20(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT83F40(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT83F60(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT83F80(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT83R074(20PIN)	XHT48R.EXE	M1-UN-SS34	
HOLTEK	HT83R074(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT86BR10(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT86BR10(SOP28-B)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT86BR10(SSOP24-A)	XHT48R.EXE	M1-UN-SS34	
HOLTEK	HT86BR10(SSOP24-B)	XHT48R.EXE	M1-UN-SS34	
HOLTEK	HT86BR30(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT86BR30(44PIN)	XHT48R.EXE	M1-UN-QF44	
HOLTEK	HT86BR60(SOP28-A)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT86BR60(SOP28-B)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT95A10P(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT95A20P(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT95A20P(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT95A30P(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT95A30P(48PIN)*	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT95A40P(64PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-Q64
HOLTEK	HT95C30P(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8B-QF100
HOLTEK	HT95C30P(128PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF128
HOLTEK	HT95C40P(128PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF128
HOLTEK	HT95L00P(56PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-SSOP56
HOLTEK	HT95L20P(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT95L30P(100PIN)	XHT48R.EXE	M1-UN-DP48	ADP-HT8A-QF100
HOLTEK	HT95R22(28PIN)	XHT48R.EXE	M1-UN-DP48	
HOLTEK	HT95R33(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT95R34(48PIN)	XHT48R.EXE	M1-UN-SS48	
HOLTEK	HT98R068(QFP48)	XHT48R.EXE	M1-UN-LQ48	
HOLTEK	HT98R068(QFP64)	XHT48R.EXE	M1-UN-LQ64	
HYNIX	27C64	XMEM1.EXE	M1-UN-DP48	
HYNIX	HY29DL162BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29DL162TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29DL163TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29DS162BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HYNIX	HY29DS162TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29DS163BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29DS163TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F002T	XMEM2.EXE	M1-UN-DP48	
HYNIX	HY29F040/A	XMEM2.EXE	M1-UN-DP48	
HYNIX	HY29F080	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
HYNIX	HY29F400ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F400ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F800ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29F800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV160B-F	XA28F2.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
HYNIX	HY29LV160BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV320BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV320TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HY29LV800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYNIX	HMS80C701	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS81032ET 28-pin	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS81032TL 24-pin	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS81032TL 28-pin	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS81504T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81504-SD
HYNIX	HMS81508T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
HYNIX	HMS81508T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
HYNIX	HMS81508T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYNIX	HMS81516BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYNIX	HMS81516T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
HYNIX	HMS81516T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
HYNIX	HMS81516T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYNIX	HMS81524BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYNIX	HMS82524T	XAMPU3.EXE	M1-UN-DP48	ADP-82524T-SD
HYNIX	HMS84512T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
HYNIX	HMS84524T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
HYNIX	HMS87C1102	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1102A	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1104A	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1201	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1202	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1202A	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1204A	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1404	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1408	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS87C1416B	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97C51	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97C52	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97C54	XPGM51.EXE	M1-UN-DP48/PL44	
HYNIX	HMS97C56	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97C58	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97L51	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97L52	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97L54	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97L56	XPGM51.EXE	M1-UN-DP48	
HYNIX	HMS97L58	XPGM51.EXE	M1-UN-DP48/PL44	
HYUNDAI	27C64	XMEM1.EXE	M1-UN-DP48	
HYUNDAI	HY29DL163BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29DL163TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F002T	XMEM2.EXE	M1-UN-DP48	
HYUNDAI	HY29F040/A	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
HYUNDAI	HY29F080	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
HYUNDAI	HY29F400ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F400ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29F800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29LV160BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY29LV160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
HYUNDAI	HY93C46	XSPROM.EXE	M1-UN-DP48	
HYUNDAI	HMS80C701	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS81504T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81504-SD
HYUNDAI	HMS81508T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
HYUNDAI	HMS81508T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
HYUNDAI	HMS81508T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYUNDAI	HMS81516BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYUNDAI	HMS81516T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
HYUNDAI	HMS81516T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
HYUNDAI	HMS81516T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYUNDAI	HMS81524BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
HYUNDAI	HMS84512T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
HYUNDAI	HMS84524T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
HYUNDAI	HMS87C1102	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1102A	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1104A	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1201	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1202	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1202A	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1204A	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1404	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS87C1408	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97C51	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97C52	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97C54	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97C56	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97C58	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97L51	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97L52	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97L54	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97L56	XPGM51.EXE	M1-UN-DP48	
HYUNDAI	HMS97L58	XPGM51.EXE	M1-UN-DP48	
ICE	ICE27C512	XMEM1.EXE	M1-UN-DP48	
ICE	ICE27LC512	XMEM1.EXE	M1-UN-DP48	
ICE	ICE37C512(PLCC)	XMEM1.EXE	M1-UN-DP48	
ICE	ICE37LC512(PLCC)	XMEM1.EXE	M1-UN-DP48	
ICE	ICE28LF010	XMEM2.EXE	M1-UN-DP48	
ICE	ICE29LF512	XMEM2.EXE	M1-UN-DP48	
ICE	ICE25P05	XSPROM.EXE	M1-UN-DP48	
ICSI	IC89C51A	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89C52A	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89C54	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89C58	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89C64	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89E54	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89E58	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89E64	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IC89LV52A	XPGM52.EXE	M1-UN-DP48/PL44	
ICSI	IS89C52	XPGM52.EXE	M1-UN-DP48	
ICT	27CX010	XMEM1.EXE	M1-UN-DP48	
ICT	27CX256	XMEM1.EXE	M1-UN-DP48	
ICT	27CX322	XBPPGM.EXE	M1-UN-DP48	
ICT	27CX641	XBPPGM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ICT	27CX642	XBPPGM.EXE	M1-UN-DP48	
ICT	93C46	XSPROM.EXE	M1-UN-DP48	
ICT	93C46A	XSPROM.EXE	M1-UN-DP48	
ICT	93C56A	XSPROM.EXE	M1-UN-DP48	
ICT	93C66A	XSPROM.EXE	M1-UN-DP48	
ICT	93CX46	XSPROM.EXE	M1-UN-DP48	
ICT	93CX56	XSPROM.EXE	M1-UN-DP48	
ICT	93CX66	XSPROM.EXE	M1-UN-DP48	
ICT	PA7024	XPLD2.EXE	M1-UN-DP48	
ICT	PA7540	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL18CV8	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL18CV8(DIP20)	XPLD2.EXE	M1-UN-DP48	ADP-18CV8-DIP20
ICT	PEEL18CV8Z	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL18LV8Z	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10A	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10A+	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10A++	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10AZ	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10AZ+	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22CV10AZ++	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22LV10AZ	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22LV10AZ+	XPLD2.EXE	M1-UN-DP48	
ICT	PEEL22LV10AZ++	XPLD2.EXE	M1-UN-DP48	
ILITEK	M2VQN000-DFVSEN:0	XPGM52.EXE	M1-NUC-LQ48	
ILITEK	M2VQN000-DFVSEN:1	XPGM52.EXE	M1-NUC-LQ48	
ILITEK	M2i	XPGM52.EXE	M1-UN-ML36	
ILITEK	M2j	XPGM52.EXE	M1-UN-ML36	
ILITEK	M2k	XPGM52.EXE	M1-UN-ML36	
IML	IML1991ID	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
IML	IML7972	X966X.EXE	M1-UN-DP48	CNV-TDFN-DIP8
IML	IML7978	X966X.EXE	M1-UN-DP48	CNV-TDFN-DIP8
IML	IML7991	XACC2430.EXE	M1-UN-DP48	ADP-G1422-MLF32
IMT	IM29F001T	XMEM2.EXE	M1-UN-DP48	
IMT	IM29F002B	XMEM2.EXE	M1-UN-DP48	
IMT	IM29F002T	XMEM2.EXE	M1-UN-DP48	
IMT	IM29F004B	XMEM2.EXE	M1-UN-DP48	
IMT	IM29F004T	XMEM2.EXE	M1-UN-DP48	
IMT	IM29LV400T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INFINEON	HYF31CS256-B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INFINEON	PMA5105	XASIG.EXE	M1-UN-DP48	ADP-PMA71XX-TSS38
INFINEON	PMA7105	XASIG.EXE	M1-UN-DP48	ADP-PMA71XX-TSS38
INFINEON	PMA7110	XASIG.EXE	M1-UN-DP48	ADP-PMA71XX-TSS38
INFINEON	PX3143H	XASIG.EXE	M1-UN-DP48	ADP-PX3143-QN40
INFINEON	PX3743D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX3746D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX3746H	XASIG.EXE	M1-UN-DP48	ADP-PX3746-QN48
INFINEON	PX3847D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX3895D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX3895E	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX3897E	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX8143H	XASIG.EXE	M1-UN-DP48	ADP-PX3143-QN40
INFINEON	PX8746H	XASIG.EXE	M1-UN-DP48	ADP-PX3746-QN48
INFINEON	PX8847D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48V2
INFINEON	PX8895E	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX8897D	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	PX8897E	XASIG.EXE	M1-UN-DP48	ADP-PX889X-QN48/-QN48V2
INFINEON	SAB-C501G-1E	XPGM51.EXE	M1-UN-DP48	
INFINEON	SAB-C504-2E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
INFINEON	SAB-C505CA-4E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
INFINEON	SAB-C508-4E(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-C508-Q
INFINEON	SAB-C508-4E(SDIP64)	XASIG.EXE	M1-UN-DP48	ADP-C508-SD
INFINEON	SAB-C540U(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-C541-PL

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INFINEON	SAB-C540U(SDIP52)	XASIG.EXE	M1-UN-DP48	ADP-C541-SD
INFINEON	SAB-C541U(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-C541-PL
INFINEON	SAB-C541U(SDIP52)	XASIG.EXE	M1-UN-DP48	ADP-C541-SD
INFINEON	SAF-C164CI-8E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
INFINEON	SAF-C164CI-8E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
INFINEON	SAF-C504-2E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
INFINEON	SAF-C505CA-4E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
INFINEON	SAF-C505L-4E	XASIG.EXE	M1-UN-DP48	ADP-C505L-Q
INFINEON	SAF-C515C-8E	XASIG.EXE	M1-UN-DP48	ADP-C515C-Q
INFINEON	SAF-XC164CM-16F40F(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF64V2
INFINEON	SAF-XC164CM-8F40F(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF64V2
INFINEON	SAF-XC164CS-16F(TQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF100
INFINEON	SAF-XC164CS-32F(TQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF100
INFINEON	SAF-XC164S-32F(TQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF100
INFINEON	SAF-XC822M-1FRI(TSSOP16)	XAXC164.EXE	M1-UN-DP48	ADP-XC822-TS16
INFINEON	SAF-XC822MT-1FRI(TSSOP16)	XAXC164.EXE	M1-UN-DP48	ADP-XC822-TS16
INFINEON	SAF-XC824MT-1FGI(SOP20)	XAXC164.EXE	M1-UN-DP48	ADP-XC824-S20
INFINEON	SAF-XC835MT-2FGI(SOP24)	XAXC164.EXE	M1-UN-DP48	ADP-XC835-SO24
INFINEON	SAF-XC836M-2FRI(TSSOP28)	XAXC164.EXE	M1-UN-DP48	ADP-XC836-SS28
INFINEON	SAF-XC836MT-2FRI(TSSOP28)	XAXC164.EXE	M1-UN-DP48	ADP-XC836-SS28
INFINEON	SAF-XC866-4FR(TSSOP38)	XAXC164.EXE	M1-UN-DP48	ADP-XC866-SS38
INFINEON	SAF-XC866-4FR(TSSOP38)*	XAXC164.EXE	M1-UN-DP48	ADP-XC866-SS38V2
INFINEON	SAF-XC878-16FFI3V3(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF64
INFINEON	SAF-XC878CM-13FFI5V(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF64
INFINEON	SAF-XC878M-16FFI5V(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF64
INFINEON	SAF-XC888CM-8FFI5V(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF64
INFINEON	SAF-XE162FL-12F80L(LQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC2234L-QF64
INFINEON	SAF-XE164G-24F66L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAF-XE167G-96F(LQFP144)	XAXC164.EXE	M1-UN-DP48	ADP-XC2000-QF144
INFINEON	SAK-C164CI-8E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
INFINEON	SAK-C164CI-8E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
INFINEON	SAK-C164CM-4E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CM/SM-TQ
INFINEON	SAK-C164CM-4E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CM/SM-TQ
INFINEON	SAK-C505CA-4E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
INFINEON	SAK-XC164CM-16F40F(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF64V2
INFINEON	SAK-XC164CM-8F(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF64
INFINEON	SAK-XC164CM-8F(TQFP64)*	XAXC164.EXE	M1-UN-DP48	ADP-XC164-QF64V2
INFINEON	SAK-XC2060-96F80L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAK-XC2224L-20F66V(VQFN48)	XAXC164.EXE	M1-UN-DP48	ADP-XC2224L-QN48
INFINEON	SAK-XC2234L-20F66L(LQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC2234L-QF64
INFINEON	SAK-XC2264-56F66L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAK-XC2265N-40F80L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAK-XC2268N-40F80L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAK-XC2287-96F(LQFP144)	XAXC164.EXE	M1-UN-DP48	ADP-XC2000-QF144
INFINEON	SAK-XC2336B-40F(LQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC2336B-QF64
INFINEON	SAK-XC2364B-40F80L(LQFP100)	XAXC164.EXE	M1-UN-DP48	ADP-XE164X-QF100
INFINEON	SAK-XC864L-1FRI5V(TSSOP20)	XAXC164.EXE	M1-UN-DP48	ADP-XC864-SS20
INFINEON	SAK-XC866-4FR(TSSOP38)	XAXC164.EXE	M1-UN-DP48	ADP-XC866-SS38
INFINEON	SAK-XC866-4FR(TSSOP38)*	XAXC164.EXE	M1-UN-DP48	ADP-XC866-SS38V2
INFINEON	SAK-XC888CM-8FFA5V(TQFP48)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF48
INFINEON	SAK-XC888CM-8FFA5V(TQFP64)	XAXC164.EXE	M1-UN-DP48	ADP-XC88X-QF64
INFINEON	XMC1302-T038X0200	XAXC164.EXE	M1-UN-DP48	CNV-TSSOP-DIP38
INTEL	27010	XMEM1.EXE	M1-UN-DP48	
INTEL	2764A	XMEM1.EXE	M1-UN-DP48	
INTEL	27C020	XMEM1.EXE	M1-UN-DP48	
INTEL	27C040	XMEM1.EXE	M1-UN-DP48	
INTEL	27C080	XMEM1.EXE	M1-UN-DP48	
INTEL	D27128(21V)	XMEM1.EXE	M1-UN-DP48	
INTEL	D27128A	XMEM1.EXE	M1-UN-DP48	
INTEL	D27210/C210	XMEM1.EXE	M1-UN-DP48	
INTEL	D27256	XMEM1.EXE	M1-UN-DP48	
INTEL	D2732A(21V)	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	D27512	XMEM1.EXE	M1-UN-DP48	
INTEL	D2764(21V)	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C010	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C128	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C220	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C240	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C256	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C400	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C512	XMEM1.EXE	M1-UN-DP48	
INTEL	D27C513	XMEM1.EXE	M1-UN-DP48	
INTEL	D27HC010	XMEM1.EXE	M1-UN-DP48	
INTEL	D68C257	XMEM1.EXE	M1-UN-DP48	
INTEL	D87C256	XMEM1.EXE	M1-UN-DP48	
INTEL	D87C257	XMEM1.EXE	M1-UN-DP48	
INTEL	28F001BX-B	XMEM2.EXE	M1-UN-DP48	
INTEL	28F001BX-T	XMEM2.EXE	M1-UN-DP48	
INTEL	28F010	XMEM2.EXE	M1-UN-DP48	
INTEL	28F020	XMEM2.EXE	M1-UN-DP48	
INTEL	28F256	XMEM2.EXE	M1-UN-DP48	
INTEL	28F256A	XMEM2.EXE	M1-UN-DP48	
INTEL	28F512	XMEM2.EXE	M1-UN-DP48	
INTEL	DA28F016SA	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DA28F016SV	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DA28F320J5	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DA28F320J5A	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DA28F640J5A	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DE28F800F3-T	XA28F2.EXE	M1-UN-DP48	ADP-28F800F3-SS
INTEL	DT28F016SA	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F160F3-B	XA28F2.EXE	M1-UN-DP48	ADP-28F800F3-SS
INTEL	DT28F160F3-T	XA28F2.EXE	M1-UN-DP48	ADP-28F800F3-SS
INTEL	DT28F160S3	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F160S5	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F320J5A	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F320S3	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F320S5	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F640J5A	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
INTEL	DT28F800F3-B	XA28F2.EXE	M1-UN-DP48	ADP-28F800F3-SS
INTEL	DT28F800F3-T	XA28F2.EXE	M1-UN-DP48	ADP-28F800F3-SS
INTEL	E28F002BC-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F002BC-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F002BL-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F002BL-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F002BV-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F002BV-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004B3-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004B3-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004B5-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004B5-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BE-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BE-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BL-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BL-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BV-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004BV-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004S3	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004S5	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F004SC	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008B3-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008B3-BA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008B3-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008B3-TA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008BV-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	E28F008BV-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008S3	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008S5	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008SA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008SA-L	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F008SC	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016B3-B	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016B3-BA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016B3-T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016B3-TA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016C3-BA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016C3-TA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016S3	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016S5	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016SA	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F016SC	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	E28F016SV	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F128J3A	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F200B5-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F200B5-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F200BV-B	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F200BV-T	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F200CV-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F200CV-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F320J3A	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F320J5	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F320J5A	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400B5-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F400B5-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F400BL-B	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400BL-T	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400BV-B	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400BV-T	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400BX-B	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400BX-T	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F400CV-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F400CV-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F640J3A	XA28F2.EXE	M1-UN-TS56	
INTEL	E28F800B5-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F800B5-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F800CE-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F800CE-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F800CV-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E28F800CV-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	E82802AA	XMEM2.EXE	M1-UN-DP48	
INTEL	E82802AB	XMEM2.EXE	M1-UN-DP48	
INTEL	E82802AC	XMEM2.EXE	M1-UN-DP48	
INTEL	F28F008SA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	F28F008SA-L	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	GE28F128K18C	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	GE28F128K3C	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	GE28F128L18B	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GE28F128L18T	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GE28F128W18-B	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128W3-BG56
INTEL	GE28F128W18-BD	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	GE28F128W18-T	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128W3-BG56
INTEL	GE28F128W18-TD	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	GE28F128W30-B	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128W3-BG56
INTEL	GE28F128W30-T	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128W3-BG56
INTEL	GE28F160B3-BC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160B3-BD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160B3-TC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	GE28F160B3-TD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160C3-BC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160C3-BD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160C3-TC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F160C3-TD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F256K18C	XA28F2.EXE	M1-UN-BG68	TOP-GE28F256-BG79
INTEL	GE28F256K3C	XA28F2.EXE	M1-UN-BG68	TOP-GE28F256-BG79
INTEL	GE28F256L18B	XA28F2.EXE	M1-UN-BG68	TOP-28F256L18-BG79
INTEL	GE28F256L18T	XA28F2.EXE	M1-UN-BG68	TOP-28F256L18-BG79
INTEL	GE28F320B3-BC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320B3-BD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320B3-TC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320B3-TD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320C3-BC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320C3-BD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320C3-TC	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F320C3-TD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GE28F640L18B	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GE28F640L18T	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GE28F640L30B	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GE28F640L30T	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	GT28F016B3-BA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F016B3-TA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F016C3-BA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F016C3-TA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160B3-BA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160B3-TA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160C2-BA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160C2-TA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160C3-BA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	GT28F160C3-TA	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	JS28F128J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F128J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F128P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F128P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F128P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F128P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F160C3-BD	XA28F2.EXE	M1-UN-TS48A/TS56	
INTEL	JS28F160C3-TD	XA28F2.EXE	M1-UN-TS48A/TS56	
INTEL	JS28F256J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F256J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F256P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F256P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F256P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F256P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F320C3-BD	XA28F2.EXE	M1-UN-TS48A/TS56	
INTEL	JS28F320C3-TD	XA28F2.EXE	M1-UN-TS48A/TS56	
INTEL	JS28F320J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F320J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	JS28F640P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	JS48F4400P0TB00	XA28F2.EXE	M1-UN-TS56	
INTEL	JS48F4400P0VB00	XA28F2.EXE	M1-UN-TS56	
INTEL	JS48F4400P0VT00	XA28F2.EXE	M1-UN-TS56	
INTEL	N82802AA	XMEM2.EXE	M1-UN-DP48	
INTEL	N82802AB	XMEM2.EXE	M1-UN-DP48	
INTEL	N82802AC	XMEM2.EXE	M1-UN-DP48	
INTEL	PA28F002BC-T	XA28F2.EXE	M1-UN-PS44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	PA28F008S3	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F008S5	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F008SA	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F008SC	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F016S3	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F016SC	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F200B5-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F200B5-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F200BV-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F200BV-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F200BX-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F400B5-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F400B5-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F400BV-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F400BV-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F400BX-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F800B5-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F800B5-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F800BV-B	XA28F2.EXE	M1-UN-PS44	
INTEL	PA28F800BV-T	XA28F2.EXE	M1-UN-PS44	
INTEL	PC28F128J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F128J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F128P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F128P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F128P33B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	PC28F128P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	PC28F160C3-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F160C3-TD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F256J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F256K3-BG64/A
INTEL	PC28F256J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F256P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F256P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F256P33B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F256P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F320C3-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F320J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F320J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F640J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F640J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F640P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F640P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC28F640P33B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	PC28F640P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	PC48F4400P0TB00	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC48F4400P0VB00	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PC48F4400P0VT00	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	PF38F1030C0ZTL0	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
INTEL	PF38F1030W0YTQE	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PF38F1030W0ZTQ0	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PF38F2030W0YBQ2	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PF38F2030W0YTQE	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PF38F2040W0YTQ0	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PF48F2000P0ZBQ0	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
INTEL	PH28F128L18B	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	PH28F128L18T	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	PH28F128W18-BD	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	PH28F128W18-TD	XA28F2.EXE	M1-UN-BG68	TOP-GE28F128-BG56
INTEL	PH28F160C3-BD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	PH28F160C3-TD	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
INTEL	PH28F256L18B	XA28F2.EXE	M1-UN-BG68	TOP-28F256L18-BG79
INTEL	PH28F320W18-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	PH28F320W18-BE	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	PH28F640W18-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
INTEL	RC28F128J3A	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128K18C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128K3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F128P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	RC28F160C3-BA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160C3-BC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160C3-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160C3-TA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160C3-TC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160C3-TD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160F3-B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F160F3-T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F256J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F256K3-BG64/A
INTEL	RC28F256J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F256K18C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F256K3-BG64/A
INTEL	RC28F256K3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F256K3-BG64/A
INTEL	RC28F256P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F256P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F256P33B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F256P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320C3-BC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320C3-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320C3-TC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320C3-TD	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320J3A	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F320J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640C3-BC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640C3-TC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640J3A	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640J3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640J3D	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640K18C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640K3C	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640P30B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640P30T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F640P33B	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	RC28F640P33T	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
INTEL	RC28F800C3-BA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC28F800C3-TA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC48F4400P0VB00	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RC48F4400P0VT00	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
INTEL	RD28F1602C3-B/BD	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
INTEL	RD28F1602C3-T/TD	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
INTEL	RD28F1604C3-BD	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
INTEL	RD28F1604C3-TD	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
INTEL	TB28F008SA	XA28F2.EXE	M1-UN-PS44	
INTEL	TB28F400BV-B	XA28F2.EXE	M1-UN-PS44	
INTEL	TE28F016B3-TA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	TE28F016C3-TA	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
INTEL	TE28F128J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F128J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F128P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F128P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F128P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F128P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F160B3-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	TE28F160B3-BC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-BD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160B3-TD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C18-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C18-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-BC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-BD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160C3-TD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F160F3-B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F160F3-T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F160S3	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F160S5	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F256J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F256P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F256P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F256P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F256P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F320B3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320B3-BC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320B3-BD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320B3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320B3-TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320B3-TD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-BC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-BD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320C3-TD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F320J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F320J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F400B3-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F400B3-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F640C3-BC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F640C3-TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F640J3C	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F640J3D	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F640P30B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F640P30T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F640P33B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F640P33T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F800B3-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800B3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800B3-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800B3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800C3-BA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800C3-TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
INTEL	TE28F800F3-B	XA28F2.EXE	M1-UN-TS56	
INTEL	TE28F800F3-T	XA28F2.EXE	M1-UN-TS56	
INTEL	TE48F4400P0VB00	XA28F2.EXE	M1-UN-TS56	
INTEL	TE48F4400P0VT00	XA28F2.EXE	M1-UN-TS56	
INTEL	QB25F016S33B(SOP8)	XSPROM.EXE	M1-UN-DP48	
INTEL	QB25F016S33T(SOP8)	XSPROM.EXE	M1-UN-DP48	
INTEL	QB25F160S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QB25F160S33T(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QB25F320S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	QB25F320S33T(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QB25F640S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F016S33B(SOP8)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F160S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F160S33T(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F320S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F320S33T(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	QH25F640S33B(SOP16)	XSPROM.EXE	M1-UN-DP48	
INTEL	8742	XAMPU3.EXE	M1-D8749-DP40	
INTEL	8748H	XAMPU3.EXE	M1-D8749-DP40	
INTEL	8749H	XAMPU3.EXE	M1-D8749-DP40	
INTEL	8751BH	XPGM51.EXE	M1-UN-DP48	
INTEL	8751H	XPGM51.EXE	M1-UN-DP48	
INTEL	8752BH	XPGM51.EXE	M1-UN-DP48	
INTEL	8755A	XPGM51.EXE	M1-UN-DP48	
INTEL	8795BH	XAMPU3.EXE	M1-UN-DP48	ADP-8798
INTEL	8796BH(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	8796BH(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	8796JC(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	8796JC(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	8797BH(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	8797BH(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	8797JF(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	8797JF(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	8798	XAMPU3.EXE	M1-UN-DP48	ADP-8798
INTEL	87C151SA	XPGM51.EXE	M1-UN-DP48	
INTEL	87C151SB	XPGM51.EXE	M1-UN-DP48	
INTEL	87C194(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C198
INTEL	87C194(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87C196CA	XAMPU3.EXE	M1-UN-DP48	ADP-87C196CA-PL
INTEL	87C196CB(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196CB-PL
INTEL	87C196CB(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196CB-Q
INTEL	87C196JQ	XAMPU3.EXE	M1-UN-DP48	ADP-87C196JR
INTEL	87C196JR	XAMPU3.EXE	M1-UN-DP48	ADP-87C196JR
INTEL	87C196JT	XAMPU3.EXE	M1-UN-DP48	ADP-87C196JR
INTEL	87C196JV	XAMPU3.EXE	M1-UN-DP48	ADP-87C196JR
INTEL	87C196KB(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	87C196KB(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	87C196KB(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87C196KC(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	87C196KC(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	87C196KC(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87C196KC(SQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-SQ
INTEL	87C196KD(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	87C196KD(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	87C196KD(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87C196KQ	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KR
INTEL	87C196KR	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KR
INTEL	87C196KS	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KR
INTEL	87C196KT	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KR
INTEL	87C196MC(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC
INTEL	87C196MC(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC-Q
INTEL	87C196MC(SDIP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC-SD
INTEL	87C196MD(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC
INTEL	87C196MD(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC-Q
INTEL	87C196MH(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC
INTEL	87C196MH(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196MC-Q
INTEL	87C196NQ	XAMPU3.EXE	M1-UN-DP48	ADP-87C196NT
INTEL	87C196NT	XAMPU3.EXE	M1-UN-DP48	ADP-87C196NT
INTEL	87C198(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-87C198
INTEL	87C198(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87C251SA	XPGM51.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
INTEL	87C251SB(A-step)	XPGM51.EXE	M1-UN-DP48	
INTEL	87C251SB(B-step)	XPGM51.EXE	M1-UN-DP48	
INTEL	87C251SP	XPGM51.EXE	M1-UN-DP48	
INTEL	87C251SQ	XPGM51.EXE	M1-UN-DP48	
INTEL	87C252	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51FA	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51FB	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51FC	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51GB OTP	XASIG.EXE	M1-UN-DP48	ADP-51GB
INTEL	87C51RA	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51RB	XPGM51.EXE	M1-UN-DP48	
INTEL	87C51RC	XPGM51.EXE	M1-UN-DP48	
INTEL	87C52	XPGM51.EXE	M1-UN-DP48	
INTEL	87C54	XPGM51.EXE	M1-UN-DP48	
INTEL	87C58	XPGM51.EXE	M1-UN-DP48	
INTEL	87L196KD(PGA)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PGA
INTEL	87L196KD(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-8796PLCC
INTEL	87L196KD(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-87C196KC-Q
INTEL	87L51FA	XPGM51.EXE	M1-UN-DP48	
INTEL	87L51FB	XPGM51.EXE	M1-UN-DP48	
INTEL	87L51FC	XPGM51.EXE	M1-UN-DP48	
INTEL	87L52	XPGM51.EXE	M1-UN-DP48	
INTEL	87L54	XPGM51.EXE	M1-UN-DP48	
INTEL	87L58	XPGM51.EXE	M1-UN-DP48	
INTEL	KU87C51SL	XASIG.EXE	M1-UN-DP48	ADP-51SL-KU
INTEL	SB87C51SL	XASIG.EXE	M1-UN-DP48	ADP-51SL-SB
INTEL	MD5C060	XEPLD1.EXE	M1-UN-DP48	
INTEL	N5C060	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
INTERSIL	X5323	XSPROM.EXE	M1-UN-DP48	
INTERSIL	ISL24833	XAMPU6.EXE	M1-UN-DP48	ADP-ISL24833-QN32
INTERSIL	ISL24867	XAMPU6.EXE	M1-UN-DP48	ADP-ISL24867-QN28
INTERSIL	ISL6388(QFN40)	XAISL.EXE	M1-UN-DP48	ADP-ISL6388-QN40
ISSI	IS27C020	XMEM1.EXE	M1-UN-DP48	
ISSI	IS27HC010	XMEM1.EXE	M1-UN-DP48	
ISSI	IS27HC020	XMEM1.EXE	M1-UN-DP48	
ISSI	IS27HC256	XMEM1.EXE	M1-UN-DP48	
ISSI	IS27HC512	XMEM1.EXE	M1-UN-DP48	
ISSI	IS27LV010	XMEM1.EXE	M1-UN-DP48	
ISSI	IS28F010	XMEM2.EXE	M1-UN-DP48	
ISSI	IS28F010A	XMEM2.EXE	M1-UN-DP48	
ISSI	IS28F020	XMEM2.EXE	M1-UN-DP48	
ISSI	IS29GL064B-BL	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ISSI	IS29GL064B-TL	XA28F1.EXE	M1-UN-TS48A/TS56	
ISSI	IS29GL064H-GL	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
ISSI	IS29GL064H-SL	XA28F1.EXE	M1-UN-TS56	
ISSI	IS29GL064L-GL	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
ISSI	IS29GL064L-SL	XA28F1.EXE	M1-UN-TS56	
ISSI	IS29GL064T-BL	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
ISSI	IS29GL064T-TL	XA28F1.EXE	M1-UN-TS48A/TS56	
ISSI	IS29GL128H-GL	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
ISSI	IS29GL128H-SL	XA28F1.EXE	M1-UN-TS56	
ISSI	IS29GL128L-GL	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
ISSI	IS29GL128L-SL	XA28F1.EXE	M1-UN-TS56	
ISSI	IS24C01	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C01B	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C02/IS24C02-3	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C02B	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C04/IS24C04-3	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C04A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C08A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C128/IS24C128-3	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ISSI	IS24C16/IS24C16-3	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C16A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C256A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C32/IS24C32-3	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C32A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C32C	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24C64A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24L128	XSPROM.EXE	M1-UN-DP48	
ISSI	IS24L256	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C01	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C02	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C04	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C08	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C16	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C32A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25C64A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25CD010	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25CD025	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25CD512	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25CQ032	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LD020	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LD040	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LP128	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LP128(SOP16)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LQ010A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LQ016	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LQ032B	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LQ080	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25LQ512A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25WD020	XSPROM.EXE	M1-UN-DP48	
ISSI	IS25WD040	XSPROM.EXE	M1-UN-DP48	
ISSI	IS34C02	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C46	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C46A/D(128*8)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C46A/D(64*16)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C46B	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C56	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C56A(256*16)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C56A(512*8)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C66	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C66A(256*16)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C66A(512*8)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C86A(1024*16)	XSPROM.EXE	M1-UN-DP48	
ISSI	IS93C86A(2048*8)	XSPROM.EXE	M1-UN-DP48	
ISSI	PM25LQ010A	XSPROM.EXE	M1-UN-DP48	
ISSI	PM25LQ020A	XSPROM.EXE	M1-UN-DP48	
ISSI	PM25LQ512A	XSPROM.EXE	M1-UN-DP48	
ISSI	IS89C51A	XPGM52.EXE	M1-UN-DP48/PL44	
ISSI	IS89C52	XPGM52.EXE	M1-UN-DP48/PL44	
ISSI	IS89C52A	XPGM52.EXE	M1-UN-DP48	
ITT	NVM3060	XSPROM.EXE	M1-UN-DP48	
JSC	EM25P64QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU01QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU02QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU04QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU08QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU16QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU32QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25BU5KQA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25P01QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25P02QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25P04QA	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
JSC	JS25P08QA	XSPROM.EXE	M1-UN-DP48	
JSC	JS25P16QA	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C02	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C02C	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C02D	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C04	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C08	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C08C	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C08D	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C128	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C16	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C256	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C32	XSPROM.EXE	M1-UN-DP48	
K-LINE	K24C64	XSPROM.EXE	M1-UN-DP48	
K-LINE	K93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
K-LINE	K93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
K-LINE	K93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
K-LINE	K93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
LATTICE	GAL16LV8C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16LV8D	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16LV8Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8A	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8B-7	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8D	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL16V8Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL18V10	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL18V10B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20LV8C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20LV8D	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20LV8Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20RA10 (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20RA10 UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20RA10B (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20RA10B UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20V8A	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20V8B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20V8B-7	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20V8C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20V8Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL20XV10B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22LV10C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22LV10D	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22LV10Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10 (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10 UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10B (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10B UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10C (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10C UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10D (no UES)	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL22V10D UES	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL26CLV12D	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL26CV12B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL26CV12C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL26V12C	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL6001	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL6001B	XPLD1.EXE	M1-UN-DP48	
LATTICE	GAL6002B	XPLD1.EXE	M1-UN-DP48	
LATTICE	LC4032B(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4032B(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
LATTICE	LC4032B(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4032C(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4032C(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4032C(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4032V(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4032V(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4032V(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4032ZC(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4032ZC(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4032ZE(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4032ZE(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4064B(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4064B(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4064B(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4064C(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4064C(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4064C(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4064C(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4064C(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4064V(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4064V(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4064V(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ44
LATTICE	LC4064V(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4064V(TQ48)*	XAMACH2.EXE	M1-UN-TQ48/LQ48	
LATTICE	LC4064ZC(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4064ZC(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4064ZC(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4064ZC(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4064ZE(TQ48)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ48
LATTICE	LC4064ZE(TQ48)*	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	LC4128B(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4128B(TQ100)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128B(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4128B(TQ128)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ128
LATTICE	LC4128B(TQ128)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128C(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4128C(TQ100)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128C(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4128C(TQ128)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ128
LATTICE	LC4128C(TQ128)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128V(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4128V(TQ100)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128V(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4128V(TQ128)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ128
LATTICE	LC4128V(TQ128)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128V(TQ144)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ144
LATTICE	LC4128V(TQ144)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128ZC(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4128ZC(TQ100)(ISP)	XAMACH2.EXE	M1-JTAG-CN10	
LATTICE	LC4128ZC(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4128ZE(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4128ZE(TQ144)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ144
LATTICE	LC4256B(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4256B(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4256B(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4256C(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4256C(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4256C(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4256V(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4256V(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4256V(TQ144)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ144
LATTICE	LC4256V(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
LATTICE	LC4256ZC(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ100
LATTICE	LC4256ZC(TQ100)*	XAMACH2.EXE	M1-MACH4000-TQ100	
LATTICE	LC4256ZC(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4384B(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4384C(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4384V(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4512B(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4512C(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC4512V(TQ176)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH4000-TQ176
LATTICE	LC5128B	XAMACH2.EXE	M1-UN-DP48	ADP-MACH5000-TQ128
LATTICE	LC5256B(PQ208)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH5000-PQ208
LATTICE	LC5384B(PQ208)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH5000-PQ208
LATTICE	LC5512B(PQ208)	XAMACH2.EXE	M1-UN-DP48	ADP-MACH5000-PQ208
LATTICE	LCMXO1200C (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ100
LATTICE	LCMXO1200C (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ144
LATTICE	LCMXO1200C (ftBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-BG256
LATTICE	LCMXO1200E (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ100
LATTICE	LCMXO1200E (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ144
LATTICE	LCMXO1200E (ftBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-BG256
LATTICE	LCMXO2-1200HC(TQFP144)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO2640U-TQ144
LATTICE	LCMXO2-256HC(TQFP100)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO2256-TQ100
LATTICE	LCMXO2-640HC(TQFP100)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO2256-TQ100
LATTICE	LCMXO2-640UHC(TQFP144)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO2640U-TQ144
LATTICE	LCMXO2280C (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ100
LATTICE	LCMXO2280C (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ144
LATTICE	LCMXO2280C (ftBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-BG256
LATTICE	LCMXO2280E (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ100
LATTICE	LCMXO2280E (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ144
LATTICE	LCMXO2280E (ftBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO1200-BG256
LATTICE	LCMXO256C (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO256-TQ100/A
LATTICE	LCMXO256E (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LCMXO256-TQ100/A
LATTICE	LCMXO640C(TQFP100)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO256-TQ100/A
LATTICE	LCMXO640C(TQFP144)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO1200-TQ144
LATTICE	LCMXO640C(ftBGA256)	XLCMXO.EXE	M1-UN-DP48	ADP-LCMXO1200-BGA256
LATTICE	LFXP10C (fpBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-BG256
LATTICE	LFXP15C (fpBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-BG256
LATTICE	LFXP15E (fpBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-BG256
LATTICE	LFXP2-5E (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP2-TQ144
LATTICE	LFXP2-5E (csBGA132)	XLFXP.EXE	M1-UN-BG68	TOP-LFXP2-BG132
LATTICE	LFXP2-8E (TQFP144)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP2-TQ144
LATTICE	LFXP2-8E (csBGA132)	XLFXP.EXE	M1-UN-BG68	TOP-LFXP2-BG132
LATTICE	LFXP3C (PQFP208)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-PQ208
LATTICE	LFXP3C (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP3-TQ100
LATTICE	LFXP3C (TQFP144)	XLFXP.EXE	M1-LFXP3-TQ144	
LATTICE	LFXP3E (PQFP208)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-PQ208
LATTICE	LFXP3E (TQFP100)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP3-TQ100
LATTICE	LFXP6C (PQFP208)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-PQ208
LATTICE	LFXP6C (fpBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-BG256
LATTICE	LFXP6E (PQFP208)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-PQ208
LATTICE	LFXP6E (fpBGA256)	XLFXP.EXE	M1-UN-DP48	ADP-LFXP6-BG256
LATTICE	M4-128/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	M4-128N/64(PLCC84)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	M4A3-128/64(PQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	M4A3-128/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	M4A3-192/96(TQFP144)	XAMACH1.EXE	M1-UN-DP48	ADP-M4/192-TQ144
LATTICE	M4A3-64/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	M4A3-96/48(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	M4A5-128/64(PQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	M4A5-128/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	M4A5-128/64(TQFP100)*	XAMACH1.EXE	M1-MACH231SP-TQ100	
LATTICE	M4A5-192/96(TQFP144)	XAMACH1.EXE	M1-UN-DP48	ADP-M4/192-TQ144
LATTICE	M4A5-96/48(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
LATTICE	M4LV-96/48(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	MACH111	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	MACH111SP(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	MACH111SP(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	MACH120	XAMACH1.EXE	M1-UN-DP48	ADP-MACH2
LATTICE	MACH130	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH131	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH131/1	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH210/A/AQ	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	MACH211	XAMACH.EXE	M1-UN-DP48	ADP-MACH/TQ
LATTICE	MACH211SP(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	MACH211SP(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	MACH215	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	MACH220	XAMACH1.EXE	M1-UN-DP48	ADP-MACH2
LATTICE	MACH221	XAMACH1.EXE	M1-UN-DP48	ADP-MACH2
LATTICE	MACH221/1	XAMACH1.EXE	M1-UN-DP48	ADP-MACH2
LATTICE	MACH230	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH231	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH231/1	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH231SP(PQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	MACH231SP(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	MACH435	XAMACH1.EXE	M1-UN-DP48	ADP-MACH1
LATTICE	MACH445	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	PALCE16V8H	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE16V8H/4	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE16V8H/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE16V8HD	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE16V8Q	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE16V8Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8H	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8H/4	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8H/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8Q	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8Q/4	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE20V8Q/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10H/4	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10H/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10Q	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10Q/4	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10Q/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE22V10Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALCE610H	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALLV16V8	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALLV16V8Z/5	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALLV22V10	XPLD1.EXE	M1-UN-DP48	
LATTICE	PALLV22V10Z	XPLD1.EXE	M1-UN-DP48	
LATTICE	iM4-32/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4-32/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4-32/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4A3-128/64(PQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	iM4A3-128/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	iM4A3-32/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4A3-32/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4A3-32/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4A3-64/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4A3-64/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4A3-64/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4A3-64/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	iM4A3-96/48(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	iM4A5-128/64(PQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH445
LATTICE	iM4A5-128/64(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	iM4A5-128/64(TQFP100)*	XAMACH1.EXE	M1-MACH231SP-TQ100	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
LATTICE	iM4A5-32/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4A5-32/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4A5-32/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4A5-64/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4A5-64/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4A5-64/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4A5-96/48(TQFP100)	XAMACH1.EXE	M1-UN-DP48	ADP-MACH231SP-TQ
LATTICE	iM4LV-32/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4LV-32/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4LV-32/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	iM4LV-64/32(PLCC44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH
LATTICE	iM4LV-64/32(TQFP44)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ
LATTICE	iM4LV-64/32(TQFP48)	XAMACH.EXE	M1-UN-DP48	ADP-MACH-TQ48
LATTICE	ispGAL22LV10	XAPLSI.EXE	M1-UN-DP48	
LATTICE	ispGAL22V10AB(PLCC28)	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGAL22V10AB(QFN32)	XAMACH2.EXE	M1-UN-DP48	ADP-ISP GAL-QFN32
LATTICE	ispGAL22V10AC(PLCC28)	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGAL22V10AV(PLCC28)	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGAL22V10AV(QFN32)	XAMACH2.EXE	M1-UN-DP48	ADP-ISP GAL-QFN32
LATTICE	ispGAL22V10C(PLCC28)	XAMACH2.EXE	M1-UN-DP48	ADP-ISP22V10V2
LATTICE	ispGDS14	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGDS18	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGDS22	XAMACH2.EXE	M1-UN-DP48	
LATTICE	ispGDX80A	XAPLSI.EXE	M1-UN-DP48	ADP-ISP GDX-TQ100
LATTICE	ispGDX80VA	XAPLSI.EXE	M1-UN-DP48	ADP-ISP GDX-TQ100
LATTICE	ispLSI1016	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI1016E	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI1024	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL68
LATTICE	ispLSI1032	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LATTICE	ispLSI1032E	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LATTICE	ispLSI1048	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ120
LATTICE	ispLSI1048C	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ128
LATTICE	ispLSI1048E	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ128
LATTICE	ispLSI1048E(TQFP128)	XAPLSI.EXE	M1-UN-DP48	ADP-ISPLSI-TQ128AV2
LATTICE	ispLSI2032	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI2032A	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI2032A(TQFP48)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-TQ48
LATTICE	ispLSI2032E	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI2032E(TQFP48)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-TQ48V2
LATTICE	ispLSI2032E*	XAPLSI.EXE	M1-AVR-QF44	
LATTICE	ispLSI2032V	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	ispLSI2032V*	XAPLSI.EXE	M1-AVR-QF44	
LATTICE	ispLSI2032VE	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44/TQ48
LATTICE	ispLSI2032VE*	XAPLSI.EXE	M1-AVR-QF44	
LATTICE	ispLSI2064	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LATTICE	ispLSI2064A	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LATTICE	ispLSI2064E	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-TQ100V2
LATTICE	ispLSI2064V (PLCC44)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44
LATTICE	ispLSI2064V (TQFP100)	XAPLSI.EXE	M1-UN-DP48	ADP-ISP2064VE-TQ100
LATTICE	ispLSI2064V (TQFP44)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-TQ44
LATTICE	ispLSI2064V*(TQFP44)	XAPLSI.EXE	M1-AVR-QF44	
LATTICE	ispLSI2064VE (PLCC44)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44
LATTICE	ispLSI2064VE (TQFP100)	XAPLSI.EXE	M1-UN-DP48	ADP-ISP2064VE-TQ100
LATTICE	ispLSI2064VE (TQFP44)	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-TQ44
LATTICE	ispLSI2064VE*(TQFP44)	XAPLSI.EXE	M1-AVR-QF44	
LATTICE	ispLSI2096	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ128
LATTICE	ispLSI2096A	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ128
LATTICE	ispLSI2096E	XAPLSI.EXE	M1-UN-DP48	ADP-ISPLSI-TQ128AV2
LATTICE	ispLSI2096VE	XAPLSI.EXE	M1-UN-DP48	ADP-ISPLSI-TQ128
LATTICE	ispLSI2128VE	XAPLSI.EXE	M1-UN-DP48	ADP-ISP2064VE-TQ100
LATTICE	ispLSI2128VE(QFP160)	XAPLSI.EXE	M1-UN-DP48	ADP-ISP2128VE-Q160
LATTICE	ispLSI2192VE	XAPLSI.EXE	M1-UN-DP48	ADP-ISPLSI-TQ128

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
LATTICE	ispLSI5128VE	XAPLSI.EXE	M1-UN-DP48	ADP-ISPLSI-TQ128B
LATTICE	ispPAC-CLK5304S(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-CLK5308S(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-CLK5312S(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-CLK5320S(TQ64)	XAMACH2.EXE	M1-UN-TQ64	
LATTICE	ispPAC-CLK5406D(QN48)	XAMACH2.EXE	M1-UN-BG68A	
LATTICE	ispPAC-CLK5410D(QN64)	XAMACH2.EXE	M1-UN-ML64	
LATTICE	ispPAC-CLK5610AV(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-CLK5620AV(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPCLK56-TQ100
LATTICE	ispPAC-POWR1014(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-POWR1014A(TQ48)	XAMACH2.EXE	M1-UN-LQ48	
LATTICE	ispPAC-POWR1208(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR-TQ44
LATTICE	ispPAC-POWR1208P1(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR-TQ44
LATTICE	ispPAC-POWR1220AT8(TQ100)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR1220-TQ100
LATTICE	ispPAC-POWR604(TQ44)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR-TQ44
LATTICE	ispPAC-POWR605(QFN24)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR605-QFN24
LATTICE	ispPAC-POWR607(QFN32)	XAMACH2.EXE	M1-UN-DP48	ADP-ISPPOWR607-QFN32
LATTICE	ispPAC-POWR6AT6(QFN32)	XAMACH2.EXE	M1-UN-LQ48	ADP-ISPPOWR6AT6-QFN32
LATTICE	pLSI1016	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	pLSI1024	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL68
LATTICE	pLSI1032	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LATTICE	pLSI1048	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PQ120
LATTICE	pLSI2032	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL44/TQ44
LATTICE	pLSI2064	XAPLSI.EXE	M1-UN-DP48	ADP-PLSI-PL84/TQ100/TQ100V2
LG Semicon	HMS80C701	XPGM51.EXE	M1-UN-DP48/PL44	
LG Semicon	HMS81504T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81504-SD
LG Semicon	HMS81508T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
LG Semicon	HMS81508T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
LG Semicon	HMS81508T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
LG Semicon	HMS81516BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
LG Semicon	HMS81516T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-SD
LG Semicon	HMS81516T(QFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-Q
LG Semicon	HMS81516T(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
LG Semicon	HMS81524BT(TQFP)	XAMPU3.EXE	M1-UN-DP48	ADP-GMS81516-TQ
LG Semicon	HMS84512T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
LG Semicon	HMS84524T	XAMPU3.EXE	M1-UN-DP48	ADP-GMS84524-SD
LG Semicon	HMS87C1102	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS87C1201	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS87C1202	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS87C1404	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS87C1408	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97C51	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97C52	XPGM51.EXE	M1-UN-DP48/PL44	
LG Semicon	HMS97C54	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97C56	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97C58	XPGM51.EXE	M1-UN-DP48/PL44	
LG Semicon	HMS97L51	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97L52	XPGM51.EXE	M1-UN-DP48/PL44	
LG Semicon	HMS97L54	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97L56	XPGM51.EXE	M1-UN-DP48	
LG Semicon	HMS97L58	XPGM51.EXE	M1-UN-DP48	
LINKSMART	L29S160FTC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
LINKSMART	L29S160FTC-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
LINKSMART	L29S400FTC-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
LINKSMART	L29S800FTC-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
LINKSMART	L29W800ETC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
LOGOS	CLM84STP611Y(SOP28)	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-S
LOGOS	CLM84STP611Z(SDIP28)	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-SD
LYONTEK	LY24C02	XSPROM.EXE	M1-UN-DP48	
LYONTEK	LY24C08	XSPROM.EXE	M1-UN-DP48	
LYONTEK	LY24C16	XSPROM.EXE	M1-UN-DP48	
M-SQUARE	MS8951(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-PL44

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
M-SQUARE	MS8951(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-Q48/-Q48V2
MATSUSHITA	27128(21V)	XMEM1.EXE	M1-UN-DP48	
MATSUSHITA	2764(21V)	XMEM1.EXE	M1-UN-DP48	
MAXIM	DS1216B(8k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216C(32k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216C(8k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216D(128k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216D(32k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216E(32k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1216E(8k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1220Y/AB	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1225Y/AB/AD	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1230Y/AB	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1235Y/AB	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1243Y	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1244Y	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1245Y/AB	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1286	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS12887	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS12C887	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1386(32k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1386(8k*8)	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1387	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1630Y	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1642	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1643	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1644	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1646	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1687-5	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS17287	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1742	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1742W	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1743	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1744	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1744W	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1746	XMEM2.EXE	M1-UN-DP48	
MAXIM	DS1620	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2401	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2430	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2430A	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2431	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2433	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS24B33	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2501(SOT23)	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2502	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2502(SOT23)	XDS2502.EXE	M1-UN-DP48	
MAXIM	DS2506	XDS2502.EXE	M1-UN-DP48	
MAXIM	CM602	X966X.EXE	M1-UN-QN28	
MAXIM	DS1086L	X966X.EXE	M1-UN-DP48	CNV-MSOP-DIP8
MAXIM	MAX9660	X966X.EXE	M1-UN-DP48	CNV-TDFN-DIP8
MAXIM	MAX9667	X966X.EXE	M1-UN-DP48	CNV-MLF20-HT82B40R
MAXIM	MAX9668	X966X.EXE	M1-UN-DP48	CNV-MLF20-HT82B40R
MAXIM	MAX9669	X966X.EXE	M1-UN-QN28	
MAXIM	MAX9674	X966X.EXE	M1-UN-QN28	
MAXIM	MAX9679	X966X.EXE	M1-UN-DP48	CNV-QFN-DIP24
MBX	FM91L01604BA-A6BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MBX	FM91L03208BA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MBX	FM91L03208BIA-77BGE	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEGAWIN	MM29F040	XMEM2.EXE	M1-UN-DP48	
MEGAWIN	MM25SB512	XSPROM.EXE	M1-UN-DP48	
MEGAWIN	MM27SB512	XSPROM.EXE	M1-UN-DP48	
MEGAWIN	MG82FE308AD48	XPGM51.EXE	M1-UN-LQ48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MEGAWIN	MG82FE316AD64	XPGM51.EXE	M1-UN-LQ64	
MEGAWIN	MG82FE564AD	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG82FE564AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG82FE564AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MG82FE564AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MG82FL308AD48	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG82FL316AD64	XPGM51.EXE	M1-UN-LQ64	
MEGAWIN	MG82FL564AD	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG82FL564AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG82FL564AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MG84FG516AD48	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG84FG516AD64	XPGM51.EXE	M1-UN-LQ64	
MEGAWIN	MG84FL54BD	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG84FL54RBD	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MG86FE104AE	XPGM51.EXE	M1-UN-DP48/V2	
MEGAWIN	MG86FE508AE	XPGM51.EXE	M1-UN-DP48/V2	
MEGAWIN	MG86FL104AE	XPGM51.EXE	M1-UN-DP48/V2	
MEGAWIN	MG86FL508AE	XPGM51.EXE	M1-UN-DP48/V2	
MEGAWIN	MG87FE2051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FE2051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MG87FE4051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FE4051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MG87FE52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FE52AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MG87FE52AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MG87FE6051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FE6051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MG87FL2051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FL2051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MG87FL4051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FL4051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MG87FL52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FL52AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MG87FL52AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MG87FL6051AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MG87FL6051AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82E52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82E52AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82E52AT	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MEGAWIN	MPC82E54AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82E54AE2	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82E54AP	XPGM51.EXE	M1-UN-DP48	CNV-PLCC-EP1M32A
MEGAWIN	MPC82E54AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82E54AS2	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82E54AS3	XPGM51.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
MEGAWIN	MPC82E54AT	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MEGAWIN	MPC82E54AT2	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MEGAWIN	MPC82G516AD	XPGM51.EXE	M1-UN-LQ48	
MEGAWIN	MPC82G516AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82G516AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC82G516AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC82L52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82L52AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82L52AT	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MEGAWIN	MPC82L54AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82L54AE2	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC82L54AP	XPGM51.EXE	M1-UN-DP48	CNV-PLCC-EP1M32A
MEGAWIN	MPC82L54AS	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82L54AS2	XPGM51.EXE	M1-UN-DP48	CNV-SOP-DIP28A
MEGAWIN	MPC82L54AS3	XPGM51.EXE	M1-UN-DP48	CNV-SSOP-DIP30A
MEGAWIN	MPC82L54AT	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MEGAWIN	MPC82L54AT2	XPGM51.EXE	M1-UN-DP48	CNV-TSSOP-DIP28

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MEGAWIN	MPC89E515AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E515AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E515AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89E51AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E51AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E51AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89E52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E52AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E52AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89E53AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E53AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E53AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89E54AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E54AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E54AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89E58AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89E58AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89E58AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L515AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L515AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L515AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L516X2	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L516X2F	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L516X2P	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L51AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L51AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L51AP	XPGM51.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
MEGAWIN	MPC89L52AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L52AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L52AP	XPGM51.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
MEGAWIN	MPC89L53AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L53AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L53AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L54AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L54AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L54AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L556X2E	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L556X2F	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L556X2P	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEGAWIN	MPC89L58AE	XPGM51.EXE	M1-UN-DP48	
MEGAWIN	MPC89L58AF	XPGM51.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MEGAWIN	MPC89L58AP	XPGM51.EXE	M1-UN-DP48/PL44	CNV-PLCC-MPU51B
MEMOCOM	KI01604AB-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI01604AT-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI01608AB-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI01608AB-Gb1	XA28F2.EXE	M1-UN-BG68	TOP-KI03204-BG66
MEMOCOM	KI03204AT-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI03204AT-Gb1	XA28F2.EXE	M1-UN-BG68	TOP-KI03204-BG66
MEMOCOM	KI03208AB-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI03208AB-Gb1	XA28F2.EXE	M1-UN-BG68	TOP-KI03204-BG66
MEMOCOM	KI03208AT-Ga1	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MEMOCOM	KI03208AT-Gb1	XA28F2.EXE	M1-UN-BG68	TOP-KI03204-BG66
MEMOCOM	KS01604AB-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS01604AT-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS01608AB-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS01608AT-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS03204AB-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS03204AT-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS03208AB-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KS03208AT-Gh	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KSP6432AT-Fh1	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MEMOCOM	KTF29028AU-GtL	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICON	MDT10P05	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P10	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P20	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P22A1P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P23	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P41A1P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P41A1S	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P43P11	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55A1P/3P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55A2P/4P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55B1P/3P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55B1S/3S	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55B2P/4P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P55B2S/4S	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P56A1P/3P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P56A2P/4P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P61P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P62	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P621	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P64P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P651P	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P72	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P721	XMICON.EXE	M1-UN-DP48/SS34	
MICON	MDT10P721N	XMICON.EXE	M1-UN-DP48/SS34	
MICON	MDT10P73K	XMICON.EXE	M1-UN-DP48	
MICON	MDT10P74P	XMICON.EXE	M1-UN-DP48	
MICON	MDT2005	XMICON.EXE	M1-UN-DP48	
MICON	MDT2010	XMICON.EXE	M1-UN-DP48	
MICON	MDT2020	XMICON.EXE	M1-UN-DP48	
MICON	MDT2030P	XMICON.EXE	M1-UN-DP48	
MICON	MDT2051P	XMICON.EXE	M1-UN-DP48	
MICON	MDT2051S	XMICON.EXE	M1-UN-DP48	
MICROCHIP	27C256	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27C512	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27C512A	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27C64	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27HC256	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27HC64	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27LC64	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27LV256	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	27LV512	XMEM1.EXE	M1-UN-DP48	
MICROCHIP	28C16A	XMEM2.EXE	M1-UN-DP48	
MICROCHIP	28C17A	XMEM2.EXE	M1-UN-DP48	
MICROCHIP	28C64A/AF	XMEM2.EXE	M1-UN-DP48	
MICROCHIP	24AA00	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA00(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA01	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA01(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA02	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA02(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA024	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA02E48(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA04	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA04(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA08	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA08(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA1025	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA16	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA16(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA164	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA174	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	24AA256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA32	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA32A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA64	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24AA65	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C00	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C00(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C01A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C01C	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C02A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C02C	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C04A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C08B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C16B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C174	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C32	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C32A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C64	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24C65	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24FC1025	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24FC128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24FC256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24FC512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24FC64	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC00	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC00(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC01B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC01B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC024	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC025	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC02B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC02B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC04B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC04B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC08B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC08B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC1025	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC1026	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC164	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC16B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC16B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC174	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC21	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC211	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC21A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC22A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC32	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC32A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC41	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC515	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC64	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LC65	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LCS21	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LCS21A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LCS22A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LCS52	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	24LCS61	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	24LCS62	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA010A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA010A(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA020A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA02E48	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA040	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA040A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA040A(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA080A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA080B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA1024	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA160A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA160B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA320	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA320A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA320X	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25AA640	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25C040	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25C080	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25C160	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25C320	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25C640	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC010A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC010A(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC020A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC040	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC040A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC040A(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC080	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC080A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC080B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC080D	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC1024	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC160	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC160A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC160B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC256	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC320	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC320A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	25LC640	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	34AA02	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	34LC02	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	37LV128	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	37LV36	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	37LV65	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	59C11(128*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	59C11(64*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	85C72	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	85C82	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	85C92	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA46(128*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA46(64*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA46A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA56(128*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA56(256*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA56A	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	93AA66(256*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA66(512*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA86A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA86B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA86C(1024*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93AA86C(2048*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C06	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C46	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C46B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C46C(128*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C46C(64*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C56B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C76(1024*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C76(512*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86C(1024*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93C86C(2048*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46(128*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46(64*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46C(128*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC46C(64*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56(128*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56(256*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56A(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56B(SOT23)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56C(128*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC56C(256*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC66(256*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC66(512*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC66A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC66B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC76(1024*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC76(512*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC76C(1024*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC76C(512*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86(1024*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86(2048*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86C(1024*16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC86C(2048*8)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LC566	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	93LCS66	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS101	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS200	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS201	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS300	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS301	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	HCS360	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	MCP98243	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	SST25VF010A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF016B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF020	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF020B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF040B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF064C	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF064C(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF080B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF512	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25VF512A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25WF020	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25WF020A	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25WF040B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST25WF080B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST26VF032B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST26VF064B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	SST26WF016B	XSPROM.EXE	M1-UN-DP48	
MICROCHIP	AP7675	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	CF745	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	CF775	XPIC1.EXE	M1-UN-DP48	ADP-PICS-CF775
MICROCHIP	MCP25020	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC10F200	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F202	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F204	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F206	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F220	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F222	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10F322	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10LF320	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC10LF322	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12C508	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C508(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C508A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C508A(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C509	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C509(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C509A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C509A(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C671	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C671(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C672	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12C672(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE518	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE518(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE519	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE519(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE673	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE673(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE674	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12CE674(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12F1501	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F1822	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F1840	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F508	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F509	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F510	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F519	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F609	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F615	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F617	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F629	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F635	XPIC2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC12F675	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F683	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12F752	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12HV609	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12HV615	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12LC508A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12LC509A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12LCE518	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12LCE519	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC12LF1552	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12LF1822	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC12LF1840	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC14000	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C505	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C505(JW)	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C52	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54-HS	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54-RC	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54-XT	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C54C	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C55-RC	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C55-XT	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C554	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C556	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C558	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C55A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C56	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C56A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C57-LP	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C57-XT	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C57C	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C58A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C58B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C61	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C62	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C620	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C620A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C621	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C621A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C622	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C622A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C62A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C62B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C63	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C63A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C64	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C641	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C642	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C64A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C65	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C65A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C65B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C65B(MQFP44)	XPIC1.EXE	M1-UN-QF44	
MICROCHIP	PIC16C66	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C661	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C662	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C67	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C71	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C710	XPIC1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC16C711	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C712	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C715	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C716	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C717	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C72	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C72A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C73	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C73A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C73B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C74	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C745	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C74A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C74B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C76	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C765	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C77	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C770	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C771	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C773	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C774	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C781	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C782	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16C923	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ/-SD
MICROCHIP	PIC16C924	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ/-SD
MICROCHIP	PIC16C925	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ
MICROCHIP	PIC16C926	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ
MICROCHIP	PIC16CE623	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16CE624	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16CE625	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1454	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1455	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1503	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1507	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F1508	XPIC2.EXE	M1-UN-DP48/M1-UN-SS34	
MICROCHIP	PIC16F1509	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F1512	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F1516	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F1519	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1527	XPIC2.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC16F1704	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1708	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F1783	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1788	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F1789	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1823	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1824	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1825	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1826	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1827	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1828	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F1829	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1829(QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F1933	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F1934	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1936	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1937	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1938	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F1938(QFN28)	XPIC2.EXE	M1-PICS-ML28A	
MICROCHIP	PIC16F1939	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F1946	XPIC2.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC16F1947	XPIC2.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC16F505	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F506	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F526	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F54	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F57	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F59 (DIP40)	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F59 (TQFP44)	XPIC2.EXE	M1-AVR-QF44	
MICROCHIP	PIC16F610	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F616	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F627	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F627A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F628	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F628A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F630	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F631	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F636	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F639	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F648A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F676	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F677	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F677 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F684	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F685	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F687	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F687 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F688	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F689	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F689 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F690	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F690 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F716	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F72	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F720	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16F720 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F722	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F722A	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F723	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F723A	XPIC2.EXE	M1-UN-DP48/M1-UN-SS34	
MICROCHIP	PIC16F723A(QFN28)	XPIC2.EXE	M1-PICS-ML28A	
MICROCHIP	PIC16F724	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F726	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F727	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F73	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F737	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F74	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F747	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F753	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F76	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F767	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F77	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F777	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F785	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F785 (QFN20)	XPIC2.EXE	M1-UN-ML20	
MICROCHIP	PIC16F818	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F819	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F83	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F84	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F84A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F87	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F870	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F871	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F872	XPIC2.EXE	M1-UN-DP48/SS34	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC16F873	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F873A	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F874	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F874A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F876	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F876A	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F877	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F877A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F88	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F882	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F883	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F884	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F886	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F887	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F913	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F914	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F916	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16F917	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16F946	XPIC2.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC16HV616	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16HV785	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LC505	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC554	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC558	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC620A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC621A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC622A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC62B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC63A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC65B	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC71	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC710	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC711	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC72A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC771	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC773	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC774	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC16LC923	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ/-SD
MICROCHIP	PIC16LC924	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-PL/-TQ
MICROCHIP	PIC16LC925	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-TQ
MICROCHIP	PIC16LC926	XPIC1.EXE	M1-UN-DP48	ADP-PIC16C924-TQ
MICROCHIP	PIC16LF1507	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF1527(QFN64)	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1823	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1824	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1825	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1826	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1827	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1828	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF1829	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF1902	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1903	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1904	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1933	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF1934	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1936	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF1937	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1938	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1938(QFN28)	XPIC2.EXE	M1-PICS-ML28A	
MICROCHIP	PIC16LF1939	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF1947	XPIC2.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC16LF627	XPIC2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC16LF627A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF628	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF628A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF648A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF72	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF722	XPIC2.EXE	M1-UN-SS34	
MICROCHIP	PIC16LF724	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF726	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF727	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF73	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF73(QFN28)	XPIC2.EXE	M1-PICS-ML28A	
MICROCHIP	PIC16LF737	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF74	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF747	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF76	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF767	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF77	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF777	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF818	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF819	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF83	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF84	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF84A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF87	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF870	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF872	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF873	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF873A	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF874	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF874A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF876	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF876A	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC16LF877	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF877A	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC16LF88	XPIC2.EXE	M1-UN-DP48	
MICROCHIP	PIC17C42A	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC17C43	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC17C44	XPIC1.EXE	M1-UN-DP48	
MICROCHIP	PIC17C752	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC17C756	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C75X-SD/-PL/-Q/-QV2
MICROCHIP	PIC17C756A	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC17C762	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C76X-PL/-Q/-QV2/-QV3
MICROCHIP	PIC17C766	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C76X-PL/-Q/-QV2/-QV3
MICROCHIP	PIC17LC756A	XPIC1.EXE	M1-UN-DP48	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC18C242	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18C252	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18C442	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18C452	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18C601	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC18C658	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC18C858	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-PL/-Q/-QV2/-QV3
MICROCHIP	PIC18F1220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F1320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F13K50	XPIC18.EXE	M1-UN-SS34	
MICROCHIP	PIC18F13K50(QFN20)	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F14K22	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F14K50	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F14K50(QFN20)	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2221	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F2320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2321	XPIC18.EXE	M1-UN-DP48/SS34	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC18F2331	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F23K20	XPIC18.EXE	M1-UN-SS34	
MICROCHIP	PIC18F23K22	XPIC18.EXE	M1-UN-SS34	
MICROCHIP	PIC18F2410	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F242	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2420	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2423	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2431	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2439	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2450	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2455	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2458	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F248	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2480	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F24J10	XPIC18.EXE	M1-UN-DP48/M1-18F25J10-SS28	
MICROCHIP	PIC18F24J50	XPIC18.EXE	M1-UN-DP48/M1-18F25J10-SS28	
MICROCHIP	PIC18F24K20	XPIC18.EXE	M1-UN-SS34	
MICROCHIP	PIC18F24K20*	XPIC18.EXE	M1-PICS-ML28A	
MICROCHIP	PIC18F2510	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F252	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2520	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2523	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2525	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2539	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2550	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F258	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2580	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2585	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F25J10	XPIC18.EXE	M1-UN-DP48/M1-18F25J10-SS28	
MICROCHIP	PIC18F25J11	XPIC18.EXE	M1-18F25J10-SS28	
MICROCHIP	PIC18F25J50	XPIC18.EXE	M1-18F25J10-SS28	
MICROCHIP	PIC18F25K20	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F25K20*	XPIC18.EXE	M1-PICS-ML28A	
MICROCHIP	PIC18F25K22	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F25K80	XPIC18.EXE	M1-PICS-ML28A	
MICROCHIP	PIC18F2610	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2620	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2680	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2682	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F2685	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F26J11	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F26J50	XPIC18.EXE	M1-UN-DP48/M1-18F25J10-SS28	
MICROCHIP	PIC18F26K22	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18F26K22*	XPIC18.EXE	M1-PICS-ML28A	
MICROCHIP	PIC18F26K80	XPIC18.EXE	M1-18F25J10-SS28	
MICROCHIP	PIC18F27J53	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4321	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4410	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F442	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4420	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4423	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4431	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4439	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4450	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4455	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4458	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F448	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4480	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F44J10	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F44K20	XPIC18.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC18F44K22	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4510	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4515	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F452	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4520	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4523	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4525	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4539	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4550	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F458	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4580	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4585	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F45J10	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F45J50	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F45K20	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F45K80	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4610	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4620	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4680	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F4685	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F46J50	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F46K20	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F46K22	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F46K80	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18F6390	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F63J90	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F6410	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6490	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F64J90	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F6520	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6525	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6527	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6585	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC18F65J10	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F65J15	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F65J50	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F65K90	XPIC18.EXE	M1-PIC18FKXX-TQ64	
MICROCHIP	PIC18F6620	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6621	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6622	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6627	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6680	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-PL/-Q/-QV2
MICROCHIP	PIC18F66J10	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F66J11	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F66J15	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F66J50	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F66K22	XPIC18.EXE	M1-PIC18FKXX-TQ64	
MICROCHIP	PIC18F66K80	XPIC18.EXE	M1-PIC18FK80-TQ64	
MICROCHIP	PIC18F66K90	XPIC18.EXE	M1-PIC18FKXX-TQ64	
MICROCHIP	PIC18F6720	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F6722	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18F67J10	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F67J11	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F67J60	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-QV2
MICROCHIP	PIC18F67K22	XPIC18.EXE	M1-PIC18FKXX-TQ64	
MICROCHIP	PIC18F8390	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8490	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8520	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8525	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8527	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F85J10	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC18F85J15	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F85J90	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F8620	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8621	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8622	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8627	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8680	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F86J10	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F86J11	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F86J15	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2
MICROCHIP	PIC18F86J60	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV3
MICROCHIP	PIC18F8720	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F8722	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18F87J10	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F87J50	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-QV2/-QV3
MICROCHIP	PIC18F97J60	XPIC18.EXE	M1-UN-DP48	ADP-PIC18F9XJ6X-Q
MICROCHIP	PIC18LC801	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-PL/-Q/-QV2/-QV3
MICROCHIP	PIC18LF1220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF1320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF1330	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF14K50	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18LF2220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2221	XPIC18.EXE	M1-UN-DP48/SS34	
MICROCHIP	PIC18LF2320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2410	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF242	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2420	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2450	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2455	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF248	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2480	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2510	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF252	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2520	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2525	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2550	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2580	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF25K22	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2610	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2620	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2680	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF2685	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF26J50	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4220	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4320	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4331	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4410	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF442	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4420	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4431	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4455	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF448	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4480	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4510	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4515	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF452	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4520	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4525	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4539	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4550	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF458	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4580	XPIC18.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC18LF4585	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF45K50	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4610	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4620	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF4680	XPIC18.EXE	M1-UN-DP48	
MICROCHIP	PIC18LF6490	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6520	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6525	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6527	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6620	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6622	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6627	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6720	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF6722	XPIC18.EXE	M1-UN-DP48/M1-PIC18FKXX-TQ64	ADP-PIC17C75X-Q/-QV2
MICROCHIP	PIC18LF8527	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18LF8622	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18LF8627	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC18LF8722	XPIC18.EXE	M1-UN-DP48	ADP-PIC17C76X-Q/-QV2/-QV3
MICROCHIP	PIC24F16KA102-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24F16KL402-I/ML	XPIC24H.EXE	M1-PICS-ML28A	
MICROCHIP	PIC24FJ128GA006-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ128GA008-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ80
MICROCHIP	PIC24FJ128GA008-I/PT*	XPIC24H.EXE	M1-PIC24FJ-TQ80	
MICROCHIP	PIC24FJ128GA010-I/PF	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ100
MICROCHIP	PIC24FJ128GA010-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24FJ128GA106-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ128GA110-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24FJ128GB106-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ16GA002-I/ML	XPIC24H.EXE	M1-PICS-ML28A	
MICROCHIP	PIC24FJ16GA002-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24FJ256GA106-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ256GA108-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ80
MICROCHIP	PIC24FJ256GA108-I/PT*	XPIC24H.EXE	M1-PIC24FJ-TQ80	
MICROCHIP	PIC24FJ256GA110-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24FJ256GB106-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ256GB108-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ80
MICROCHIP	PIC24FJ32GA002-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24FJ32GA102-I/SO	XPIC24H.EXE	M1-UN-DP48 / M1-UN-SO28	
MICROCHIP	PIC24FJ32GB002-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24FJ32GB004-I/ML	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-QFN44/V2
MICROCHIP	PIC24FJ48GA002-I/ML	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-QFN28
MICROCHIP	PIC24FJ64GA002-I/SO	XPIC24H.EXE	M1-UN-SO28	
MICROCHIP	PIC24FJ64GA002-I/SP	XPIC24H.EXE	M1-UN-DP48	
MICROCHIP	PIC24FJ64GA002-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24FJ64GA004-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ44/V2
MICROCHIP	PIC24FJ64GA006-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ64GB002-I/SS	XPIC24H.EXE	M1-UN-SS34	
MICROCHIP	PIC24FJ64GB004-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ44V2
MICROCHIP	PIC24FJ64GB106-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ96GA006-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24FJ96GA010-I/PF	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ100
MICROCHIP	PIC24FJ96GA010-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24HJ128GP206-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24HJ128GP210-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24HJ128GP210A-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24HJ128GP506-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24HJ12GP202-I/SO	XPIC24H.EXE	M1-UN-DP48	
MICROCHIP	PIC24HJ256GP206-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC24HJ256GP210-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24HJ256GP610-I/PF	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ100
MICROCHIP	PIC24HJ256GP610-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	PIC24HJ256GP610A-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICROCHIP	PIC24HJ64GP506-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	PIC32MX440F256H-I/PT	XPIC32MX.EXE	M1-UN-DP48	ADP-PIC32MX-TQ64
MICROCHIP	PIC32MX695F512L-I/PT	XPIC32MX.EXE	M1-UN-DP48	ADP-PIC32MX-TQ100
MICROCHIP	PIC32MX795F512L-I/PT	XPIC32MX.EXE	M1-UN-DP48	ADP-PIC32MX-TQ100
MICROCHIP	PS200	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	dsPIC30F2010	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F2010(QFN)	XPIC30F.EXE	M1-PICS-ML28A	
MICROCHIP	dsPIC30F2011	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F2012	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F3010	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F3011	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F3011(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ44
MICROCHIP	dsPIC30F3012	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F3013	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F3014	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F4011	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F4011(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ44
MICROCHIP	dsPIC30F4012	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F4013	XPIC30F.EXE	M1-UN-DP48	
MICROCHIP	dsPIC30F5011(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F5015(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6010(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30F60XX-TQ80
MICROCHIP	dsPIC30F6010A(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30F60XX-TQ80/A
MICROCHIP	dsPIC30F6011A(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6012A(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30FXXXX-TQ64
MICROCHIP	dsPIC30F6014A(QFP)	XPIC30F.EXE	M1-UN-DP48	ADP-30F60XX-TQ80
MICROCHIP	dsPIC33EP256MU806-I/MR	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-QFN64
MICROCHIP	dsPIC33FJ128GP804-E/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ44/V2
MICROCHIP	dsPIC33FJ12MC202-I/SP	XPIC24H.EXE	M1-UN-DP48	
MICROCHIP	dsPIC33FJ16MC102-I/SO	XPIC24H.EXE	M1-UN-DP48 / M1-UN-SO28	
MICROCHIP	dsPIC33FJ256MC710-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC33FJ-TQ100
MICROCHIP	dsPIC33FJ32GP202-I/SP	XPIC24H.EXE	M1-UN-DP48	
MICROCHIP	dsPIC33FJ32GP302-I/SO	XPIC24H.EXE	M1-UN-DP48	
MICROCHIP	dsPIC33FJ32MC204-E/ML	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-QFN44V2
MICROCHIP	dsPIC33FJ32MC204-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ44/V2
MICROCHIP	dsPIC33FJ64GP804-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ44/V2
MICROCHIP	dsPIC33FJ64GS606-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24HJ-TQ64
MICROCHIP	dsPIC33FJ64MC508-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ80
MICROCHIP	dsPIC33FJ64MC508-I/PT*	XPIC24H.EXE	M1-PIC24FJ-TQ80	
MICROCHIP	dsPIC33FJ64MC508A-I/PT	XPIC24H.EXE	M1-UN-DP48	ADP-PIC24FJ-TQ80
MICROCHIP	rfPIC12F675F	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	rfPIC12F675H	XPIC2.EXE	M1-UN-DP48/SS34	
MICROCHIP	rfPIC12F675K	XPIC2.EXE	M1-UN-DP48/SS34	
MICRON	JR28F032M29EWB	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F032M29EWH	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F032M29EWL	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F032M29EWT	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F064M29EWB	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F064M29EWH	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F064M29EWL	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JR28F064M29EWT	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	JS28F00AM29EWH	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP30BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP30EF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP30TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP33BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP33EF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F00AP33TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F064M29EWB	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F064M29EWH	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F064M29EWL	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F064M29EWT	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	JS28F128J3F	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F128M29EWH	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F128M29EWL	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F128P30BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F128P30TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F128P33TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256J3F	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256M29EWH	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256M29EWL	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P30BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P30T2	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P30TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P33BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P33T2	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F256P33TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F320J3F	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512M29EWH	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512M29EWL	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P30BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P30EF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P30TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P33BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P33EF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F512P33TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F640J3F	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F640P30BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F640P30TF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F640P33BF	XA28F2.EXE	M1-UN-TS56	
MICRON	JS28F640P33TF	XA28F2.EXE	M1-UN-TS56	
MICRON	M28W320FCB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M28W320FCB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
MICRON	M28W320FCT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M28W640HCB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M28W640HCT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29DW128G-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29DW256G-NF	XA28F2.EXE	M1-UN-TS56	
MICRON	M29DW256G-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29F160FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F160FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F200FB-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F200FB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	M29F200FT-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F200FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F400FB-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F400FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F400FT-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F400FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F800FB-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F800FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29F800FT-M	XA28F2.EXE	M1-UN-PS44	
MICRON	M29F800FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29W064FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29W128GH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W128GL-N	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W128GL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W128GL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W128GSH-N	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W128GSH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W128GSH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W128GSL-N	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W128GSL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W128GSL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	M29W160EB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29W256GH-N	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W256GH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W256GH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W256GL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W320ET-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W400DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640FB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640FT-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640GB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640GB-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W640GL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W640GH-NA	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29W640GH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640GH-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W640GL-NA	XA28F2.EXE	M1-UN-TS48A/TS56	
MICRON	M29W640GL-NB	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W640GL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640GL-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W640GT-NB	XA28F2.EXE	M1-UN-TS56	
MICRON	M29W640GT-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	M29W640GT-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M29W640GT-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	M29W800DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	MT28F002B1VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B1VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B1VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B1VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B3VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B3VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B5VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B5VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B5VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002B5VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002C5VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F002C5VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B3VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B3VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B5VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B5VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B5VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F004B5VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B1VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B1VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B1VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B1VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B3VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B3VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B5VG-B(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B5VG-B(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B5VG-T(VPP 12V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F008B5VG-T(VPP 5V)	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F016S3	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F016S5	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MICRON	MT28F128J3-FS	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F128J3-FS-M	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F128J3-RG	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F128J3-RG-M	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F200B1WG-B(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B1WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B1WG-T(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B1WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	MT28F200B3WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B3WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B5SG-B(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F200B5SG-T(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F200B5WG-B(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B5WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B5WG-T(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F200B5WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F320J3-FS	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F320J3-FS-M	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F320J3-RG	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F320J3-RG-M	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F400B1WG-B(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B1WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B1WG-T(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B1WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B3WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B3WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B5SG-B(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F400B5SG-T(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F400B5WG-B(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B5WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B5WG-T(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F400B5WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F640J3-FS	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F640J3-FS-M	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	MT28F640J3-RG	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F640J3-RG-M	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F640J3-RP	XA28F2.EXE	M1-UN-TS56	
MICRON	MT28F800B3WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F800B3WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F800B5SG-B(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F800B5SG-T(VPP 12V)	XA28F2.EXE	M1-UN-PS44	
MICRON	MT28F800B5WG-B(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F800B5WG-B(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F800B5WG-T(VPP 12V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	MT28F800B5WG-T(VPP 5V)	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MICRON	PC28F00AG18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AM29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F00AM29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F00AM29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F00AM29EWLE	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F00AP30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AP30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AP30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AP33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AP33EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00AP33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F00BP30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F064M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWBX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWHX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F064M29EWTX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F128G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F128J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F128M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F128M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F128P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	PC28F128P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F128P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F128P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F256G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F256J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F256M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F256P30B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P30T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P33B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F256P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F320J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F512G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F512M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F512M29EWHA	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F512M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F512M29EWLE	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	PC28F512P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F512P30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F512P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F512P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F512P33EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F640J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F640P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F640P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC28F640P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC28F640P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
MICRON	PC48F4400P0TB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC48F4400P0VB02	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PC48F4400P0VB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	PF48F3000P0ZBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PF48F3000P0ZTQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PF48F4000P0ZBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PF48F4000P0ZTQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PF48F4400P0VBQ2	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PF48F4400P0VBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
MICRON	PZ28F032M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F032M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F032M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F032M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWBX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWHX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	PZ28F064M29EWTX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MICRON	RC28F256M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	RC28F256M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MICRON	RC28F256P30B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P30T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P33B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P33T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC28F256P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	RC48F4400P0VB02	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	RC48F4400P0VB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MICRON	M25P05-A	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P10-A	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P128(MLP8)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P128(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P16(MLP8)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P16(SOP8)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P20	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P32	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P32(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P40	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P64(MLP8)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P64(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25P80	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PE10	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PE16	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PE20	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PE40	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PE80	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX16	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX32	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX32(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX64	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX64(SOP16)	XSPROM.EXE	M1-UN-DP48	
MICRON	M25PX80	XSPROM.EXE	M1-UN-DP48	
MICRON	M45PE10	XSPROM.EXE	M1-UN-DP48	
MICRON	M45PE16	XSPROM.EXE	M1-UN-DP48	
MICRON	M45PE20	XSPROM.EXE	M1-UN-DP48	
MICRON	M45PE40	XSPROM.EXE	M1-UN-DP48	
MICRON	M45PE80	XSPROM.EXE	M1-UN-DP48	
MICRON	MT25QL512ABA1E12	XSPROM.EXE	M1-UN-DP48	
MICRON	MT25QL512ABA8ESF	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q00AAx3GSFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax1EF6xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax3EF6xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax3ESCxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q032Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax1EF6xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax3EF6xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax3ESECxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q064Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1BF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1BSFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1EF7xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1TF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax1TSFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3BF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3BSExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3BSFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3EF7xxx	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MICRON	N25Q128Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q128Ax3TF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q256Ax1EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q256Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q256Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q256Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q512Ax1GSFxxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q512Ax3G12xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q512Ax3GF8xxx	XSPROM.EXE	M1-UN-DP48	
MICRON	N25Q512Ax3GSFxxx	XSPROM.EXE	M1-UN-DP48	
MITSUBISHI	27128(21V)	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	27C128K(21V)	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5L2764(21V)	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5L27C128	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27401AK	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C101	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C102	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C202	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C256AK	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C401	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C401K	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C402	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M27C512AK	XMEM1.EXE	M1-UN-DP48	
MITSUBISHI	M5M28F101	XMEM2.EXE	M1-UN-DP48	
MITSUBISHI	M5M28F102	XMEM2.EXE	M1-UN-DP48	
MMI	63S081N	XBPPGM.EXE	M1-UN-DP48	
MMI	PAL12L6/-2	XPLD3.EXE	M1-UN-DP48	
MMI	PAL16L8	XPLD3.EXE	M1-UN-DP48	
MMI	PAL16L8B-4	XPLD3.EXE	M1-UN-DP48	
MMI	PAL16R8B	XPLD3.EXE	M1-UN-DP48	
MOSEL	29F080-PFTN	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MOSEL	29F400TA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MOSEL VITELIC	V29C31004B	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C31004T	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51000T	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51001B	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51001T	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51002B	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51002T	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51004B	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29C51004T	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29LC51000	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29LC51001	XMEM2.EXE	M1-UN-DP48	
MOSEL VITELIC	V29LC51002	XMEM2.EXE	M1-UN-DP48	
MOSTEK	27C256	XMEM1.EXE	M1-UN-DP48	
MOSTEK	27C512	XMEM1.EXE	M1-UN-DP48	
MOSTEK	27L256	XMEM1.EXE	M1-UN-DP48	
MOSTEK	27L512	XMEM1.EXE	M1-UN-DP48	
MOSTEK	ET2716(25V)	XMEM1.EXE	M1-UN-DP48	
MOTOROLA	DSP56F801	XA56FXX.EXE	M1-UN-DP48	ADP-56F801-TQ
MOTOROLA	DSP56F803	XA56FXX.EXE	M1-UN-DP48	ADP-56F803-TQ
MOTOROLA	DSP56F805	XA56FXX.EXE	M1-UN-DP48	ADP-56F805-LQ144
MOTOROLA	MC13211	XAMHCS.EXE	M1-UN-ML64	
MOTOROLA	MC13212	XAMHCS.EXE	M1-UN-ML64	
MOTOROLA	MC13213	XAMHCS.EXE	M1-UN-ML64	
MOTOROLA	MC13213A	XAMHCS.EXE	M1-UN-ML64	
MOTOROLA	MC13214	XAMHCS.EXE	M1-UN-ML64	
MOTOROLA	MC56F8002	XA56FXX.EXE	M1-UN-DP48	
MOTOROLA	MC56F8006	XA56FXX.EXE	M1-UN-QF32	
MOTOROLA	MC56F8011	XA56FXX.EXE	M1-UN-QF32	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Baustejntyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC56F8013	XA56FXX.EXE	M1-UN-DP48	ADP-56F8013-TQ
MOTOROLA	MC56F8013(ISP)	XA56FXX.EXE	M1-JTAG-CN10	
MOTOROLA	MC56F8013*	XA56FXX.EXE	M1-UN-QF32	
MOTOROLA	MC56F8014	XA56FXX.EXE	M1-UN-QF32	
MOTOROLA	MC56F8023	XA56FXX.EXE	M1-UN-QF32	
MOTOROLA	MC56F8025	XA56FXX.EXE	M1-UN-QF32	
MOTOROLA	MC56F8025	XA56FXX.EXE	M1-AVR-QF44	
MOTOROLA	MC56F8037	XA56FXX.EXE	M1-UN-TQ64	
MOTOROLA	MC56F8257MLH	XA56FXX.EXE	M1-UN-TQ64	
MOTOROLA	MC56F82723VFN	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFN32
MOTOROLA	MC56F82748VLH	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFP64
MOTOROLA	MC56F8366	XA56FXX.EXE	M1-56F8366-TQ144	
MOTOROLA	MC68701S(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68701
MOTOROLA	MC68701U4(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68701
MOTOROLA	MC68705P3(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68705P3
MOTOROLA	MC68705P5(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68705P3
MOTOROLA	MC68HC11A1(DIP48)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2
MOTOROLA	MC68HC11A1(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
MOTOROLA	MC68HC11A1(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC68HC11E1(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
MOTOROLA	MC68HC11E1(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC68HC11E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
MOTOROLA	MC68HC11E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC68HC11F1(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC11F1
MOTOROLA	MC68HC11F1(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC11F1-Q80
MOTOROLA	MC68HC705B16(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
MOTOROLA	MC68HC705B16N(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
MOTOROLA	MC68HC705B16N(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
MOTOROLA	MC68HC705B16N(SDIP56)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-SD
MOTOROLA	MC68HC705B32(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
MOTOROLA	MC68HC705B5(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705B5-PL
MOTOROLA	MC68HC705C8(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C8(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
MOTOROLA	MC68HC705C8A(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9
MOTOROLA	MC68HC705C8A(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C8A(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
MOTOROLA	MC68HC705C8A(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-Q
MOTOROLA	MC68HC705C8A(SDIP42)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-SD
MOTOROLA	MC68HC705C9(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C9(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
MOTOROLA	MC68HC705C9A(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9
MOTOROLA	MC68HC705C9A(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL
MOTOROLA	MC68HC705C9A(PLCC44)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-PL44
MOTOROLA	MC68HC705C9A(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705C9-Q
MOTOROLA	MC68HC705J1A(DIP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705J1AV2
MOTOROLA	MC68HC705J1A(SOP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705J1A-SV2
MOTOROLA	MC68HC705JJ7(DIP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JJ7
MOTOROLA	MC68HC705JJ7(SOP20)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JJ7-S
MOTOROLA	MC68HC705JP7(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705JP7-S
MOTOROLA	MC68HC705KJ1(DIP16)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705KJ1
MOTOROLA	MC68HC705KJ1(SOP16)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705KJ1-S
MOTOROLA	MC68HC705L16(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705L5-Q
MOTOROLA	MC68HC705L5(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705L5-Q
MOTOROLA	MC68HC705P6(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
MOTOROLA	MC68HC705P6A(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
MOTOROLA	MC68HC705P6A(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P9-S
MOTOROLA	MC68HC705P9(DIP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P
MOTOROLA	MC68HC705P9(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705P9-S
MOTOROLA	MC68HC705X32(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
MOTOROLA	MC68HC711D3(DIP40)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D
MOTOROLA	MC68HC711D3(PLCC44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D3-PL
MOTOROLA	MC68HC711D3(QFP44)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711D3-Q
MOTOROLA	MC68HC711E20(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC68HC711E20(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC68HC711E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
MOTOROLA	MC68HC711E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC68HC711E9(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E9-Q
MOTOROLA	MC68HC711EA9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68711EA9-PL
MOTOROLA	MC68HC711K4(PLCC84)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711
MOTOROLA	MC68HC711K4(QFP80)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711K4-Q
MOTOROLA	MC68HC711KA2(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711KA4
MOTOROLA	MC68HC711KA4(PLCC68)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711KA4
MOTOROLA	MC68HC811E2(DIP48)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2
MOTOROLA	MC68HC811E2(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC811E2-PL
MOTOROLA	MC68HC812A4CPV8	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC812A-Q112
MOTOROLA	MC68HC908AB32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
MOTOROLA	MC68HC908AP16(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
MOTOROLA	MC68HC908AP16(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
MOTOROLA	MC68HC908AP32(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
MOTOROLA	MC68HC908AP32(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
MOTOROLA	MC68HC908AP64(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
MOTOROLA	MC68HC908AP64(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
MOTOROLA	MC68HC908AP8(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-LQ48
MOTOROLA	MC68HC908AP8(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908AP-Q44
MOTOROLA	MC68HC908AS60A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
MOTOROLA	MC68HC908AZ32A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
MOTOROLA	MC68HC908AZ60(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
MOTOROLA	MC68HC908AZ60A(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908AB32-Q
MOTOROLA	MC68HC908BD48(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908BD48
MOTOROLA	MC68HC908EY16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908EY-TQ32
MOTOROLA	MC68HC908GP20(DIP40)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX
MOTOROLA	MC68HC908GP32(DIP40)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GP32(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GP32(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908GTX-SD
MOTOROLA	MC68HC908GR4(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8-Q
MOTOROLA	MC68HC908GR8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8
MOTOROLA	MC68HC908GR8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908GR8-Q
MOTOROLA	MC68HC908GT16(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GT8(QFP44)	XA908.EXE	M1-UN-DP48	ADP-68HC908GPX-Q
MOTOROLA	MC68HC908GT8(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908GTX-SD
MOTOROLA	MC68HC908GZ32(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908GZ-LQ48
MOTOROLA	MC68HC908GZ8(LQFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908GZ-LQ48
MOTOROLA	MC68HC908JB12(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-S28
MOTOROLA	MC68HC908JB16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-Q
MOTOROLA	MC68HC908JB16(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB16-S28
MOTOROLA	MC68HC908JB8(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8
MOTOROLA	MC68HC908JB8(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8-S20
MOTOROLA	MC68HC908JB8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JB8-S28
MOTOROLA	MC68HC908JK1(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
MOTOROLA	MC68HC908JK1(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JK1E(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
MOTOROLA	MC68HC908JK1E(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JK3(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
MOTOROLA	MC68HC908JK3(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JK3E(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
MOTOROLA	MC68HC908JK3E(SOP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3-S
MOTOROLA	MC68HC908JK8(DIP20)	XA908.EXE	M1-UN-DP48	ADP-68HC908JK3
MOTOROLA	MC68HC908JL16(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
MOTOROLA	MC68HC908JL16(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-Q
MOTOROLA	MC68HC908JL16(SDIP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-SD
MOTOROLA	MC68HC908JL16(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JL3(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
MOTOROLA	MC68HC908JL3(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JL3E(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
MOTOROLA	MC68HC908JL3E(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC68HC908JL8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3
MOTOROLA	MC68HC908JL8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-Q
MOTOROLA	MC68HC908JL8(SDIP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL8-SD
MOTOROLA	MC68HC908JL8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908JL3-S
MOTOROLA	MC68HC908JR32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908JR32-Q64
MOTOROLA	MC68HC908JW32(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908JW32-LQ52
MOTOROLA	MC68HC908JW32(MLF48)	XA908.EXE	M1-UN-DP48	ADP-68HC908JW32-ML
MOTOROLA	MC68HC908KX2(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX
MOTOROLA	MC68HC908KX2(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX-S
MOTOROLA	MC68HC908KX8(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX
MOTOROLA	MC68HC908KX8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908KX-S
MOTOROLA	MC68HC908LD64(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LD-QF64
MOTOROLA	MC68HC908LJ12 (LQFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ64
MOTOROLA	MC68HC908LJ12 (QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
MOTOROLA	MC68HC908LJ12(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
MOTOROLA	MC68HC908LJ24(LQFP80)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-TQ80
MOTOROLA	MC68HC908LJ24(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
MOTOROLA	MC68HC908LJ8(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
MOTOROLA	MC68HC908LK24(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-QF64
MOTOROLA	MC68HC908LV8(LQFP52)	XA908.EXE	M1-UN-DP48	ADP-68HC908LJ-LQ52
MOTOROLA	MC68HC908MR16(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR32-Q
MOTOROLA	MC68HC908MR32(QFP64)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR32-Q
MOTOROLA	MC68HC908MR8(DIP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8
MOTOROLA	MC68HC908MR8(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8-Q32
MOTOROLA	MC68HC908MR8(SOP28)	XA908.EXE	M1-UN-DP48	ADP-68HC908MR8-S
MOTOROLA	MC68HC908QB4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QB4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QB8(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QB8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QB8(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QC16(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QC16(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QT1(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT1(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QT1A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT1A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QT2(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT2(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QT2A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT2A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QT4(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT4(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QT4A(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QT4A(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	MC68HC908QY1(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY1(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY1(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QY1A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY1A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY1A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QY2(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY2(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY2(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QY2A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY2A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY2A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QY4(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	MC68HC908QY4A(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	MC68HC908QY4A(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908QY4A(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC68HC908QY8(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	MC68HC908RF2(QFP32)	XA908.EXE	M1-UN-DP48	ADP-68HC908RF2-TQ
MOTOROLA	MC68HC908SR12(QFP48)	XA908.EXE	M1-UN-DP48	ADP-68HC908SR12-Q
MOTOROLA	MC68HC908SR12(SDIP42)	XA908.EXE	M1-UN-DP48	ADP-68HC908SR12-SD
MOTOROLA	MC68HC912B32CFU8	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912B-Q80
MOTOROLA	MC68HC912DG128ACPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912D-Q112
MOTOROLA	MC68S711E9(PLCC52)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
MOTOROLA	MC68S711E9(PLCC52)*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
MOTOROLA	MC912DG128ACPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912D-Q112
MOTOROLA	MC9RS08KA1CPC	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA1CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9RS08KA2CPC	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA2CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9RS08KA4CPG	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA4CPJ	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9RS08KA4CWG	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9RS08KA4CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9RS08KA8CPG	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA8CPJ	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08KA8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9RS08KA8CWG	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9RS08KA8CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9RS08KB8CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9RS08SA12CBM	XAMHCS.EXE	M1-UN-DP48	CNV-SDIP-DIP32
MOTOROLA	MC9RS08SA12CPJ	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9RS08SA12CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08AC16CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AC16CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AC16CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08AC32CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AC32CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AC32CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08AC32CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AC32CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AC48CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08AC48CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AC48MFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AC48MFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AC48MFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AC60CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AC60CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AC60CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08AC60CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AC60CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AC8CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AC8CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AC8CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08AC96CLKE	XAMHCS.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MC9S08AW16CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AW16CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AW16CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AW16CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AW16MFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AW32CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AW32CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AW32CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AW32CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AW48CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AW48CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AW48CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AW48CPUE	XAMHCS.EXE	M1-UN-TQ64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC9S08AW60CFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08AW60CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08AW60CFUE	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08AW60CPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08AW60MPUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08DN16CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08DN16CLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DN32CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08DN32CLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DN32CLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08DN60CLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DN60CLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08DN60MLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DZ128CLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DZ16ACLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DZ16CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08DZ32ACLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DZ32AMLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08DZ60MLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08DZ60MLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08DZ60MLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08FL16CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08FL8CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08GB32ACFUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08GB60ACFUE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08GB60CFU	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08GT16ACBE	XAMHCS.EXE	M1-UN-SD42	
MOTOROLA	MC9S08GT16ACFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
MOTOROLA	MC9S08GT16ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08GT16AMFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
MOTOROLA	MC9S08GT16CFD	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08GT32ACBE	XAMHCS.EXE	M1-UN-SD42	
MOTOROLA	MC9S08GT32ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08GT32CFB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
MOTOROLA	MC9S08GT60ACBE	XAMHCS.EXE	M1-UN-SD42	
MOTOROLA	MC9S08GT60ACFBE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
MOTOROLA	MC9S08GT60ACFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08GT60CB	XAMHCS.EXE	M1-UN-SD42	
MOTOROLA	MC9S08GT60CFB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S08GT-Q44
MOTOROLA	MC9S08GT8ACBE	XAMHCS.EXE	M1-UN-SD42	
MOTOROLA	MC9S08GT8AMFDE	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08JM16	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08JM16CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08JM32CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08JM32CLD	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08JM32CLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08JM32CQH	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08JM60CGT	XAMHCS.EXE	M1-UN-BG68	TOP-MCU-QN48/A
MOTOROLA	MC9S08JM60CLDE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08JM60CLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08JM60CQH	XAMHCS.EXE	M1-UN-QF64	
MOTOROLA	MC9S08JM8CLD	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08JR12FAE	XAMHCS.EXE	M1-UN-TQ48/LQ48	
MOTOROLA	MC9S08LC36CLHE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08LG32CLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08LL16CLHE	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08LL8CLF	XAMHCS.EXE	M1-UN-LQ48	
MOTOROLA	MC9S08MM64VLH	XAMHCS.EXE	M1-UN-TQ64	
MOTOROLA	MC9S08PA4	XAMHCS.EXE	M1-MC9S08PA-DN8	
MOTOROLA	MC9S08PA4VTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08PA8VTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08QA2CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC9S08QA2CFQE	XAMHCS.EXE	M1-UN-DP48	CNV-DFN-HCS08
MOTOROLA	MC9S08QA2CPAE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QA4CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QA4CPAE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QD2CPC	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QD2CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QD2MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QD4CPC	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QD4CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QD4MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QE16CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08QE4CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08QE4CPG	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QE4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08QE4CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08QE4CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08QE8CLC	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08QE8CPG	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QE8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08QE8CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08QE8CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08QG4CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QG4CDTE	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08QG4CFFE	XAMHCS.EXE	M1-UN-DP48	CNV-QFN16-HCS08
MOTOROLA	MC9S08QG4CFQE	XAMHCS.EXE	M1-UN-DP48	CNV-DFN-HCS08
MOTOROLA	MC9S08QG4CPAE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QG4CPBE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QG8CDNE	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08QG8CDTE	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08QG8CFFE	XAMHCS.EXE	M1-UN-DP48	CNV-QFN16-HCS08
MOTOROLA	MC9S08QG8CPBE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08QG8MPAE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08RC16CFG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC16CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC32CFG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC32FG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC32FJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RC60FG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC8CFG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RC8CFJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RD16CDWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RD16CPE	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08RD16DWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RD16FG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RD16FJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RD32CDWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RD60DWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RD8CDWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RD8DWE	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08RE16CFG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RE16CFJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RE16CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RE16FGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RE16FJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RE16FJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RE8CFJ	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RE8CFJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RG32CFGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RG32FGE	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RG32FJE	XAMHCS.EXE	M1-UN-QF32	
MOTOROLA	MC9S08RG60CFG	XAMHCS.EXE	M1-AVR-QF44	
MOTOROLA	MC9S08RG60CFJE	XAMHCS.EXE	M1-UN-QF32	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC9S08SE4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SE8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SE8CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08SH16CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SH16CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH16CTL	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH16CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08SH32CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SH32CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH32CTL	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH32CWL	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08SH4CFK	XAMHCS.EXE	M1-UN-DP48	CNV-QFN-DIP24A
MOTOROLA	MC9S08SH4CPJ	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08SH4CSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08SH4CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SH4CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH4CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08SH4MTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SH8CPJ	XAMHCS.EXE	M1-UN-DP48	
MOTOROLA	MC9S08SH8CTG	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/28
MOTOROLA	MC9S08SH8CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S08SH8CWJ	XAMHCS.EXE	M1-UN-SO28	
MOTOROLA	MC9S08SH8MSC	XAMHCS.EXE	M1-UN-DP48/SO16	CNV-SOP-NDIP16F/G
MOTOROLA	MC9S08SL8CTJ	XAMHCS.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
MOTOROLA	MC9S12A128BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12A128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12A256CCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12A256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12A32CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12A512CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12A64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12A64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12B128CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12B128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12B128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12B256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12B64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12B64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12C128CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
MOTOROLA	MC9S12C128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12C32CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
MOTOROLA	MC9S12C32CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12C32MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12C32MPB	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12C-Q52
MOTOROLA	MC9S12C64CFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
MOTOROLA	MC9S12C64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12C96CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12D64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12D64CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12D64CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12D64MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12D64MPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12D64VFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12D64VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DB128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DB128MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DG128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DG128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DG128MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DG128MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DG128VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DG256BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MC9S12DG256CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DG256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DG256MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DJ128CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DJ256BCFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DJ256CMFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DJ64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12DP256BCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DP512CPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DP512VPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DT128BCPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12DT256CPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12E128CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12E128CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12E128CPV	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12E128MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12E256MFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12E256MPVE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DP-TQ112
MOTOROLA	MC9S12E32CFUE	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12E64CFU	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12DJ-Q80
MOTOROLA	MC9S12G128CLH	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF64
MOTOROLA	MC9S12G128CLL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF100
MOTOROLA	MC9S12G48CLC	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF32
MOTOROLA	MC9S12G64CLC	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12G-QF32
MOTOROLA	MC9S12GC64MFAE	XAMHCS.EXE	M1-MC9S12C-QF48	
MOTOROLA	MC9S12NE64CPVE	XAMHCS.EXE	M1-MC9S12NE-LQ112	
MOTOROLA	MC9S12NE64VTU	XAMHCS.EXE	M1-MC9S12NE-TQ80	
MOTOROLA	MC9S12P96CLH	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12P-QF64
MOTOROLA	MC9S12VR48F2CLC	XAMHCS.EXE	M1-MC9S12VR-LQ32	
MOTOROLA	MC9S12XA256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
MOTOROLA	MC9S12XA256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XB128MAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
MOTOROLA	MC9S12XD128MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XD256CAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
MOTOROLA	MC9S12XD256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
MOTOROLA	MC9S12XD256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XDP512MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XDT256CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
MOTOROLA	MC9S12XDT256CAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XDT512CAG	XAMHCS.EXE	M1-MC9S12XD-TQ144	
MOTOROLA	MC9S12XEP768CAG	XAMHCS.EXE	M1-MC9S12XE-LQ144	
MOTOROLA	MC9S12XEP768MAG	XAMHCS.EXE	M1-MC9S12XE-LQ144	
MOTOROLA	MC9S12XEQ512MAA	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
MOTOROLA	MC9S12XET256VAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XHZ512VAG	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XHZ-Q144
MOTOROLA	MC9S12XHZ512VAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XHZ-Q112
MOTOROLA	MC9S12XS128MAL	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q112
MOTOROLA	MC9S12XS256VAAR	XAMHCS.EXE	M1-UN-DP48	ADP-MC9S12XD-Q80
MOTOROLA	MC9S12XS64CAE	XAMHCS.EXE	M1-MC9S12XS-QF64	
MOTOROLA	MCF51AC128ACFUE	XAMCF.EXE	M1-UN-QF64	
MOTOROLA	MCF51AC128AVLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MCF51AC256ACLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MCF51AC256BCFUE	XAMCF.EXE	M1-UN-QF64	
MOTOROLA	MCF51AC256BCLKE	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MCF51JE256VLL	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q100
MOTOROLA	MCF51JF128VLH	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q64
MOTOROLA	MCF51JM128EVLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MCF51JM128VLD	XAMCF.EXE	M1-AVR-QF44	
MOTOROLA	MCF51JM128VLH	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF51JM128VLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80
MOTOROLA	MCF51JM64EVLH	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF51JM64VLK	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q80

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MCF51JU32VFM	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-QN32
MOTOROLA	MCF51JU64VLF	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-Q48
MOTOROLA	MCF51QM32VFM	XAMCF.EXE	M1-UN-DP48	ADP-MCF51XX-QN32
MOTOROLA	MCF52100CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52100CEP	XAMCF.EXE	M1-UN-ML64	
MOTOROLA	MCF52110CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52110CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
MOTOROLA	MCF52110CEP	XAMCF.EXE	M1-UN-ML64	
MOTOROLA	MCF5211CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF5211CEP	XAMCF.EXE	M1-UN-ML64	
MOTOROLA	MCF5212CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF5213CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
MOTOROLA	MCF5214CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF5216CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF5216CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF52210CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52210CEP	XAMCF.EXE	M1-UN-ML64	
MOTOROLA	MCF52211CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52211CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
MOTOROLA	MCF52211CEP	XAMCF.EXE	M1-UN-ML64	
MOTOROLA	MCF52212CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52213CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52221CAE	XAMCF.EXE	M1-UN-TQ64	
MOTOROLA	MCF52221CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
MOTOROLA	MCF52223CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q100
MOTOROLA	MCF52230CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52230CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
MOTOROLA	MCF52231CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52231CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
MOTOROLA	MCF52232AF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52232CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52233CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52233CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
MOTOROLA	MCF52234CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
MOTOROLA	MCF52235CAL	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q112
MOTOROLA	MCF52236AF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF52236CAF	XAMCF.EXE	M1-UN-DP48	ADP-MCF52XX-Q80
MOTOROLA	MCF5281CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF5281CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF5282CVF	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MCF5282CVM	XAMCF.EXE	M1-UN-DP48	ADP-MCF5282-BG256
MOTOROLA	MK10DN512ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
MOTOROLA	MK10DX256ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK10FN1MOVLLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK10FN1MOVMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK10FX512VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK20DN512VLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK20DN512ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
MOTOROLA	MK20DX128VFM5	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-QN32
MOTOROLA	MK20DX128VLF5	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q48
MOTOROLA	MK20DX128VLH7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q64
MOTOROLA	MK20DX256VLK7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
MOTOROLA	MK20DX256ZVLK10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q80
MOTOROLA	MK20DX256ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK40DN512VLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK40DN512ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK40DX256VLL7	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK40N512VLL100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK40X256VLQ100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK40X256VMD100	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK60DN512VLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK60DN512VMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MOTOROLA	MK60DN512ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK60DN512ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK60DN512ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK60DN512ZVMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK60DX256ZVLL10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK60DX256ZVLQ10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK60DX256ZVMD10	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK60FN1M0VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK60FN1M0VMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK60FX512VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK61FN1M0VMD12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG144
MOTOROLA	MK64FN1M0VLL12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q100
MOTOROLA	MK64FN1M0VLQ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-Q144
MOTOROLA	MK70FN1M0VMJ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG256
MOTOROLA	MK70FX512VMJ12	XAMCF.EXE	M1-UN-DP48	ADP-KINETIS-BG256
MOTOROLA	MWCT1000CFM	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFN32
MOTOROLA	MWCT1001AVLH	XA56FXX.EXE	M1-UN-DP48	ADP-56F827XX-QFP64
MOTOROLA	S553104T2(DIP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	S553104T2(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	S553104T4(SOP8)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S8
MOTOROLA	S553104Y4(DIP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX
MOTOROLA	S553104Y4(SOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-S
MOTOROLA	S553104Y4(TSSOP16)	XA908.EXE	M1-UN-DP48	ADP-68HC908QYX-TS
MOTOROLA	XC68C812A4PVE5	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC812A-Q112
MOTOROLA	XC68HC705B32(QFP64)	XAMMPU.EXE	M1-UN-DP48	ADP-68HC705X16-Q
MOTOROLA	XC68HC805P18(SOP28)	XAMMPU.EXE	M1-UN-DP48	ADP-68805P18-S
MOTOROLA	XC68HC912BD32CFU10	XAMHCS.EXE	M1-UN-DP48	ADP-MC68HC912B-Q80
MSTAR	PS25LV512A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX27C1000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C1001	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C1024	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C1100	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C2000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C2048	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C2100	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C256	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C4000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C4000A	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C4096	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C4100	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C4111	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C512	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C8000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27C8100	XAEP42.EXE	M1-UN-DP48	
MXIC	MX27L1000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27L2000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27L256	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27L4000	XMEM1.EXE	M1-UN-DP48	
MXIC	MX27L512	XMEM1.EXE	M1-UN-DP48	
MXIC	KH29LV040C	XMEM2.EXE	M1-UN-DP48	
MXIC	KH29LV160CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV160DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV160DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV320CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV320DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV320DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV400CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV640DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV640DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	KH29LV800CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX26C1000A	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26C1000B	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX26C1024A	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26C2000B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26C512A	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26F128J3T	XA28F2.EXE	M1-UN-TS56	
MXIC	MX26F128J3XC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX26F640J3T	XA28F2.EXE	M1-UN-TS56	
MXIC	MX26F640J3XC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX26L12711M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX26L12811M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX26L6419T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26L6420M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX26L6420T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV004B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26LV004BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX26LV004T	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26LV004TT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX26LV008BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX26LV008TT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX26LV040	XMEM2.EXE	M1-UN-DP48	
MXIC	MX26LV160ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV160ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV160BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV160BXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV160BXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX26LV160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV160TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV160TXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX26LV320TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV400BXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV400BXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX26LV400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV400TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV400TXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX26LV800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV800BXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV800BXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX26LV800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX26LV800TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX26LV800TXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX28F002BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX28F002NTT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX28F002TT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX28F1000	XMEM2.EXE	M1-UN-DP48	
MXIC	MX28F1000C	XMEM2.EXE	M1-UN-DP48	
MXIC	MX28F1000P	XMEM2.EXE	M1-UN-DP48	
MXIC	MX28F160C3BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX28F160C3TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX28F2000	XMEM2.EXE	M1-UN-DP48	
MXIC	MX28F4000	XMEM2.EXE	M1-UN-DP48	
MXIC	MX28F640C3BBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX28F640C3BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F001B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F001T	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F002B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F002NT	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F002T	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F004B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F004T	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F016T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F022NT	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F040	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29F040C	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F080M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F080T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29F100BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F100TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F1610AM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F1610BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F1610M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F1611M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F1615P	XA28F2.EXE	M1-UN-DP48	
MXIC	MX29F200BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F200CBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F200CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F200CTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F200CTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F200TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F4000	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29F400BM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F400CBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F400CBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F400CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F400CTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F400CTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F400TM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F800BM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29F800CBT	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F800CTT	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29F800TM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29F800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29GA120ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA127ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA128EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA128EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA128ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA128ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA128FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA128FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA129EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA129ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA250FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA255ELXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA256EHXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA256EHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA256ELXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA256ELXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA256FHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA256FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA257EHXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA257ELXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA257FHXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA257FLXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA320EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA320ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA321EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA321ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GA510FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA510FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA512FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA512FHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29GA512FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA640EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA640ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GA641EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GL128EDT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128EHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GL128EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL128ELT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GL128ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL128EUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128FDT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128FDXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL128FDXG-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX29GL128FHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL128FHXG-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX29GL128FLT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL128FLXG-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX29GL128FUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL128FUXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256EDT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256EDXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256EHMC-Q	XA28F2.EXE	M1-UN-DP48	ADP-MX29GLXXX-SS70
MXIC	MX29GL256EHT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256EHXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GL256EHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256ELT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256ELXC-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29GL256ELXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256EUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256EUXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256FDT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256FDXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256FHT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256FHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256FHXG-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX29GL256FLT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL256FUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL256FUXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL320EBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29GL320EBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29GL320EHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL320EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL320ELT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL320ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL320ETT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29GL320ETXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29GL512EHMC-Q	XA28F2.EXE	M1-UN-DP48	ADP-MX29GLXXX-SS70
MXIC	MX29GL512EHT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512EHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512ELT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512ELXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512FDT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512FHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512FHT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512FHXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512FLT2-G	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29GL512FLT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512FLXF-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512FLXG-Q	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX29GL512FUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512FUXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL512GHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL512GLT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL640EBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29GL640EBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29GL640EHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL640EHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL640ELT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29GL640ELXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX29GL640ETT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29GL640ETXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29L1611GPC	XA28F2.EXE	M1-UN-DP48	
MXIC	MX29L1611M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29L1611PM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29L1611T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29L3211M	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29L3211TC	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29L8100G	XA28F2.EXE	M1-UN-DP48	
MXIC	MX29LA128MBT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA128MTT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA129DBXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA129DTXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA129MHT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA129MLT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA320DHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA320DLXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA320MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LA320MBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LA320MBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LA320MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LA320MTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LA320MTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LA321DHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA321DLXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA321MBXC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA321MHT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA321MHXC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA321MLT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA321MLXC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA321MTT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LA321MTXC	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA640EHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA640ELXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA641DHXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LA641DLXC-G	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
MXIC	MX29LV002CB	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV002CT	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV002NCB	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV002NCT	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV004B	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV004BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV004CB	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV004CBT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV004CT	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV004CTT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV004T	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV004TT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29LV008BBT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV008BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV008BTT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV008CBT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV008CTT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV008TT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV017AT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV017BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV033AT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV033CT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV033MT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV033T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV040	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV040C	XMEM2.EXE	M1-UN-DP48	
MXIC	MX29LV065BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV065MT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV065T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV081BT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV081T	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
MXIC	MX29LV128DBT-Q	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV128DBT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV128DTT-Q	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV128DTT2-Q	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV128MBT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV128MHT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV128MLT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV128MTT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV160ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160ABXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160ABXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160ATXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160ATXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160BBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160BBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160BBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160BBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160BM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160BTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160BTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160BTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160CBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160CBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160CBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160CBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160CTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160CTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160CTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160CTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV160DBXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV160DBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV160DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV160TM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV161DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV161DBXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV161DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV161DTXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29LV320ABXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320ABXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320ATXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320ATXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320CBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320CBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320CBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320CTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320CTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320CTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320CTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320DBXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320DBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320DTMC-G	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV320DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320DTXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320DTXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320EBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320EBXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320EBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320ETT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320ETXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320ETXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320MBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320MBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320MHT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV320MLT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV320MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320MTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV320MTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV320MTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV320TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV321DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV321DBXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV321DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV321DTXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV400BM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV400BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV400BXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV400BXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV400CBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV400CBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV400CBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV400CBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV400CTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV400CTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV400CTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV400CTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV400TM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV400TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV400TXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV640BBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV640BBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV640BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV640BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV640BUT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX29LV640DBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV640DBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV640DTMC-G	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV640DTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV640DTXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV640EBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV640EBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV640ETT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV640ETXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV640MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV640MHT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV640MLT	XA28F2.EXE	M1-UN-TS56	
MXIC	MX29LV640MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV640TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV641MHT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV641MLT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800ABXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800ABXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800ATXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800ATXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800BBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800BBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800BBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800BBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800BM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800BTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800BTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800BTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800CBM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800CBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV800CBXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800CBXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800CBXG-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800CTM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800CTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV800CTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29LV800CTXB	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29LV800CTXE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800CTXG-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29LV800TM	XA28F2.EXE	M1-UN-PS44	
MXIC	MX29LV800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV160TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
MXIC	MX29LV320BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
MXIC	MX29LV320TXB	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
MXIC	MX29SL402CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29SL402CBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29SL402CTXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX29SL800CBT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29SL800CBXE-G	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
MXIC	MX29SL800CTT-G	XA28F2.EXE	M1-UN-TS48A/TS56	
MXIC	MX29SL800CTXB-G	XA28F2.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
MXIC	MX68GA1G0FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX68GA1G0FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX68GL1G0FHT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX68GL1G0FHXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX68GL1G0FLT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX68GL1G0FLXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX68GL1G0FUT2-G	XA28F2.EXE	M1-UN-TS56	
MXIC	MX68GL1G0FUXF-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
MXIC	MX68GL2G0FHM-G	XA28F2.EXE	M1-UN-DP48	ADP-MX29GLXXX-SS70
MXIC	MX69F1602C3BXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69F1604C3BXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69F1604C3TXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69GL126EAXGI-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL127EAXGW-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL638EAXGI-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL640EAXGI-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL640EAXGW-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL640ECXGW-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69GL642EAXGI-G	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
MXIC	MX69LW162TXB	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
MXIC	MX69LW1641BXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69LW1641TXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69LW164TXB	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
MXIC	MX69LW3241ABXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	MX69LW3241ATXB	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
MXIC	KH25L1005A	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1006E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1021E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12835F	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12835F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12839F	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12845E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12855F	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L12873F	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1605A	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1605D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1605D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1606E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1608E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1633E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1635D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1636D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L1673E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L2006E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L25639F	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3205D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3205D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3206E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3208E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3235D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3239E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3255E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L3273E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L4005A	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L4006E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L512A	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L512E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6405D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6406E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6406E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6408E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6439E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6455E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6456E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L6473E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L8005	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	KH25L8006E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L8008E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L8036D	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25L8073E	XSPROM.EXE	M1-UN-DP48	
MXIC	KH25U8035E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25EL1024	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1005A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1005C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1021E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1025C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1026E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12801F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12805D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12835E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12835E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12835F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12835F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12836E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12836E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12839F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12845E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12845E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12855E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12855E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12855F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12855F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12865E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12873F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12873F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12875F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L12875F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1602	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605A(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1605D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1606E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1606E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1608E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1633E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1635D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1635D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1635E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1636D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1636D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1655D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1673E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L1675E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2005C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2016E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2025	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2025C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2026	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2026C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2026D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L2026E	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX25L25635E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25635E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25635F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25635F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25636E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25639F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25655E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25655E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25655F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25655F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25735E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25735E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25735F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25735F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L25835E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3205	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3205A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3205A(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3205D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3205D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3206E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3206E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3208D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3208E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3225D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3235D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3235D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3235E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3235E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3236D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3237D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3237D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3239E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3254E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3255D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3255E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3273E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3275E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L3291F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4005A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4005C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4025A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4025C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4026D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L4026E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L512	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L5121E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L51245G(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L512A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L512C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L512E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6402	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6402A	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6405	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6405D	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6405D(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6406E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6406E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6408E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6408E(SOP16)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MXIC	MX25L6435E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6435E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6436E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6439E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6445E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6445E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6446E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6455E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6455E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6456E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6465E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6465E(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6473E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L6475E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8008E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L802	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8025	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8035E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8036E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8073E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25L8075E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U1635E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U3235E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U3235F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U4035	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U6435E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U6435F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U8035	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25U8035E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V1006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V2006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V4005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V4005C	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V4006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V4035	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V512	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V512E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V8005	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V8006E	XSPROM.EXE	M1-UN-DP48	
MXIC	MX25V8035	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L1G45G	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L1G45G(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L51235F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L51235F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L51255F	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L51255F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX66L51259F(SOP16)	XSPROM.EXE	M1-UN-DP48	
MXIC	MX10E8050I	XPGM51.EXE	M1-UN-DP48/PL44	
MXIC	MX10EXA	XPGM51.EXE	M1-UN-DP48	
MXIC	MX10F201FC	XASIG.EXE	M1-UN-DP48	ADP-MX10F200-Q
MXIC	MX10F202FC	XASIG.EXE	M1-UN-DP48	ADP-MX10F200-Q
MXIC	MX10FLCDPCB	XPGM51.EXE	M1-UN-DP48	
MXIC	MX10FMAXD	XPGM51.EXE	M1-UN-DP48/PL44	
MYSON	MTV24C08	XSPROM.EXE	M1-UN-DP48	
MYSON	CS8953AR(SSOP28)	XASIG.EXE	M1-UN-SS34	
MYSON	CS8953G(LQFP32)	XASIG.EXE	M1-UN-QF32	
MYSON	CS8954-A1	XPGM51.EXE	M1-UN-DP48/PL44	
MYSON	CS8955F	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MYSON	CS8955G	XASIG.EXE	M1-UN-DP48	CNV-QFP48-78E61
MYSON	CS8955G*	XASIG.EXE	M1-UN-LQ48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
MYSON	CS8955HF	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
MYSON	CS8955HG	XASIG.EXE	M1-UN-DP48	CNV-QFP48-78E61
MYSON	CS8955HV	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
MYSON	CS8955V	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
MYSON	CS8957HV	XASIG.EXE	M1-UN-DP48	ADP-CS8957-PL44
MYSON	CS8958HG	XASIG.EXE	M1-UN-DP48	ADP-CS8958-Q48
MYSON	CS8966F(PQFP44)	XASIG.EXE	M1-UN-QF44	
MYSON	CS8966G(LQFP48)	XASIG.EXE	M1-UN-LQ48	
MYSON	CS8967G(LQFP48)	XASIG.EXE	M1-UN-LQ48	
MYSON	CS8968G(LQFP48)	XASIG.EXE	M1-UN-LQ48	
MYSON	MTV212MN32	XASIG.EXE	M1-UN-DP48	
MYSON	MTV212MN64	XASIG.EXE	M1-UN-DP48	
MYSON	MTV212MN64I	XASIG.EXE	M1-UN-DP48	
MYSON	MTV212MS32	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV212MS64I	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV212MS64U	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV212MV32	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV212MV64I	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV212MV64U	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV230GMV	XASIG.EXE	M1-UN-DP48	ADP-MTV230MV-PL
MYSON	MTV230MF	XASIG.EXE	M1-UN-DP48	ADP-MTV230MF-Q
MYSON	MTV230MS	XASIG.EXE	M1-UN-DP48	ADP-MTV230MS-SD
MYSON	MTV230MV	XASIG.EXE	M1-UN-DP48	ADP-MTV230MV-PL
MYSON	MTV312GMV64 AJ	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV312MS64	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV312MS64 AJ	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV312MV64	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV312MV64 AJ	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV412GMV128	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV412MS128	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-SD
MYSON	MTV412MV128	XASIG.EXE	M1-UN-DP48	ADP-MTVX12M-PL
MYSON	MTV412MV128*	XASIG.EXE	M1-UN-PL44	
MYSON	MTV415MV	XPGM51.EXE	M1-UN-DP48/PL44	
MYSON	MTV416MV/GMV	XPGM51.EXE	M1-UN-DP48/PL44	
MYSON	MTV512MV/GMV-A1	XPGM51.EXE	M1-UN-DP48/PL44	
MYSON	MTV512MV/GMV-A3	XPGM51.EXE	M1-UN-DP48	
NANTRONICS	N25S10	XSPROM.EXE	M1-UN-DP48	
NANTRONICS	N25S16	XSPROM.EXE	M1-UN-DP48	
NANTRONICS	N25S40	XSPROM.EXE	M1-UN-DP48	
NANTRONICS	N25S80	XSPROM.EXE	M1-UN-DP48	
NATIONAL	MM2716(25V)	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C010	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C020	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C040	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C128	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C128B	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C240	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C256	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27C512	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27CP128	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27LC256	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27LC512	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27LC64	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27LV512	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM27P512	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C010	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C128	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C128B	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C16B(12.75V)	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C256	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C256B	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C32B	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NATIONAL	NMC27C512	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C512A	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C64(13V)	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27C64B(13V)	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NMC27P040	XMEM1.EXE	M1-UN-DP48	
NATIONAL	NM24C02/NM24C03	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM24C04/NM24C05	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM24C08/NM24C09	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM24C16	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM25C04	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C06	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C06L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C14	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C46	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C46A(128*8)	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C46A(64*16)	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C46L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C56	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C56L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C66	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C66L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C86A(1024*16)	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93C86A(2048*8)	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS06	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS06L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS46	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS46L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS56	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS56L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS66	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NM93CS66L	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC9306	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC9307	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC9313B	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC9314B	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC9346	XSPROM.EXE	M1-UN-DP48	
NATIONAL	NMC93CS26	XSPROM.EXE	M1-UN-DP48	
NATIONAL	COP820CJMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP822CJMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP840C	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP842CMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8640CMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8642CMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8784CF	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8784CL	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8784EG	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8788CF	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8788CL	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8788EG	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L20	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L22	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L40	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L42	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L640	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L642	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L80	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L81	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L82	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L84	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L84-BC	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L88	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP87L88EBV	XCOP.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NATIONAL	COP87L88RBV	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP880CFMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP880CMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP881CMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP884CFMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP884CGMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP884CLMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP888CGMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP888CLMH	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8ACC720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8ACC728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CBE9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CBR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CBR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CBR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CBR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CCR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CCR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CCR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CCR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CDR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CDR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CDR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8CDR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAA716	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAA720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAA728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAB720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAB728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAC720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAC728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAC740	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAC744V(PLCC)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SAC744VEJ(QFP)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SBR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SBR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SBR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SBR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SCR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SCR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SCR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SCR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SDR9(LLP44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SDR9(PLCC44)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SDR9(PLCC68)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SDR9(TSSOP56)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGE720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGE728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGE740	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGE744V(PLCC)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGE744VEJ(QFP)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGR720	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGR728	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGR740	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGR744V(PLCC)	XCOP.EXE	M1-UN-DP48	
NATIONAL	COP8SGR744VEJ(QFP)	XCOP.EXE	M1-UN-DP48	
NATIONAL	GAL16V8	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL16V8-10	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL16V8-7	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL16V8A	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL16V8QS	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL20V8	XPLD4.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NATIONAL	GAL20V8-10	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL20V8-7	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL20V8A	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL20V8QS	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL22V10	XPLD4.EXE	M1-UN-DP48	
NATIONAL	GAL22V10B	XPLD4.EXE	M1-UN-DP48	
NATIONAL	PAL10L8A	XPLD3.EXE	M1-UN-DP48	
NEC	D27C8000D	XAEP42.EXE	M1-UN-DP48	
NEC	UPD27128(21V)	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27256(21V)	XMEM1.EXE	M1-UN-DP48	
NEC	UPD2764(21V)	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C1000A	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C1001	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C1001A	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C1024/A	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C2001	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C210A	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C240	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C256(21V)	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C256A	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C4001	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C4002	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C4040	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C4096	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C512	XMEM1.EXE	M1-UN-DP48	
NEC	UPD27C64(21V)	XMEM1.EXE	M1-UN-DP48	
NEC	uPD28F002LGZ-xB-LJH	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
NEC	uPD28F002LGZ-xT-LJH	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
NEC	uPD28F200GX-T	XA28F2.EXE	M1-UN-PS44	
NEC	uPD28F400GX-T	XA28F2.EXE	M1-UN-PS44	
NEC	uPD29F032203ALGZ-BxT-MJH	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
NEC	uPD29F032204ALGZ-BxT-MJH	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
NEC	uPD29F800LGZ-BxB-MJH	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
NEC	8755A	XPGM51.EXE	M1-UN-DP48	
NEC	D8749H	XAMPU3.EXE	M1-D8749-DP40	
NEC	UPD17P133ES	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P133-SD
NEC	UPD17P149CT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P149-SD
NEC	UPD17P149GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P149-S
NEC	UPD17P202AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P202
NEC	UPD6P8	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD6P8-SS20
NEC	UPD70F3116GJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3116-Q144
NEC	UPD70F3210YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3210-Q80
NEC	UPD70F3214YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3214-TQ100
NEC	UPD70F3231M1	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3231M-TQ64
NEC	UPD70F3311GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F331X-TQ100
NEC	UPD70F3313YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F331X-TQ100
NEC	UPD70F3329GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F332X-QF64
NEC	UPD70F3329K8	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F332X-QN64
NEC	UPD70F3358GJ(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
NEC	UPD70F3714GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3714-Q64
NEC	UPD70F3717GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3717-Q100
NEC	UPD70F3742GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3717-Q100
NEC	UPD70F3746GJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
NEC	UPD70F3933BGJ(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
NEC	UPD70F3939BGJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
NEC	UPD75P0016CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
NEC	UPD75P0016GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
NEC	UPD75P0076CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
NEC	UPD75P0076GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P0076-S
NEC	UPD75P008CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
NEC	UPD75P008GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
NEC	UPD75P036CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P036

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NEC	UPD75P036GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P036-Q
NEC	UPD75P068CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
NEC	UPD75P068GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
NEC	UPD75P108BCW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
NEC	UPD75P108BGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
NEC	UPD75P108CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
NEC	UPD75P108DW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
NEC	UPD75P108GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
NEC	UPD75P116CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
NEC	UPD75P116GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
NEC	UPD75P216ACW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216
NEC	UPD75P218CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216
NEC	UPD75P218GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216-Q
NEC	UPD75P3018AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
NEC	UPD75P3018AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
NEC	UPD75P3018GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
NEC	UPD75P3018GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
NEC	UPD75P308GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P308
NEC	UPD75P3116GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3116-Q
NEC	UPD75P3116GK	XAUPD78X.EXE	M1-UN-DP48	ADP-75P3116-TQ
NEC	UPD75P316AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P308
NEC	UPD75P316BGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
NEC	UPD75P316BGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
NEC	UPD75P3216GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3216-S
NEC	UPD75P328GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
NEC	UPD75P518GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P516
NEC	UPD77P20D	XAUPD78X.EXE	M1-UN-DP48	
NEC	UPD77P25C	XAUPD78X.EXE	M1-UN-DP48	
NEC	UPD77P25GW	XAUPD78X.EXE	M1-UN-DP48	
NEC	UPD77P25L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD77P25L-PL44
NEC	UPD77P56G	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD77P56-S
NEC	UPD78CP14GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-Q
NEC	UPD78CP14L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-PL
NEC	UPD78CP18CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-SD
NEC	UPD78F0034ACW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-SD
NEC	UPD78F0034AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
NEC	UPD78F0034AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-TQ64
NEC	UPD78F0034BGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
NEC	UPD78F0034BYGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
NEC	UPD78F0034BYGK(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-TQ64
NEC	UPD78F0058GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0058GC-Q
NEC	UPD78F0058GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0058-TQ80
NEC	UPD78F0078GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0078-TQ64
NEC	UPD78F0078GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0078-Q64V2
NEC	UPD78F0103HMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F01XXH-SS30
NEC	UPD78F0103M5MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0103-SS
NEC	UPD78F0103M5MC*	XAUPD78X.EXE	M1-UPD78F0103-SS30	
NEC	UPD78F0124HGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124XH-Q52
NEC	UPD78F0124HGB*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124H-Q52
NEC	UPD78F0124M5GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124-Q52
NEC	UPD78F0124M6GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124-Q52
NEC	UPD78F0134HGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0134H-Q64
NEC	UPD78F0134M5GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0138-TQ64
NEC	UPD78F0138HGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0134H-Q64
NEC	UPD78F0138M5GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0138-TQ64
NEC	UPD78F0233GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0233-Q
NEC	UPD78F0338GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0338-TQ
NEC	UPD78F0354GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0354-TQ100
NEC	UPD78F0372GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F03XX-Q80
NEC	UPD78F0395GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0395-Q100
NEC	UPD78F0413GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F04XX-Q48
NEC	UPD78F0421GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0421-Q52

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NEC	UPD78F0441GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
NEC	UPD78F0442GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
NEC	UPD78F0451GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
NEC	UPD78F0453GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
NEC	UPD78F0454GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
NEC	UPD78F0500AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0500AMC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
NEC	UPD78F0500MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0500MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
NEC	UPD78F0501MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0501MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
NEC	UPD78F0502AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0502MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0502MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
NEC	UPD78F0503AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
NEC	UPD78F0511AGA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F0511AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
NEC	UPD78F0511GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
NEC	UPD78F0511GB*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0511-Q44
NEC	UPD78F0512GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F0513GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
NEC	UPD78F0515GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F0523GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
NEC	UPD78F0524GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
NEC	UPD78F0526AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
NEC	UPD78F0535AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
NEC	UPD78F0535GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q64
NEC	UPD78F0535GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-LQ64
NEC	UPD78F0536GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
NEC	UPD78F0537GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
NEC	UPD78F0537GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q64
NEC	UPD78F0550MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0550-SS16
NEC	UPD78F0703AYGC(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0703-Q
NEC	UPD78F0703YGC(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0703-Q
NEC	UPD78F0730MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0730-SS30
NEC	UPD78F0743MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
NEC	UPD78F0744MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
NEC	UPD78F0754MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
NEC	UPD78F0842GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F08XX-Q80
NEC	UPD78F0849GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F08XX-Q80
NEC	UPD78F0856MAA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0550-SS16
NEC	UPD78F0988AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0988-Q64
NEC	UPD78F1018F1	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F10XX-BG64
NEC	UPD78F1145GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F11XX-Q64
NEC	UPD78F1152GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F115X-Q80
NEC	UPD78F1153GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F11XX-Q80
NEC	UPD78F1154AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F115X-Q80
NEC	UPD78F1201MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30V2
NEC	UPD78F1503AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F150X-Q100
NEC	UPD78F1508AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F150X-Q128
NEC	UPD78F4218AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4218-TQ
NEC	UPD78F4218AYGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4218-TQ
NEC	UPD78F4225GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4225-Q
NEC	UPD78F8014AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F801XA-Q52
NEC	UPD78F8016AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F801XA-Q52
NEC	UPD78F8027GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F8028GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F8029GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
NEC	UPD78F9026AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9026-TQ44
NEC	UPD78F9076MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9076-SS
NEC	UPD78F9116AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SS/V2
NEC	UPD78F9116BMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SS/V2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NEC	UPD78F9136AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SSV2
NEC	UPD78F9177AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
NEC	UPD78F9177AGB*	XAUPD78X.EXE	M1-UPD78F9177-QF44	
NEC	UPD78F9177AYGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
NEC	UPD78F9177GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
NEC	UPD78F9177GB*	XAUPD78X.EXE	M1-UPD78F9177-QF44	
NEC	UPD78F9177YGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
NEC	UPD78F9202MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
NEC	UPD78F9211GR	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
NEC	UPD78F9212GR	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9212-SS16
NEC	UPD78F9222MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9222-SS20
NEC	UPD78F9224MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9222-SS20
NEC	UPD78F9234BMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9234-SS30
NEC	UPD78F9328GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9328-Q
NEC	UPD78F9418AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9418-Q80
NEC	UPD78F9418AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9418AGK-TQ80
NEC	UPD78F9456GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9456-Q
NEC	UPD78F9502MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
NEC	UPD78P014CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P014-SD
NEC	UPD78P014GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P014-Q
NEC	UPD78P018FCW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P018-SD
NEC	UPD78P018FGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P018-Q
NEC	UPD78P018FGK	XAUPD78X.EXE	M1-UN-DP48	ADP-78P018GK-TQ
NEC	UPD78P0208GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P0208-Q
NEC	UPD78P0308GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT
NEC	UPD78P0308GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P0308-Q
NEC	UPD78P0308YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT
NEC	UPD78P054GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-Q
NEC	UPD78P054Gk	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-TQ
NEC	UPD78P054KK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-L
NEC	UPD78P058GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-Q
NEC	UPD78P064GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT
NEC	UPD78P064GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-Q
NEC	UPD78P064KL	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-L
NEC	UPD78P083CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-SD
NEC	UPD78P083DU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-SD
NEC	UPD78P083GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-Q
NEC	UPD78P214CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P214
NEC	UPD78P214GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P218A-Q
NEC	UPD78P214L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P214-PL
NEC	UPD78P218AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P218A-Q
NEC	UPD78P328CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P328-SD
NEC	UPD78P328GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P328GF-Q64
NEC	UPD78P368AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P368-Q80
NEC	UPD78P4038GC	XAUPD78X.EXE	M1-UN-DP48	ADP-78P4038-TQ
NEC	UPD78P9014CT	XAUPD78X.EXE	M1-UN-DP48	ADP-78P9014-SD
NEC	UPD79F7026GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD79F7026-Q32
NEXFLASH	NX29F010	XMEM2.EXE	M1-UN-DP48	
NEXFLASH	NX25B40(Bottom)	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25F011B-3S	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25F011B-3V	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25F011B-5S	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25F011B-5V	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25P10	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25P16	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25P20	XSPROM.EXE	M1-UN-DP48	
NEXFLASH	NX25P40	XSPROM.EXE	M1-UN-DP48	
NORDIC	nRF24LE1-F16(QFN24)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN24
NORDIC	nRF24LE1-F16(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN32/A
NORDIC	nRF24LE1-F16(QFN48)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN48
NORDIC	nRF24LE1-O17(QFN24)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN24
NORDIC	nRF24LE1-O17(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN32/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NORDIC	nRF24LE1-O17(QFN48)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LE1-QN48
NORDIC	nRF24LU1-F16(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LU1-QN32
NORDIC	nRF24LU1P-F16(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LU1-QN32
NORDIC	nRF24LU1P-F32(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LU1-QN32
NORDIC	nRF24LU1P-O17(QFN32)	XAMPU6.EXE	M1-UN-DP48	ADP-NRF24LU1-QN32
NORDIC	nRF51422-QFAAC(QFN48)	XALUM.EXE	M1-UN-DP48	ADP-NRF51822-MLF48
NORDIC	nRF51422-QFAAE(QFN48)	XALUM.EXE	M1-UN-DP48	ADP-NRF51822-MLF48
NORDIC	nRF51822-QFAA(QFN48)	XALUM.EXE	M1-UN-DP48	ADP-NRF51822-MLF48
NORDIC	nRF51822-QFAB(QFN48)	XALUM.EXE	M1-UN-DP48	ADP-NRF51822-MLF48
NOVATEK	NT25F271	XAMPU2.EXE	M1-UN-DP48	ADP-NT25F271-TQ48
NOVATEK	NT25F273	XAMPU2.EXE	M1-UN-DP48	ADP-NT25F273-TQ48
NOVATEK	NT68664MFG	XAMPU2.EXE	M1-UN-DP48	ADP-NT68664MFG-Q
NOVATEK	NT68665	XAMPU2.EXE	M1-UN-DP48	ADP-NT68665-Q
NOVATEK	NT68665MFG	XAMPU2.EXE	M1-UN-DP48	ADP-NT68665MFG-Q
NOVATEK	NT68F631ALG	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F632L-PL
NOVATEK	NT68F632AL	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F632L-PL
NOVATEK	NT68F632ALG	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F632L-PL
NOVATEK	NT68F632L	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F632L-PL
NOVATEK	NT68F633L	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F633L-PL
NOVATEK	NT68F633LG	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F633L-PL
NOVATEK	NT68F636L	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F633L-PL
NOVATEK	NT68F63L-G	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F63L-PL
NOVATEK	NT68F63U	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F63U-SDIP42
NOVATEK	NT68F65U	XAMPU2.EXE	M1-UN-DP48	ADP-NT68F63U-SDIP42
NOVATEK	NT68P61A	XAMPU2.EXE	M1-UN-DP48	ADP-NT68P61
NOVATEK	NT68P62	XAMPU2.EXE	M1-UN-DP48	ADP-NT68P61
NOVATEK	NT68P688	XAMPU2.EXE	M1-UN-DP48	
NOVATEK	NT68P688G	XAMPU2.EXE	M1-UN-DP48	
NOVATEK	NT68P81	XAMPU2.EXE	M1-UN-DP48	ADP-NT68P81
NUMONYX	GE28F256L18T	XA28F2.EXE	M1-UN-BG68	TOP-28F256L18-BG79
NUMONYX	JR28F032M29EWB	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F032M29EWH	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F032M29EWL	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F032M29EWT	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F064M29EWB	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F064M29EWH	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F064M29EWL	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JR28F064M29EWT	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	JS28F00AM29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP30BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP30EF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP30TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP33BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP33EF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00AP33TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F00BM29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F064M29EWB	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F064M29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F064M29EWL	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F064M29EWT	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128J3F	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128M29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128M29EWL	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128P30BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128P30TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F128P33TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256J3F	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256M29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256M29EWL	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256P30BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256P30T2	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256P30TF	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUMONYX	JS28F256P33BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256P33T2	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F256P33TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F320J3F	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512M29EWH	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512M29EWL	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P30BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P30EF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P30TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P33BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P33EF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F512P33TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F640J3F	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F640P30BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F640P30TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F640P33BF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JS28F640P33TF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	JZ48F4000L0YBQ0	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	M28W160FST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M28W320FCB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M28W320FCB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
NUMONYX	M28W320FCT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M28W640HCB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M28W640HCT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29DW128G-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29DW256G-NF	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29DW256G-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29F160FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F160FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F200FB-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F200FB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
NUMONYX	M29F200FT-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F200FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F400FB-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F400FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F400FT-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F400FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F800FB-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F800FB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29F800FT-M	XA28F2.EXE	M1-UN-PS44	
NUMONYX	M29F800FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29W064FT-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29W128GH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W128GL-N	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W128GL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W128GL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W128GSH-N	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W128GSH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W128GSH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W128GSL-N	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W128GSL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W128GSL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W160EB-N	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29W256GH-N	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W256GH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W256GH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W256GL-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W320ET-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W400DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640FB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640FT-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640GB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUMONYX	M29W640GB-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W640GB-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W640GH-NA	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29W640GH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640GH-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W640GL-NA	XA28F2.EXE	M1-UN-TS48A/TS56	
NUMONYX	M29W640GL-NB	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W640GL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640GL-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W640GT-NB	XA28F2.EXE	M1-UN-TS56	
NUMONYX	M29W640GT-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M29W640GT-ZF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M29W640GT-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	M29W800DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	M36C0W6040T0-ZSP	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
NUMONYX	M36C0W6050T0-ZSP	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
NUMONYX	M36L0R7050T4-ZAQ	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
NUMONYX	M36L0R8060T9-ZAQ	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
NUMONYX	M36L0T7050T3-ZAQ	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
NUMONYX	M36W0R6050T-ZAQE	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
NUMONYX	M58BW016DB-T	XA28F2.EXE	M1-FLASH-PQ80	
NUMONYX	M58LR256KB-ZC	XA28F2.EXE	M1-UN-BG68	TOP-28F256L18-BG79
NUMONYX	M58LT128KSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M58LT128KST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M58LT256KSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M58LT256KST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M58WR032KB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-PH28F128-BG56/A
NUMONYX	PC28F00AG18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AM29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F00AM29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F00AM29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F00AM29EWLE	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F00AP30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AP30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AP30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AP33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AP33EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00AP33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F00BP30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F064M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWBX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWHX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F064M29EWTX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F128G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F128J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F128M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F128M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F128P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F128P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F128P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F128P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F256G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F256J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F256M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F256P30B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256P30T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUMONYX	PC28F256P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256P33B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F256P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F320J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F512G18FE	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F512M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F512M29EWHA	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F512M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F512M29EWLE	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	PC28F512P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F512P30EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F512P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F512P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F512P33EF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F640J3F	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F640P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F640P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC28F640P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC28F640P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128P3-BG64/A
NUMONYX	PC48F4400P0TB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC48F4400P0VB02	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PC48F4400P0VB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	PF48F3000P0ZBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PF48F3000P0ZTQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PF48F4000P0ZBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PF48F4000P0ZTQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PF48F4400P0VBQ2	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PF48F4400P0VBQE	XA28F2.EXE	M1-UN-BG68	TOP-JZ48FXXX-BG88
NUMONYX	PZ28F032M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F032M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F032M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F032M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWB	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWBX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWHX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWLX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWT	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	PZ28F064M29EWTX	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
NUMONYX	RC28F256M29EWH	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	RC28F256M29EWL	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
NUMONYX	RC28F256P30B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P30BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P30T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P30TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P33B2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P33BF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P33T2	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC28F256P33TF	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC48F4400P0VB02	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	RC48F4400P0VB0E	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
NUMONYX	M25P05-A	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P10-A	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P128(MLP8)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P128(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P16(MLP8)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P16(SOP8)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P20	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P32	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUMONYX	M25P32(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P40	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P64(MLP8)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P64(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25P80	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PE10	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PE16	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PE20	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PE40	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PE80	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX16	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX32	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX32(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX64	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX64(SOP16)	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M25PX80	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M45PE10	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M45PE16	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M45PE20	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M45PE40	XSPROM.EXE	M1-UN-DP48	
NUMONYX	M45PE80	XSPROM.EXE	M1-UN-DP48	
NUMONYX	MT25QL512ABA1E12	XSPROM.EXE	M1-UN-DP48	
NUMONYX	MT25QL512ABA8ESF	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q00AAx3GSFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax1EF6xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax3EF6xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax3ESCxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q032Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax1EF6xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax3EF6xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax3ESECxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q064Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1BF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1BSFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1EF7xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1TF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax1TSFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3BF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3BSExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3BSFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3EF7xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3ESExxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q128Ax3TF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q256Ax1EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q256Ax1ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q256Ax3EF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q256Ax3ESFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q512Ax1GSFxxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q512Ax3G12xxx	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUMONYX	N25Q512Ax3GF8xxx	XSPROM.EXE	M1-UN-DP48	
NUMONYX	N25Q512Ax3GSFxxx	XSPROM.EXE	M1-UN-DP48	
NUVOTON	ISD15102	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
NUVOTON	ISD15104	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
NUVOTON	ISD15108	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
NUVOTON	ISD15116	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
NUVOTON	ISD2110(SOP14)	XASIG.EXE	M1-ISD2130-SO14	
NUVOTON	ISD2115A(QFN20)	XASIG.EXE	M1-UN-DP48	ADP-ISD2000-ML20
NUVOTON	ISD2115A(SOP14)	XASIG.EXE	M1-ISD2130-SO14	
NUVOTON	ISD2130	XASIG.EXE	M1-UN-DP48	ADP-ISD2000-ML20
NUVOTON	ISD2130(SOP14)	XASIG.EXE	M1-ISD2130-SO14	
NUVOTON	ISD2360(QFN32)	XASIG.EXE	M1-ISD2360-QN32	
NUVOTON	ISD2360(SOP16)	XASIG.EXE	M1-ISD2360-SO16	
NUVOTON	M0516LAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M0516LBN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M0516LDE	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M0516ZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M0516ZBN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M052LAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M052LBN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M052ZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M052ZBN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M054LAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M054LBN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M054ZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M054ZBN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M058LAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M058LBN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M058SLAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	M058SSAN	XPGM52.EXE	M1-UN-LQ64	
NUVOTON	M058SZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M058ZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	M058ZDN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	MINI51ZAN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	MINI52LAN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	MINI54ZDE	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	N78E055A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	N78E059A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	N78E366A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	N78E517A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	N79A901	XPGM52.EXE	M1-UN-DP48	
NUVOTON	N79E352A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	N79E8132AS16(SOP16)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16F/-NDIP16G
NUVOTON	N79E814AT20(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NUVOTON	N79E814AT28(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NUVOTON	N79E824A	XASIG.EXE	M1-UN-SS34	
NUVOTON	N79E825A	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
NUVOTON	N79E8432A	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16F/-NDIP16G
NUVOTON	N79E844AWG(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NUVOTON	N79E845AWG(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NUVOTON	N79E855AWG(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NUVOTON	NUC100LC1AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LC1BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LD1AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LD1BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LD2AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LD2BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LD3AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100LE3AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC100RC1AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100RC1BN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100RD1BN	XPGM52.EXE	M1-UN-TQ64	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUVOTON	NUC100RD2BN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100RD3AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100RD3DN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100RE3AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC100VD2AN	XPGM52.EXE	M1-UN-DP48	ADP-NUC1X0-TQ100
NUVOTON	NUC100VE3AN	XPGM52.EXE	M1-UN-DP48	ADP-NUC1X0-TQ100
NUVOTON	NUC101LD2BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC101LE3AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC101YC1BN	XPGM52.EXE	M1-UN-ML36	
NUVOTON	NUC101YD2BN	XPGM52.EXE	M1-UN-ML36	
NUVOTON	NUC102LD2AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC102YD2AN	XPGM52.EXE	M1-UN-ML36	
NUVOTON	NUC103LD4AN0	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC105LD4AN0-DFVSEN:0	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC105LD4AN0-DFVSEN:1	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120LC1BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120LD1BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120LD2BN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120LD3AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120LE3AN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC120RC1BN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120RD1BN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120RD2AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120RD2BN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120RD3AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120RE3AN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC120VE3AN	XPGM52.EXE	M1-UN-DP48	ADP-NUC1X0-TQ100
NUVOTON	NUC122SD2AN	XPGM52.EXE	M1-UN-LQ64	
NUVOTON	NUC122ZC1AN	XPGM52.EXE	M1-UN-BG68A	TOP-NUC-ML32
NUVOTON	NUC130LD2CN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC130LE3CN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC130RC1CN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC130RD2CN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC130RE3CN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC140LC1CN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC140LD2CN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC140LE3CN	XPGM52.EXE	M1-UN-LQ48	
NUVOTON	NUC140RC1CN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC140RE3CN	XPGM52.EXE	M1-UN-TQ64	
NUVOTON	NUC140VE3AN	XPGM52.EXE	M1-UN-DP48	ADP-NUC1X0-TQ100
NUVOTON	W681308	XASIG.EXE	M1-UN-DP48	ADP-W681308-Q48
NUVOTON	W77E058A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77E468	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W77E516	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77E516A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77E532	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77E532A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77E58	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77I058A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77IE58	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W77L058A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77L516A	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W77L532A	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W77LE516	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77LE532	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W77LE58	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E051B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E051C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E051D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E052B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E052C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E052D	XPGM52.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUVOTON	W78E054C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E054D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E058B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E058D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E065A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E354	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E365	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E365A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E374E	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E378	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E378E	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E51	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E512	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E516	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E516B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E516D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E51B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E51C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E52	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E52B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E52C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E54	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E54B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E54C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E58	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E58B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E61	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E62	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78E62B	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E65	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78E858	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78ERD2	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78ERD2A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78I052D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78I058D	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78IE52	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78IE54	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78IRD2A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L051A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L051C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L052A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L052C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L054C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L058A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L365A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L516A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78L812A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE365	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78LE51	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE516	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE51C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE52	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE52C	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE54	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE54C	XPGM52.EXE	M1-UN-DP48	
NUVOTON	W78LE58	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W78LE812	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79A9311	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
NUVOTON	W79E201	XASIG.EXE	M1-UN-DP48	ADP-W79E201-PL44
NUVOTON	W79E201A	XASIG.EXE	M1-UN-DP48	ADP-W79E201-PL44
NUVOTON	W79E2051	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E217A	XASIG.EXE	M1-UN-DP48	ADP-W79E217-Q100

Device-Liste für ALL-100A und ALL-100AP

Hersteller	BausteinTyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NUVOTON	W79E218	XASIG.EXE	M1-UN-DP48	ADP-W79E218-Q100
NUVOTON	W79E21J	XASIG.EXE	M1-UN-DP48	ADP-W79E218-Q100
NUVOTON	W79E225(PLCC44)	XASIG.EXE	M1-UN-PL44	
NUVOTON	W79E225(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-W79E22X-QF48
NUVOTON	W79E227(PLCC44)	XASIG.EXE	M1-UN-PL44	
NUVOTON	W79E227(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-W79E22X-QF48
NUVOTON	W79E4051	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
NUVOTON	W79E4051(SSOP20)	XASIG.EXE	M1-UN-SS34	
NUVOTON	W79E532	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79E532A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79E549A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79E632A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79E633A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79E648	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79E649	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79E658A	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
NUVOTON	W79E659A(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79E659A(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
NUVOTON	W79E801A	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E802A	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E803A	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E804A	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E822	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E823	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E824	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E82J	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E832A	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
NUVOTON	W79E833A	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
NUVOTON	W79E834A	XASIG.EXE	M1-UN-DP48	
NUVOTON	W79E83JA	XASIG.EXE	M1-UN-LQ48	
NUVOTON	W79L532A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79L548A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79L549A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79L632A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79L633A	XPGM52.EXE	M1-UN-DP48/PL44	
NUVOTON	W79L649A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
NUVOTON	W79L658A	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
NUVOTON	W925EP01	XASIG.EXE	M1-UN-DP48	ADP-W925EP01-Q100
NXP	PCA24S08	XSPROM.EXE	M1-UN-DP48	
NXP	51XAG37	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	51XAS37(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-PL
NXP	87C234	XASIG.EXE	M1-UN-DP48	ADP-P87C234-Q
NXP	87C390(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-87C695-Q
NXP	87C390(SDIP56)	XASIG.EXE	M1-UN-DP48	ADP-87C390-SD
NXP	87C391	XASIG.EXE	M1-UN-DP48	ADP-87C390-SD
NXP	87C451	XASIG.EXE	M1-UN-DP48	ADP-451
NXP	87C453	XASIG.EXE	M1-UN-DP48	ADP-451
NXP	87C504	XPGM51.EXE	M1-UN-DP48	
NXP	87C508	XPGM51.EXE	M1-UN-DP48	
NXP	87C51	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51FA	XPGM51.EXE	M1-UN-DP48	
NXP	87C51FB	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51FC	XPGM51.EXE	M1-UN-DP48	
NXP	87C51MB2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51MC2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51RA+	XPGM51.EXE	M1-UN-DP48	
NXP	87C51RA2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51RB+	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51RB2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51RC+	XPGM51.EXE	M1-UN-DP48	
NXP	87C51RC2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51RD+	XPGM51.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NXP	87C51RD2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C51X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C52	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C528	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C52X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C54	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C54X2	XPGM51.EXE	M1-UN-DP48	
NXP	87C552(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-552
NXP	87C552(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-552-QFP
NXP	87C554(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-552
NXP	87C554(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-554-LQ64
NXP	87C554(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-552-QFP
NXP	87C557E8	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
NXP	87C58	XPGM51.EXE	M1-UN-DP48	
NXP	87C58X2	XPGM51.EXE	M1-UN-DP48	
NXP	87C591	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C592	XASIG.EXE	M1-UN-DP48	ADP-87C592
NXP	87C652	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C654	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C654X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C660X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C661X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87C695(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-87C695-Q
NXP	87C695(SDIP64)	XASIG.EXE	M1-UN-DP48	ADP-87C695-SD
NXP	87CE560	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
NXP	87CE598	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
NXP	87CL52X2	XPGM51.EXE	M1-UN-DP48	
NXP	87CL54X2	XPGM51.EXE	M1-UN-DP48	
NXP	87L51FA	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87L51FB	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	87LPC760	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC761	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC762	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC764	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC767	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC768	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC769	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC778	XPGM51.EXE	M1-UN-DP48	
NXP	87LPC779	XPGM51.EXE	M1-UN-DP48	
NXP	89C132	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C138	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C238	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51Bx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RA2xx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RB2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RB2xx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RC+	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RC2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RC2xx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RD+	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RD2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51RD2xx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C51Ux	XPGM51.EXE	M1-UN-DP48	
NXP	89C51X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C52Bx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C52Ux	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C52X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C535	XPGM51.EXE	M1-UN-DP48	
NXP	89C536	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C538	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C54Bx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C54Ux	XPGM51.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NXP	89C54X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C557E4	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
NXP	89C58Bx	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C58Ux	XPGM51.EXE	M1-UN-DP48	
NXP	89C58X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C60X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C61X2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C638	XPGM51.EXE	M1-UN-DP48	
NXP	89C660	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C662	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C664	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C668	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C669	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C738	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89C838	XPGM51.EXE	M1-UN-DP48	
NXP	89CE558	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
NXP	89CV51RB2	XPGM51.EXE	M1-UN-DP48	
NXP	89CV51RC2	XPGM51.EXE	M1-UN-DP48	
NXP	89CV51RD2	XPGM51.EXE	M1-UN-DP48	
NXP	89LPC901(DIP8)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC901(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC902(DIP8)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC902(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC903(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC904(DIP8)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC904(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC906(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC907(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC908(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
NXP	89LPC9107(DIP14)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC9107(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC912(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC913(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC914(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC915(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC9151(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC916(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC9161(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC917(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC9171(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
NXP	89LPC920(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9201(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC921(DIP20)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC921(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9211(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC922(DIP20)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC922(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9221(DIP20)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC9221(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC922A1(DIP28)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC924(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9241(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC925(DIP20)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC925(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9251(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC930(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9301(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-89LPC
NXP	89LPC931(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9311(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC931A1(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-89LPC
NXP	89LPC932(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC932(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NXP	89LPC932-CP3231(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC932-CP3235(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC932-CP3235(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC932A1(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC932A1(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
NXP	89LPC932A1(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC933(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9331(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-89LPC
NXP	89LPC934(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9341(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-89LPC
NXP	89LPC935(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC935(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
NXP	89LPC935(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC936(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC936(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC938(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
NXP	89LPC938(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
NXP	89LPC938(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC9401(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89LPC9401-Q
NXP	89LPC9402(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89LPC9401-Q
NXP	89LPC9408(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89LPC9401-Q
NXP	89LPC952(PLCC44)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
NXP	89LPC952(QFP44)	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
NXP	89LPC954(PLCC44)	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
NXP	89LPC954(QFP44)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
NXP	89LPC954(QFP48)	XASIG.EXE	M1-UN-TQ48	
NXP	89LPC970(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC971(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC972(DIP20)	XASIG.EXE	M1-UN-DP48	
NXP	89LPC972(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC980(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LPC982(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
NXP	89LV51RB2	XPGM51.EXE	M1-UN-DP48	
NXP	89LV51RC2	XPGM51.EXE	M1-UN-DP48	
NXP	89LV51RD2	XPGM51.EXE	M1-UN-DP48	
NXP	89V51RB2	XPGM51.EXE	M1-UN-DP48	
NXP	89V51RC2	XPGM51.EXE	M1-UN-DP48	
NXP	89V51RD2	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	89V52X2	XPGM51.EXE	M1-UN-DP48	
NXP	89V660	XPGM51.EXE	M1-UN-DP48	
NXP	89V662	XPGM51.EXE	M1-UN-DP48	
NXP	89V664	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	LPC1111FHN33/101	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1111FHN33/201	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1112FHN33/102	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1112FHN33/202	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1113FBD48/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC1113FBD48/302	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC1113FBD48/303	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC1113FBD48/303*	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC1114FBD48/302	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC1114FHN33/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1114FHN33/302	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1114FHN33/333	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QN32
NXP	LPC1115FBD48/303	XALPC2.EXE	M1-UN-DP48	ADP-LPC111X-QF48
NXP	LPC11U12FBD48/201	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U13FBD48/201	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U14FBD48/201	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U22FBD48/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U23FBD48/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U24FBD48/401	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U34FBD48/311	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NXP	LPC11U34FBD48/421	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U35FBD48/401	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC11U37FBD48/401	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC1224FBD64/101	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q64
NXP	LPC1225FBD48/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q48
NXP	LPC1225FBD64/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q64
NXP	LPC1225FBD64/321	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q64
NXP	LPC1227FBD48/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q48
NXP	LPC1227FBD64/301	XALPC2.EXE	M1-UN-DP48	ADP-LPC12XX-Q64
NXP	LPC1343FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC13XX-QF48
NXP	LPC1343FHN33	XALPC2.EXE	M1-UN-DP48	ADP-LPC13XX-QN32
NXP	LPC1346FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC11U1X-QF48
NXP	LPC1754FBD80	XALPC2.EXE	M1-UN-DP48	ADP-LPC175X-QF80
NXP	LPC1756FBD80	XALPC2.EXE	M1-UN-DP48	ADP-LPC175X-QF80
NXP	LPC1758FBD80	XALPC2.EXE	M1-UN-DP48	ADP-LPC175X-QF80
NXP	LPC1759FBD80	XALPC2.EXE	M1-UN-DP48	ADP-LPC175X-QF80
NXP	LPC1764FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC176X-QF100
NXP	LPC1765FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC176X-QF100
NXP	LPC1768FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC176X-QF100
NXP	LPC1768FET100	XALPC2.EXE	M1-UN-DP48	ADP-LPC176X-BG100
NXP	LPC1769FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC176X-QF100
NXP	LPC1788FET208	XALPC2.EXE	M1-UN-DP48	ADP-LPC178X-BG208
NXP	LPC2101FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2102FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2103FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2104BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2105BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2106BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2106FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
NXP	LPC2106FHN48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-MLF48
NXP	LPC2114FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2119FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2124FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2129FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2131FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2132FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2134FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2136FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2138FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2138FHN64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-MLF64
NXP	LPC2141FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2142FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2144FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2146FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2148FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
NXP	LPC2212FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
NXP	LPC2214FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
NXP	LPC2292FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
NXP	LPC2294FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
NXP	LPC2361FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q100
NXP	LPC2364FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q100
NXP	LPC2365FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q100
NXP	LPC2366FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q100
NXP	LPC2368FBD100	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q100
NXP	LPC2377FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q144
NXP	LPC2378FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q144
NXP	LPC2388FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC23XX-Q144
NXP	LPC2468FBD208	XALPC2.EXE	M1-UN-DP48	ADP-LPC24XX-QF208
NXP	LPC4076FET180	XALPC2.EXE	M1-UN-DP48	ADP-LPC407X-BG180
NXP	LPC811M100JDH16	XALPC2.EXE	M1-UN-DP48	
NXP	LPC812M101FDH16	XALPC2.EXE	M1-UN-DP48	
NXP	LPC812M101FDH20	XALPC2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
NXP	PXAC37	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	PXAG37	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	PXAG39	XPGM51.EXE	M1-UN-DP48	
NXP	PXAG49	XPGM51.EXE	M1-UN-DP48/PL44	
NXP	PXAS37(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-PL
NXP	PXAS37(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-Q
NXP	SE97	XPGM51.EXE	M1-UN-DP48	
OKI	271000	XMEM1.EXE	M1-UN-DP48	
OKI	272000	XMEM1.EXE	M1-UN-DP48	
OKI	27C101	XMEM1.EXE	M1-UN-DP48	
OKI	27C101H	XMEM1.EXE	M1-UN-DP48	
OKI	27C401	XMEM1.EXE	M1-UN-DP48	
OKI	MR27V12800J/OTP	XAEP42.EXE	M1-UN-TS48	
OKI	MR27V1602E/OTP	XAEP42.EXE	M1-UN-DP48	ADP-EP42-TS
OKI	MR27V1652E/OTP(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MR27V3202E/OTP(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MR27V3202E/OTP(TSOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-TS
OKI	MR27V3202F/OTP(TS48)	XAEP42.EXE	M1-UN-TS48	
OKI	MR27V401E	XMEM1.EXE	M1-UN-DP48	
OKI	MR27V402E	XMEM1.EXE	M1-UN-DP48	
OKI	MR27V402E/OTP	XAEP42.EXE	M1-UN-DP48	ADP-EP42-SOJ
OKI	MR27V402F(SOJ)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-SOJ
OKI	MR27V6402G/OTP	XAEP42.EXE	M1-UN-TS48	
OKI	MR27V6402G/OTP(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MR27V6402G/OTP(TS44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-TS
OKI	MR27V802D/OTP	XAEP42.EXE	M1-UN-DP48	
OKI	MR27V802D/OTP(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MR27V802F/OTP	XAEP42.EXE	M1-UN-TS48	
OKI	MR27V852D/OTP	XAEP42.EXE	M1-UN-DP48	
OKI	MR27V852E/OTP	XAEP42.EXE	M1-UN-DP48	
OKI	MR27V852E/OTP(SOJ)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-SOJ
OKI	MSM27C1024AS	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27128A	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27128AS(21V)	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27256AS	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27256H	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27256HQB	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27256ZB	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27256ZC	XMEM1.EXE	M1-UN-DP48	
OKI	MSM2764A	XMEM1.EXE	M1-UN-DP48	
OKI	MSM2764AS(21V)	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27C128AS(21V)	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27C1602CZ	XAEP42.EXE	M1-UN-DP48	
OKI	MSM27C1602CZ(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MSM27C1652CZ	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MSM27C3252CZ	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MSM27C512AS	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27C64AS(21V)	XMEM1.EXE	M1-UN-DP48	
OKI	MSM27C802CZ	XAEP42.EXE	M1-UN-DP48	
OKI	MSM27C802CZ(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
OKI	MSM16911(128*8)	XSPROM.EXE	M1-UN-DP48	
OKI	MSM16911(64*16)	XSPROM.EXE	M1-UN-DP48	
OMNI-WAVE	27C101	XMEM1.EXE	M1-UN-DP48	
OMNI-WAVE	27C1024	XMEM1.EXE	M1-UN-DP48	
OMNI-WAVE	27C256	XMEM1.EXE	M1-UN-DP48	
On Semiconductor	CAT24C01	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C02	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C04	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C08	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C128	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C16	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C256	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
On Semiconductor	CAT24C32	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C512	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24C64	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT24M01	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25010	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25080	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25128	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25256	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25320	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25512	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25640	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT25M01	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT34TS02	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
On Semiconductor	CAT93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
On-Bright	OB37R04G1W14	XPGM52.EXE	M1-UN-DP48	CNV-SOP-NDIP16F
On-Bright	OB37R04G1W16	XPGM52.EXE	M1-UN-DP48	CNV-SOP-NDIP16F
PAION	P51VP704F	XASIG.EXE	M1-UN-DP48	ADP-P51VP-QFN52
PANASONIC	MN101CF91D	XMN101.EXE	M1-UN-DP48	ADP-MN101CF91D-Q
PANASONIC	MN101CF95G	XMN101.EXE	M1-UN-DP48	ADP-MN101CF95G-Q
PANASONIC	MN101CP117BF	XMN101.EXE	M1-UN-DP48	ADP-MN101CP17BF-Q
PANASONIC	MN101EF31D	XMN101.EXE	M1-UN-DP48	ADP-MN101EF31D-Q
PANASONIC	MN101EF31G	XMN101.EXE	M1-UN-DP48	ADP-MN101EF31G-Q
PANASONIC	MN101EF32D	XMN101.EXE	M1-UN-DP48	ADP-MN101EF32D-Q
PANASONIC	MN101EF35D	XMN101.EXE	M1-UN-DP48	ADP-MN101EF35D-Q
PANASONIC	MN101EF51A	XMN101.EXE	M1-UN-DP48	ADP-MN101EF51A-Q
PANASONIC	MN101EF52A	XMN101.EXE	M1-UN-DP48	ADP-MN101EF52A-Q
PANASONIC	MN101EF57G	XMN101.EXE	M1-UN-DP48	ADP-MN101EF57G-Q
PANASONIC	MN103SFA5K	XMN101.EXE	M1-UN-DP48	ADP-MN103SFA5K-QF100
PANASONIC	MN103SFA7K	XMN101.EXE	M1-UN-DP48	ADP-MN103SFA7K-Q
PANASONIC	MN103SFC2D	XMN101.EXE	M1-UN-DP48	ADP-MN103SFC2D-Q
PANASONIC	MN103SFE4G	XMN101.EXE	M1-UN-DP48	ADP-MN103SFE4G-Q
PANASONIC	MN103SFE4K	XMN101.EXE	M1-UN-DP48	ADP-MN103SFE4G-Q
PANASONIC	MN103SFJ9D	XMN101.EXE	M1-UN-DP48	ADP-MN103SFJ9D-Q
PARALLAX	SX28AC/DP	XUBICOM.EXE	M1-UN-DP48	
PCT	PCT25VF010A	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF016B	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF020B	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF032B	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF040B	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF064C	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF064C(SOP16)	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF080B	XSPROM.EXE	M1-UN-DP48	
PCT	PCT25VF512A	XSPROM.EXE	M1-UN-DP48	
PERFECT	PDT29F010	XMEM2.EXE	M1-UN-DP48	
PERFECT	PE29F002NT	XMEM2.EXE	M1-UN-DP48	
PERFECT	PE29F040	XMEM2.EXE	M1-UN-DP48	
PERFECT	PF29LV160TC-PFTN	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
PFC	PF29SF002NAB	XMEM2.EXE	M1-UN-DP48	
PHILIPS	27C010	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C128	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C210	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C240	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C256	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C512	XMEM1.EXE	M1-UN-DP48	
PHILIPS	27C64A	XMEM1.EXE	M1-UN-DP48	
PHILIPS	N82S115	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S123	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S126A	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S129	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S129A	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S131	XBPPGM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PHILIPS	N82S147	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S147B	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S185	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S185A	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	N82S23A	XBPPGM.EXE	M1-UN-DP48	
PHILIPS	PCA8550	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCA8581/C	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCA9561	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCB2421	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF85103C-2	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF85116-3	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF8581/C	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF8582C-2	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF8582E	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF8594C-2	XSPROM.EXE	M1-UN-DP48	
PHILIPS	PCF8598C-2	XSPROM.EXE	M1-UN-DP48	
PHILIPS	51XAG37	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	51XAS37(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-PL
PHILIPS	87C054	XAMPU3.EXE	M1-UN-DP48	ADP-054
PHILIPS	87C055	XAMPU3.EXE	M1-UN-DP48	ADP-054
PHILIPS	87C234	XASIG.EXE	M1-UN-DP48	ADP-P87C234-Q
PHILIPS	87C380	XAMPU3.EXE	M1-UN-DP48	ADP-87C180-SD
PHILIPS	87C390(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-87C695-Q
PHILIPS	87C390(SDIP56)	XASIG.EXE	M1-UN-DP48	ADP-87C390-SD
PHILIPS	87C391	XASIG.EXE	M1-UN-DP48	ADP-87C390-SD
PHILIPS	87C451	XASIG.EXE	M1-UN-DP48	ADP-451
PHILIPS	87C453	XASIG.EXE	M1-UN-DP48	ADP-451
PHILIPS	87C504	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C508	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C51	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51FA	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C51FB	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51FC	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C51MB2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51MC2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RA+	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C51RA2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RB+	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RB2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RC+	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C51RC2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RD+	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51RD2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C51X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C52	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C528	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C52X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C54	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C542	XAMPU3.EXE	M1-UN-DP48	ADP-542-PL
PHILIPS	87C54X2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C552(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-552
PHILIPS	87C552(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-552-QFP
PHILIPS	87C554(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-552
PHILIPS	87C554(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-554-LQ64
PHILIPS	87C554(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-552-QFP
PHILIPS	87C557E8	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
PHILIPS	87C58	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C58X2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87C591	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C592	XASIG.EXE	M1-UN-DP48	ADP-87C592
PHILIPS	87C652	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C654	XPGM51.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PHILIPS	87C654X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C660X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C661X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87C695(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-87C695-Q
PHILIPS	87C695(SDIP64)	XASIG.EXE	M1-UN-DP48	ADP-87C695-SD
PHILIPS	87C748	XAMPU3.EXE	M1-UN-DP48	ADP-751V2
PHILIPS	87C748(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-751-PL
PHILIPS	87C749	XAMPU3.EXE	M1-UN-DP48	ADP-751V2
PHILIPS	87C749(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-752-PL
PHILIPS	87C749(SSOP)	XAMPU3.EXE	M1-UN-DP48	ADP-751-SSV2
PHILIPS	87C750	XAMPU3.EXE	M1-UN-DP48	ADP-751V2
PHILIPS	87C750(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-751-PL
PHILIPS	87C750(SSOP)	XAMPU3.EXE	M1-UN-DP48	ADP-751-SSV2
PHILIPS	87C751	XAMPU3.EXE	M1-UN-DP48	ADP-751V2
PHILIPS	87C751(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-751-PL
PHILIPS	87C751(SSOP)	XAMPU3.EXE	M1-UN-DP48	ADP-751-SSV2
PHILIPS	87C752	XAMPU3.EXE	M1-UN-DP48	ADP-751V2
PHILIPS	87C752(PLCC)	XAMPU3.EXE	M1-UN-DP48	ADP-752-PL
PHILIPS	87C752(SSOP)	XAMPU3.EXE	M1-UN-DP48	ADP-751-SSV2
PHILIPS	87CE560	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
PHILIPS	87CE598	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
PHILIPS	87CL52X2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87CL54X2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87L51FA	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87L51FB	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	87LPC760	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC761	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC762	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC764	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC767	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC768	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC769	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC778	XPGM51.EXE	M1-UN-DP48	
PHILIPS	87LPC779	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89C132	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C138	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C238	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C380	XAMPU3.EXE	M1-UN-DP48	ADP-89C380-SD
PHILIPS	89C51Bx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RA2xx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RB2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RB2xx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RC+	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RC2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RC2xx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RD+	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RD2Hxx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51RD2xx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C51Ux	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89C51X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C52Bx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C52Ux	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C52X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C535	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89C536	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C538	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C54Bx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C54Ux	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C54X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C557E4	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
PHILIPS	89C58Bx	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C58Ux	XPGM51.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PHILIPS	89C58X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C60X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C61X2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C638	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89C660	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C662	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C664	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C668	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C669	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C738	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89C838	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89CE558	XASIG.EXE	M1-UN-DP48	ADP-CE598-Q
PHILIPS	89CV51RC2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89CV51RD2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89LPC901(DIP8)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC901(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC902(DIP8)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC902(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC903(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC904(DIP8)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC904(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC906(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC907(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC908(SOP8)	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16/F/G
PHILIPS	89LPC9107(DIP14)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC9107(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC912(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC913(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC914(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC915(TSSOP14)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC916(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC917(TSSOP16)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP16/CNV-TSSOP-DIP28
PHILIPS	89LPC920(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC921(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC922(DIP20)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC922(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC9221(DIP20)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC9221(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC924(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC925(DIP20)	XASIG.EXE	M1-UN-DP48	
PHILIPS	89LPC925(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC930(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC931(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC9311(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC932(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC932(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC932-CP3231(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC932-CP3235(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC932-CP3235(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC932A1(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC932A1(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
PHILIPS	89LPC932A1(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC933(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC934(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC935(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC935(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
PHILIPS	89LPC935(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC936(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC936(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
PHILIPS	89LPC938(PLCC28)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-DIP28
PHILIPS	89LPC938(QFN28)	XASIG.EXE	M1-UN-DP48	ADP-89LPC932-QFN
PHILIPS	89LPC938(TSSOP28)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PHILIPS	89LPC9401(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89LPC9401-Q
PHILIPS	89LPC9408(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-89LPC9401-Q
PHILIPS	89LPC952(PLCC44)	XASIG.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
PHILIPS	89LPC952(QFP44)	XASIG.EXE	M1-UN-DP48	CNV-QFP-MPU51B
PHILIPS	89LV51RB2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89LV51RC2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89LV51RD2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V51RB2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V51RC2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V51RD2	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	89V52X2	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V660	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V662	XPGM51.EXE	M1-UN-DP48	
PHILIPS	89V664	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	LPC2101FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2102FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2103FBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2104BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2105BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2106BBD48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-Q48/V2
PHILIPS	LPC2106FHN48	XALPC2.EXE	M1-UN-DP48	ADP-LPC210X-MLF48
PHILIPS	LPC2114FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2119FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2124FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2129FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2131FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2132FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2134FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2136FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2138FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2138FHN64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-MLF64
PHILIPS	LPC2141FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2142FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2144FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2146FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2148FBD64	XALPC2.EXE	M1-UN-DP48	ADP-LPC21XX-Q64
PHILIPS	LPC2212FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
PHILIPS	LPC2214FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
PHILIPS	LPC2292FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
PHILIPS	LPC2294FBD144	XALPC2.EXE	M1-UN-DP48	ADP-LPC22XX-Q144
PHILIPS	PSD301	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD301L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD302	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD302L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD303	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD303L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD311	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD311L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD312	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD312L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD313	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PSD313L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
PHILIPS	PXAC37	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	PXAG37	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	PXAG39	XPGM51.EXE	M1-UN-DP48	
PHILIPS	PXAG49	XPGM51.EXE	M1-UN-DP48/PL44	
PHILIPS	PXAS37(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-PL
PHILIPS	PXAS37(QFP80)	XASIG.EXE	M1-UN-DP48	ADP-51XAS37-Q
PHILIPS	SAA4849PS	XASAA.EXE	M1-UN-DP48	ADP-SAA4849-SD56
PHILIPS	PZ3032CS(PLCC 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-PL44
PHILIPS	PZ3032CS(TQFP 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-Q44
PHILIPS	PZ3032NS(PLCC 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-PL44

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PHILIPS	PZ3032NS(TQFP 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-Q44
PHILIPS	PZ5032CS(PLCC 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-PL44
PHILIPS	PZ5032CS(TQFP 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-Q44
PHILIPS	PZ5032NS(PLCC 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-PL44
PHILIPS	PZ5032NS(TQFP 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-Q44
PHILIPS	PZ5064(PLCC 44)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5000-PL44
PHILIPS	PZ5064(PLCC 84)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5064-PL84
PHILIPS	PZ5128(TQFP 100)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5128-TQ100
PJ	PJ24C02	XSPROM.EXE	M1-UN-DP48	
PMC	PM28LV64	XMEM2.EXE	M1-UN-DP48	
PMC	PM29F002B	XMEM2.EXE	M1-UN-DP48	
PMC	PM29F002T	XMEM2.EXE	M1-UN-DP48	
PMC	PM29F004B	XMEM2.EXE	M1-UN-DP48	
PMC	PM29F004T	XMEM2.EXE	M1-UN-DP48	
PMC	PM29LV004T	XMEM2.EXE	M1-UN-DP48	
PMC	PM29LV104RB	XMEM2.EXE	M1-UN-DP48	
PMC	PM29LV104RT	XMEM2.EXE	M1-UN-DP48	
PMC	PM37LV512	XMEM2.EXE	M1-UN-DP48	
PMC	PM39F010	XMEM2.EXE	M1-UN-DP48	
PMC	PM39F020	XMEM2.EXE	M1-UN-DP48	
PMC	PM39F040	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV010	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV010R	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV020	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV040	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV512	XMEM2.EXE	M1-UN-DP48	
PMC	PM39LV512R	XMEM2.EXE	M1-UN-DP48	
PMC	PM49FL002T	XMEM2.EXE	M1-UN-DP48	
PMC	PM49FL004T	XMEM2.EXE	M1-UN-DP48	
PMC	PM49LP002T	XMEM2.EXE	M1-UN-DP48	
PMC	PM25LD010C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD020	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD020C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD040	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD040C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD256C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD512C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LD512C2	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LP128	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LP128(SOP16)	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LQ016	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LQ032B	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LQ032C	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LQ040	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LQ080	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV010/A	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV020	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV040	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV080	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV080B	XSPROM.EXE	M1-UN-DP48	
PMC	PM25LV512/A	XSPROM.EXE	M1-UN-DP48	
PMC	PM25W020	XSPROM.EXE	M1-UN-DP48	
PMC	PM25WD020	XSPROM.EXE	M1-UN-DP48	
PMC	PM25WD040	XSPROM.EXE	M1-UN-DP48	
POINTCHIPS	PP2105(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-PP2105-Q48
POINTCHIPS	PP2105(SDIP42)	XASIG.EXE	M1-UN-DP48	ADP-PP2105-SD42
PRIMARION	PX3538	XAPWM.EXE	M1-UN-DP48	ADP-PX3538-QFN48
PSS	PS29FS001	XMEM2.EXE	M1-UN-DP48	
PSS	PS16128	XSPROM.EXE	M1-UN-DP48	
PSS	PS16256	XSPROM.EXE	M1-UN-DP48	
PSS	PS24C256	XSPROM.EXE	M1-UN-DP48	
PTC	PT28C020	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
PTC	PT28C020Y	XMEM2.EXE	M1-UN-DP48	
PTC	PT28C040	XMEM2.EXE	M1-UN-DP48	
PTC	PT29C040	XMEM2.EXE	M1-UN-DP48	
PTC	PT29L800UV	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
PTC	PT8936	XPGM51.EXE	M1-UN-DP48	
RAMTRON	FM1608	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM1608*	XMEM2.EXE	M1-UN-SO28	
RAMTRON	FM1808	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM1808*	XMEM2.EXE	M1-UN-SO28	
RAMTRON	FM18L08	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM18L08*	XMEM2.EXE	M1-UN-SO28	
RAMTRON	FM20L08	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM21L16	XMEM2.EXE	M1-UN-DP48	ADP-FM22L16-TS44
RAMTRON	FM22L16	XMEM2.EXE	M1-UN-DP48	ADP-FM22L16-TS44
RAMTRON	FM28V020(SOP28)	XMEM2.EXE	M1-UN-SO28	
RAMTRON	FM28V020(SOP28)*	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM28V020(TSOP32)	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM28V100	XMEM2.EXE	M1-UN-DP48	
RAMTRON	FM28V402	XMEM2.EXE	M1-UN-DP48	ADP-FM22L16-TS44
RAMTRON	FM24C04A	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24C16A	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24C16B	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24C256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24C512	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24C64	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24CL04	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24CL16	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24CL64	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24L256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24V01	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24V02	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24V05	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24V10	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM24W256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25040	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25160	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25256B	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25256B	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25640	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25C160	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25CL04	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25CL64	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25H20	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25L04	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25L16	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25L256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25L256B	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25L512	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25V01	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25V02	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25V05	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25V10	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25V20	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM25W256	XSPROM.EXE	M1-UN-DP48	
RAMTRON	FM30C256	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3104	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3116	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM31256	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3130	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3135	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3164	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM31L278	XUBICOM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RAMTRON	FM3204	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM3216	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM32256	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	FM33256B	XUBICOM.EXE	M1-UN-DP48	
RAMTRON	VMX51C900	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C1000	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C1100	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C540	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C550	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C560	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51C570	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51L1050	XPGM52.EXE	M1-UN-DP48	
RAMTRON	VRS51L3074	XPGM52.EXE	M1-UN-QF64	
RAYDIUM	RM24C02	XSPROM.EXE	M1-UN-DP48	
RAYDIUM	RM24C08	XSPROM.EXE	M1-UN-DP48	
RAYDIUM	RM24C16	XSPROM.EXE	M1-UN-DP48	
RAYDIUM	RM24C32	XSPROM.EXE	M1-UN-DP48	
RAYDIUM	RM24C64	XSPROM.EXE	M1-UN-DP48	
REALTEK	RTD2120L	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-Q48/-Q48V2
REALTEK	RTD2120S	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-PL44
REALTEK	RTD2122L	XASIG.EXE	M1-UN-DP48	ADP-RTD2120-Q48V2
RENESAS	27128(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	27256G	XMEM1.EXE	M1-UN-DP48	
RENESAS	27512G	XMEM1.EXE	M1-UN-DP48	
RENESAS	27512P	XMEM1.EXE	M1-UN-DP48	
RENESAS	27C128K(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	27C256AG	XMEM1.EXE	M1-UN-DP48	
RENESAS	27C256HG	XMEM1.EXE	M1-UN-DP48	
RENESAS	27C512G	XMEM1.EXE	M1-UN-DP48	
RENESAS	4827128(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	482764(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	4827C64(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN27128AG	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN27C101A	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN27C1024	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN27C4096	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN27C64(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5L2764(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5L27C128	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27401AK	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C102	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C202	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C256AK	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C401	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C401K	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C402	XMEM1.EXE	M1-UN-DP48	
RENESAS	M5M27C512AK	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27128(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27256(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD2764(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C1000A	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C1001	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C1001A	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C1024/A	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C2001	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C210A	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C240	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C256(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C256A	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C4001	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C4002	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C4040	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	UPD27C4096	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C512	XMEM1.EXE	M1-UN-DP48	
RENESAS	UPD27C64(21V)	XMEM1.EXE	M1-UN-DP48	
RENESAS	HN58C1001	XMEM2.EXE	M1-UN-DP48	
RENESAS	HN58C65	XMEM2.EXE	M1-UN-DP48	
RENESAS	M5M29GB320VP	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
RENESAS	M5M29GT320VP	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
RENESAS	M5M29KE131BVP	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
RENESAS	M5M29KT331AVP	XA28F2.EXE	M1-UN-TS48A/TS56	
RENESAS	M5M29KT641AVP	XA28F2.EXE	M1-UN-TS48A/TS56	
RENESAS	HN58X2402I	XSPROM.EXE	M1-UN-DP48	
RENESAS	HN58X2402SI	XSPROM.EXE	M1-UN-DP48	
RENESAS	HN58X2404SI	XSPROM.EXE	M1-UN-DP48	
RENESAS	HN58X2408I	XSPROM.EXE	M1-UN-DP48	
RENESAS	HN58X25128	XSPROM.EXE	M1-UN-DP48	
RENESAS	HN58X25256	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24002A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24004A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24008A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24016A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24032A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24064A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24128A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24256A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX24512A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25002A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25004A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25008A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25016A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25032A	XSPROM.EXE	M1-UN-DP48	
RENESAS	R1EX25064A	XSPROM.EXE	M1-UN-DP48	
RENESAS	HD4074008C	XAHMPU.EXE	M1-UN-DP48	ADP-4019
RENESAS	HD4074008F	XAHMPU.EXE	M1-UN-DP48	ADP-4019-Q
RENESAS	HD4074008S	XAHMPU.EXE	M1-UN-DP48	ADP-4019
RENESAS	HD4074019C	XAHMPU.EXE	M1-UN-DP48	ADP-4019
RENESAS	HD4074019F	XAHMPU.EXE	M1-UN-DP48	ADP-4019-Q
RENESAS	HD4074019H	XAHMPU.EXE	M1-UN-DP48	ADP-4019H-Q
RENESAS	HD4074019S	XAHMPU.EXE	M1-UN-DP48	ADP-4019
RENESAS	HD4074054H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
RENESAS	HD4074054S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
RENESAS	HD4074094H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
RENESAS	HD4074094S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
RENESAS	HD4074224S	XAHMPU.EXE	M1-UN-DP48	ADP-4224-SD
RENESAS	HD4074308C	XAHMPU.EXE	M1-UN-DP48	ADP-4308
RENESAS	HD4074308P	XAHMPU.EXE	M1-UN-DP48	ADP-4308
RENESAS	HD4074308S	XAHMPU.EXE	M1-UN-DP48	ADP-4308-SD
RENESAS	HD4074318H	XAHMPU.EXE	M1-UN-DP48	ADP-4318-Q
RENESAS	HD4074318S	XAHMPU.EXE	M1-UN-DP48	ADP-4318-SD
RENESAS	HD4074329C	XAHMPU.EXE	M1-UN-DP48	ADP-4329
RENESAS	HD4074329FS	XAHMPU.EXE	M1-UN-DP48	ADP-4329-Q
RENESAS	HD4074329S	XAHMPU.EXE	M1-UN-DP48	ADP-4329
RENESAS	HD4074339S	XAHMPU.EXE	M1-UN-DP48	ADP-4339
RENESAS	HD4074344FP	XAHMPU.EXE	M1-UN-DP48	ADP-4344-S28
RENESAS	HD4074344S	XAHMPU.EXE	M1-UN-DP48	ADP-4344-SD
RENESAS	HD4074394FP	XAHMPU.EXE	M1-UN-DP48	ADP-4344-S28
RENESAS	HD4074394S	XAHMPU.EXE	M1-UN-DP48	ADP-4344-SD
RENESAS	HD4074408C	XAHMPU.EXE	M1-UN-DP48	ADP-4418
RENESAS	HD4074408F	XAHMPU.EXE	M1-UN-DP48	ADP-4418-Q
RENESAS	HD4074408S	XAHMPU.EXE	M1-UN-DP48	ADP-4418
RENESAS	HD4074418C	XAHMPU.EXE	M1-UN-DP48	ADP-4418
RENESAS	HD4074418F	XAHMPU.EXE	M1-UN-DP48	ADP-4418-Q
RENESAS	HD4074418S	XAHMPU.EXE	M1-UN-DP48	ADP-4418

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	HD4074459H	XAHMPU.EXE	M1-UN-DP48	ADP-4459-Q
RENESAS	HD4074608FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD4074608H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD4074618FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD4074618H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD4074629FS	XAHMPU.EXE	M1-UN-DP48	ADP-4629-Q
RENESAS	HD4074629H	XAHMPU.EXE	M1-UN-DP48	ADP-4629-TQ
RENESAS	HD4074629TF	XAHMPU.EXE	M1-UN-DP48	ADP-4629-TQ
RENESAS	HD4074654H	XAHMPU.EXE	M1-UN-DP48	ADP-4654-Q
RENESAS	HD4074654S	XAHMPU.EXE	M1-UN-DP48	ADP-4654-SD
RENESAS	HD4074808FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD4074808H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD4074818FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD4074818H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD4074889H	XAHMPU.EXE	M1-UN-DP48	ADP-4889-Q
RENESAS	HD4074889TE	XAHMPU.EXE	M1-UN-DP48	ADP-4889-TQ
RENESAS	HD4074899TE	XAHMPU.EXE	M1-UN-DP48	ADP-4889-TQ
RENESAS	HD407A4096H	XAHMPU.EXE	M1-UN-DP48	ADP-4669-Q
RENESAS	HD407A4374FT	XAHMPU.EXE	M1-UN-DP48	ADP-4384-S
RENESAS	HD407A4389FT	XAHMPU.EXE	M1-UN-DP48	ADP-4389-S
RENESAS	HD407A4639RF	XAHMPU.EXE	M1-UN-DP48	ADP-4639-Q
RENESAS	HD407A4669H	XAHMPU.EXE	M1-UN-DP48	ADP-4669-Q
RENESAS	HD407C4389FT	XAHMPU.EXE	M1-UN-DP48	ADP-4389-S
RENESAS	HD407L4808FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD407L4808H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD407L4818FS	XAHMPU.EXE	M1-UN-DP48	ADP-4618
RENESAS	HD407L4818H	XAHMPU.EXE	M1-UN-DP48	ADP-4618A
RENESAS	HD647180X0CP	XAHMPU.EXE	M1-UN-DP48	ADP-647180-PL
RENESAS	HD647180X0FS	XAHMPU.EXE	M1-UN-DP48	ADP-647180-Q
RENESAS	HD647180X0P	XAHMPU.EXE	M1-UN-DP48	ADP-647180
RENESAS	HD6472237F	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-QA
RENESAS	HD6472237TE	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-QB
RENESAS	HD6472237TF	XAHMPU.EXE	M1-UN-DP48	ADP-6472237-TQ
RENESAS	HD6472246F	XAHMPU.EXE	M1-UN-DP48	ADP-6472246-Q
RENESAS	HD6472246TF	XAHMPU.EXE	M1-UN-DP48	ADP-6472246-Q
RENESAS	HD6473035F	XAHMPU.EXE	M1-UN-DP48	ADP-6473035-Q
RENESAS	HD6473035TE	XAHMPU.EXE	M1-UN-DP48	ADP-6473035-TQ
RENESAS	HD6473042F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
RENESAS	HD6473042FP	XAHMPU.EXE	M1-UN-DP48	ADP-6473042FP-QA
RENESAS	HD6473042TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
RENESAS	HD6473048F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
RENESAS	HD6473048TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048-Q
RENESAS	HD6473214F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
RENESAS	HD6473214P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
RENESAS	HD6473217F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
RENESAS	HD6473217P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
RENESAS	HD6473228CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
RENESAS	HD6473228F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
RENESAS	HD6473228P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325
RENESAS	HD6473238CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
RENESAS	HD6473238F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
RENESAS	HD6473238P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325
RENESAS	HD6473256CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3257-PL
RENESAS	HD6473256F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
RENESAS	HD6473256P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
RENESAS	HD6473257C	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
RENESAS	HD6473257CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3257-PL
RENESAS	HD6473257F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-Q
RENESAS	HD6473257P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3217-SD
RENESAS	HD6473258CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-PL
RENESAS	HD6473258F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325-Q
RENESAS	HD6473258P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/325

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	HD6473278F	XAHMPU.EXE	M1-UN-DP48	ADP-6473278-Q
RENESAS	HD6473294F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3297-Q
RENESAS	HD6473294TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3297-TQ
RENESAS	HD6473297F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3297-Q
RENESAS	HD6473298P	XAHMPU.EXE	M1-UN-DP48	ADP-6473298-SD
RENESAS	HD6473308CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
RENESAS	HD6473308F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
RENESAS	HD6473332CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3332
RENESAS	HD6473332TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3332-Q
RENESAS	HD6473334F	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-Q
RENESAS	HD6473334TF	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-TQ
RENESAS	HD6473337YCP	XAHMPU.EXE	M1-UN-DP48	ADP-6473337-PL
RENESAS	HD6473337YF	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-Q
RENESAS	HD6473337YTF	XAHMPU.EXE	M1-UN-DP48	ADP-6473334-TQ
RENESAS	HD6473378CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
RENESAS	HD6473378F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
RENESAS	HD6473378VCP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
RENESAS	HD6473378VF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
RENESAS	HD6473388CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
RENESAS	HD6473388F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
RENESAS	HD6473388VCP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330
RENESAS	HD6473388VF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/330-Q
RENESAS	HD6473434F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434-Q
RENESAS	HD6473434TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434-Q
RENESAS	HD6473614H	XAHMPU.EXE	M1-UN-DP48	ADP-6473614-Q
RENESAS	HD6473644H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3644-Q
RENESAS	HD6473644P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3644-SD
RENESAS	HD6473657H	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-QA
RENESAS	HD6473657W	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-TQ
RENESAS	HD6473657X	XAHMPU.EXE	M1-UN-DP48	ADP-6473657-TQF
RENESAS	HD6473714H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3714-Q
RENESAS	HD6473714P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3714-SD
RENESAS	HD6473724F	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QB
RENESAS	HD6473724H	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QA
RENESAS	HD6473726H	XAHMPU.EXE	M1-UN-DP48	ADP-6473724-QA
RENESAS	HD64738024FV	XAHMPU.EXE	M1-UN-DP48	ADP-64738024-QB
RENESAS	HD64738024H	XAHMPU.EXE	M1-UN-DP48	ADP-64738024-QA
RENESAS	HD64738024W	XAHMPU.EXE	M1-UN-DP48	ADP-64738024-TQ
RENESAS	HD6473802FP	XAHMPU.EXE	M1-UN-DP48	ADP-6473802-QE
RENESAS	HD6473802H	XAHMPU.EXE	M1-UN-DP48	ADP-6473802-Q
RENESAS	HD6473827H	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-Q
RENESAS	HD6473827RH	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-Q
RENESAS	HD6473827W	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-TQ
RENESAS	HD6473834F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-QA
RENESAS	HD6473834H	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-Q
RENESAS	HD6473834X	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3834-Q
RENESAS	HD6473837F	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-QA
RENESAS	HD6473837H	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-Q
RENESAS	HD6473837X	XAHMPU.EXE	M1-UN-DP48	ADP-6473837-Q
RENESAS	HD6473847H	XAHMPU.EXE	M1-UN-DP48	ADP-6473847-Q
RENESAS	HD6473847RH	XAHMPU.EXE	M1-UN-DP48	ADP-6473847-Q
RENESAS	HD6473867HV	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-Q
RENESAS	HD6473867W	XAHMPU.EXE	M1-UN-DP48	ADP-6473827-TQ
RENESAS	HD6473927X	XAHMPU.EXE	M1-UN-DP48	ADP-6473927-TQ
RENESAS	HD6473937X	XAHMPU.EXE	M1-UN-DP48	ADP-6473937-TQ
RENESAS	HD6475208C	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520
RENESAS	HD6475208CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520-PL
RENESAS	HD6475208F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520-Q
RENESAS	HD6475208P	XAHMPU.EXE	M1-UN-DP48	ADP-H8/520
RENESAS	HD6475328CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
RENESAS	HD6475328F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
RENESAS	HD6475348CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	HD6475348SF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
RENESAS	HD6475368CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
RENESAS	HD6475368F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532-Q
RENESAS	HD6475378CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/532
RENESAS	HD6475388F	XAHMPU.EXE	M1-UN-DP48	ADP-6475388-Q
RENESAS	HD6475398F	XAHMPU.EXE	M1-UN-DP48	ADP-6475388-Q
RENESAS	HD6477034F	XAHMPU.EXE	M1-UN-DP48	ADP-6477034F
RENESAS	HD6477042F	XAHMPU.EXE	M1-UN-DP48	ADP-6477042-Q
RENESAS	HD6477043F	XAHMPU.EXE	M1-UN-DP48	ADP-6477043-Q
RENESAS	HD64F2110BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2111BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2169ATE-TQ
RENESAS	HD64F2116BG	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-BG
RENESAS	HD64F2116VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-TQ
RENESAS	HD64F2116VTE*	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	HD64F2132RFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-Q/V2
RENESAS	HD64F2134AFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-Q/V2
RENESAS	HD64F2134AVFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-Q/V2
RENESAS	HD64F2134BFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-QV2
RENESAS	HD64F2134F	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-Q/V2
RENESAS	HD64F2134TF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-TQ80
RENESAS	HD64F2138AFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2134-Q/V2
RENESAS	HD64F2140BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2142FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2144TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2145BFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2145BTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2148AFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2148BFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2148FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2148VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2149TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2149YTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2148-TQ
RENESAS	HD64F2161BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2169ATE-TQ
RENESAS	HD64F2166VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2166-TQ
RENESAS	HD64F2167VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2166-TQ
RENESAS	HD64F2168VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2166-TQ
RENESAS	HD64F2169YVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2169ATE-TQ
RENESAS	HD64F2177VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2166-TQ
RENESAS	HD64F2210CUFFPV	XAHMPU.EXE	M1-UN-DP48	ADP-64F2212-TQ
RENESAS	HD64F2212FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F2212-TQ
RENESAS	HD64F2212UFP	XAHMPU.EXE	M1-UN-DP48	ADP-64F2212-TQ
RENESAS	HD64F2215RUTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2215-Q/ADP-64F2215-Q128
RENESAS	HD64F2215TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2215-Q
RENESAS	HD64F2215U	XAHMPU.EXE	M1-UN-DP48	ADP-64F2215-Q
RENESAS	HD64F2218TF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2218-TQ
RENESAS	HD64F2218UTF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2218-TQ
RENESAS	HD64F2238BFA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2238-TQ
RENESAS	HD64F2238BTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2238-TQ
RENESAS	HD64F2238BTE*	XAHMPU.EXE	M1-64F2238-QF100	
RENESAS	HD64F2238BTF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2238B-TQ
RENESAS	HD64F2258FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2238-TQ
RENESAS	HD64F2268TF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2268-TQ
RENESAS	HD64F2315VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2315-TQ
RENESAS	HD64F2317VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2315-TQ
RENESAS	HD64F2318TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2315-TQ
RENESAS	HD64F2328BVF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2328-QA128
RENESAS	HD64F2328F	XAHMPU.EXE	M1-UN-DP48	ADP-64F2328-QA128
RENESAS	HD64F2329BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F232X-TQ120
RENESAS	HD64F2345FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2345-TQ
RENESAS	HD64F2345TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2345-TQ
RENESAS	HD64F2357F	XAHMPU.EXE	M1-UN-DP48	ADP-64F2357F-Q
RENESAS	HD64F2357TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2357F-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	HD64F2357VF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2357F-Q
RENESAS	HD64F2357VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2357F-TQ
RENESAS	HD64F2362VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2362-TQ
RENESAS	HD64F2378BVF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2378-TQ
RENESAS	HD64F2378RVF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2378-TQ
RENESAS	HD64F2398F	XAHMPU.EXE	M1-UN-DP48	ADP-64F2328-QA128
RENESAS	HD64F2437F	XAHMPU.EXE	M1-UN-DP48	ADP-6F2437-Q
RENESAS	HD64F2612FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2612-TQ
RENESAS	HD64F2623FA	XAHMPU.EXE	M1-UN-DP48	ADP-64F2623-Q
RENESAS	HD64F2633F	XAHMPU.EXE	M1-UN-DP48	ADP-64F2633-Q
RENESAS	HD64F2633RF	XAHMPU.EXE	M1-UN-DP48	ADP-64F2633-Q
RENESAS	HD64F2638FV	XAHMPU.EXE	M1-UN-DP48	ADP-64F263X-Q
RENESAS	HD64F3024F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3029F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3069-Q
RENESAS	HD64F3039F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3039-Q
RENESAS	HD64F3039TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3039-TQ
RENESAS	HD64F3048BF-ONE[5V]	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3048BVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3048F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048F-Q
RENESAS	HD64F3048TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3048F-Q
RENESAS	HD64F3062ATE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3062BF	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3062F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3062RF	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3062TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3064F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3064TE	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3067F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3062-TQ
RENESAS	HD64F3068F	XAHMPU.EXE	M1-UN-DP48	ADP-64F3064-TQ
RENESAS	HD64F3069RF	XAHMPU.EXE	M1-UN-DP48	ADP-64F3069-Q
RENESAS	HD64F3334CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-PL
RENESAS	HD64F3334F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-Q
RENESAS	HD64F3334TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-TQ
RENESAS	HD64F3337CP	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-PL
RENESAS	HD64F3337F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-Q
RENESAS	HD64F3337TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3334-TQ
RENESAS	HD64F3434F	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434F-Q
RENESAS	HD64F3434TF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434F-Q
RENESAS	HD64F3437STF	XAHMPU.EXE	M1-UN-DP48	ADP-H8/3434F-Q
RENESAS	HD64F36014GFP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3672-Q64V2
RENESAS	HD64F36014GFY	XAHMPU.EXE	M1-UN-DP48	ADP-64F3672-Q48
RENESAS	HD64F36034FZ	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F36049HV	XAHMPU.EXE	M1-UN-DP48	ADP-64F36049-Q
RENESAS	HD64F36057GHJ	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F36057H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F36064GFPV	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F36077GFZ	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F36077GHV	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F36079GFZ	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQV2
RENESAS	HD64F3642AH	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
RENESAS	HD64F3642AP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-SD
RENESAS	HD64F3643H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
RENESAS	HD64F3644H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-Q
RENESAS	HD64F3644P	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-SD
RENESAS	HD64F3644W	XAHMPU.EXE	M1-UN-DP48	ADP-64F3644-TQ
RENESAS	HD64F3664BP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-SD
RENESAS	HD64F3664FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
RENESAS	HD64F3664FY	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q48
RENESAS	HD64F3664H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q
RENESAS	HD64F3672FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3672-Q64
RENESAS	HD64F3672FP*	XAHMPU.EXE	M1-UN-DP48	ADP-64F3672-Q64V2
RENESAS	HD64F3672FY	XAHMPU.EXE	M1-UN-DP48	ADP-64F3672-Q48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	HD64F3684FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F3684GFP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F3684GH	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F3684HV	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F3687FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F3687FP*	XAHMPU.EXE	M1-64F3687-QF64	
RENESAS	HD64F3687GFP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-TQ/V2
RENESAS	HD64F3687H	XAHMPU.EXE	M1-UN-DP48	ADP-64F3687-Q
RENESAS	HD64F3694FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
RENESAS	HD64F3694GFPV	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
RENESAS	HD64F3694GH	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q
RENESAS	HD64F3694HV	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-Q
RENESAS	HD64F38004FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F38004-Q/V2
RENESAS	HD64F38024F	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-QB
RENESAS	HD64F38024H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-Q
RENESAS	HD64F38024RHV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-Q
RENESAS	HD64F38024RWIV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-TQ
RENESAS	HD64F38024W	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-TQ
RENESAS	HD64F38076RH	XAHMPU.EXE	M1-UN-DP48	ADP-64F38076-Q/V2
RENESAS	HD64F38076W	XAHMPU.EXE	M1-UN-DP48	ADP-64F38076-TQ
RENESAS	HD64F38086RH	XAHMPU.EXE	M1-UN-DP48	ADP-64F38076-QV2
RENESAS	HD64F38102FPV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38004-QV2
RENESAS	HD64F38102HV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38104-Q
RENESAS	HD64F38104FPV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38004-QV2
RENESAS	HD64F38104H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38104-Q
RENESAS	HD64F38124H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-Q
RENESAS	HD64F38124W	XAHMPU.EXE	M1-UN-DP48	ADP-64F38024-TQ
RENESAS	HD64F38124W*	XAHMPU.EXE	M1-UN-DP48	ADP-64F38124-Q
RENESAS	HD64F38327H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38327-Q
RENESAS	HD64F38327WV	XAHMPU.EXE	M1-UN-DP48	ADP-64F38327-TQ
RENESAS	HD64F38344H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38347-Q
RENESAS	HD64F38347H	XAHMPU.EXE	M1-UN-DP48	ADP-64F38347-Q
RENESAS	HD64F38602RFH	XAHMPU.EXE	M1-UN-DP48	ADP-64F38602-Q32
RENESAS	HD64F5388F	XAHMPU.EXE	M1-UN-DP48	ADP-64F5388-Q/V2
RENESAS	HD64F5398AF	XAHMPU.EXE	M1-UN-DP48	ADP-64F5388-QV2
RENESAS	HD64F7017F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7044-Q
RENESAS	HD64F7044F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7044-Q
RENESAS	HD64F7045F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7045-Q
RENESAS	HD64F7046F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7046-Q80
RENESAS	HD64F7047F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7047-TQ
RENESAS	HD64F7051	XAHMPU.EXE	M1-UN-DP48	ADP-64F7051-Q168
RENESAS	HD64F7055RF	XAHMPU.EXE	M1-UN-DP48	ADP-64F7055-Q
RENESAS	HD64F7055SF	XAHMPU.EXE	M1-UN-DP48	ADP-64F7055-Q
RENESAS	HD64F7058BF	XAHMPU.EXE	M1-UN-DP48	ADP-64F7055-Q
RENESAS	HD64F7065AF	XAHMPU.EXE	M1-UN-DP48	ADP-64F7065-TQ
RENESAS	HD64F7145F	XAHMPU.EXE	M1-UN-DP48	ADP-64F7145-TQ
RENESAS	HD64N3664FP	XAHMPU.EXE	M1-UN-DP48	ADP-64F3664-QE
RENESAS	M30260F6AGP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30260F8AGP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30260F8TGP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30262F4GP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30262F6GP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30262F8GP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30280FAHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30280-TQ
RENESAS	M30280FCBHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30280-TQ
RENESAS	M30280FCHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30280-TQ
RENESAS	M30281F8HP	XAMPU2.EXE	M1-UN-DP48	ADP-M30281-TQ
RENESAS	M30281FAHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30281-TQ
RENESAS	M30281FATHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30281-TQ
RENESAS	M30281FCHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30281-TQ
RENESAS	M30290FATHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30280-TQ
RENESAS	M30291FCHP	XAMPU2.EXE	M1-UN-DP48	ADP-M30281-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	M302A0F2HP	XAMPU2.EXE	M1-UN-DP48	ADP-M302A0-TQ
RENESAS	M30302FAPFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30302FAPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30302FAPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30302FCPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30302FCPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30302FCPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30302FEPFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30302FEPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30302FEPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M3030RFEPFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M3030RFGPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M3030SFDPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30600E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M30600-QB
RENESAS	M30620ECFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30600-QB
RENESAS	M30620ECGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30600-Q
RENESAS	M30620FCAFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30620FCAGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30620FCAGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30620FCPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30620FCPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30620FCPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30622F8PFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30622F8PGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30622F8PGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGAFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30624FGAGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGAGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30624FGGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGLFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30624FGLGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGLGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGMGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGMGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGNFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30624FGNGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGNGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30624FGPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30624FGPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30624FGPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30625FGPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30625-Q
RENESAS	M30626FHFPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30626FHPPF**	XAMPU2.EXE	M1-M30624-QF100	
RENESAS	M30626FHPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30626FHPPG	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30626FHPPG*	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30626FJPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30626FJPPG	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30626FJPPG*	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M3062LFGPPF	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M3062LFGPGP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M3062LFGPGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M306K1-TQ
RENESAS	M306K1F8LRP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M306N4FGTGP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M306N4FGVGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M306N5FCTFP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M306NKFHGP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M306NKFJGP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30800FCFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30800FCGP	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30803FGFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	M30803FGGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30803FGGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30833FJFP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	M30843FJGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30843FJGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30853FJGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30853FJGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30876FJBGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30876FJBGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30879FKAGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30879FKAGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M30879FLBGP	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	M30879FLBGP*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	M3087BFLBGP	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	M32192F8UFP	XAMPU2.EXE	M1-UN-DP48	ADP-M32192-TQ
RENESAS	M34238EKGP	XAMPU2.EXE	M1-UN-DP48	ADP-M34238EK-S
RENESAS	M34250E2FP	XAMPU2.EXE	M1-UN-DP48	ADP-M34250E2-S
RENESAS	M34280E1FP	XAMPU2.EXE	M1-UN-DP48	ADP-M34280-S
RENESAS	M34282E2GP	XAMPU2.EXE	M1-UN-DP48	ADP-M34282-S
RENESAS	M34283G2GP	XAMPU2.EXE	M1-UN-DP48	ADP-M34282-S
RENESAS	M34286G2GP	XAMPU2.EXE	M1-UN-DP48	ADP-M34282-S
RENESAS	M34508G4GP	XAMPU2.EXE	M1-UN-DP48	ADP-M34508-SS
RENESAS	M34513E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M34513-SD
RENESAS	M34514E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M34514-SS
RENESAS	M34520E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M34520-Q
RENESAS	M34550E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M34550-Q
RENESAS	M37210E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37210-SD
RENESAS	M37221EFSP	XAMPU2.EXE	M1-UN-DP48	ADP-M37221-SD
RENESAS	M37260E6FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37260-Q
RENESAS	M37260E6SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37260-SD
RENESAS	M37450E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M3745X-SD
RENESAS	M37451E4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M3745X-Q
RENESAS	M37451E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M3745X-SD
RENESAS	M37451E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M3745X-SD
RENESAS	M37451ECSP	XAMPU2.EXE	M1-UN-DP48	ADP-M3745X-SD
RENESAS	M37470E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37470-SD
RENESAS	M37471E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37471-SD
RENESAS	M37477E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37470-SD
RENESAS	M37478E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37471-SD
RENESAS	M37515E4HP	XAMPU2.EXE	M1-UN-DP48	ADP-M37515-Q
RENESAS	M37516E6HP	XAMPU2.EXE	M1-UN-DP48	ADP-M37515-Q
RENESAS	M37531E4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SS
RENESAS	M37531E4GP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-Q
RENESAS	M37531E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SD
RENESAS	M37531E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SS
RENESAS	M37532E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SS
RENESAS	M37534E4GP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-Q
RENESAS	M37534E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SS
RENESAS	M37540E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-SS
RENESAS	M37540E8GP	XAMPU2.EXE	M1-UN-DP48	ADP-M37531-Q
RENESAS	M37542F8GP	XAMPU2.EXE	M1-UN-DP48	ADP-M37542-Q
RENESAS	M37544G2AGP	XAMPU2.EXE	M1-UN-DP48	ADP-M37544-Q
RENESAS	M37544G2ASP	XAMPU2.EXE	M1-UN-DP48	ADP-M37544-SD
RENESAS	M37544G2SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37544-SD
RENESAS	M37546G4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M37544-SD
RENESAS	M37560E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38259-Q
RENESAS	M37560E8GP	XAMPU2.EXE	M1-UN-DP48	ADP-M37560-Q
RENESAS	M37632E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37632-TQ
RENESAS	M37640E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M37640-Q
RENESAS	M37702E4AFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37702-QB
RENESAS	M37702E4BFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37702-QB
RENESAS	M37702E6BFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37702-QB

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	M37705E2ASP	XAMPU2.EXE	M1-UN-DP48	ADP-M37705-SD
RENESAS	M37705E4BSP	XAMPU2.EXE	M1-UN-DP48	ADP-M37705B-SD
RENESAS	M37710E4BFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37710-Q
RENESAS	M37710EFLHP	XAMPU2.EXE	M1-UN-DP48	ADP-M37710-TQ
RENESAS	M37712E4BFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37710-Q
RENESAS	M37735EHLHP	XAMPU2.EXE	M1-UN-DP48	ADP-M37710-TQ
RENESAS	M37751E6CFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37702-QB
RENESAS	M37753FFCFP	XAMPU2.EXE	M1-UN-DP48	ADP-M37753-Q
RENESAS	M38002E2SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38002E4-SD
RENESAS	M38002E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38002E4-SD
RENESAS	M38004E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38002E4-Q
RENESAS	M38004E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38002E4-SD
RENESAS	M38027E8FP	XAMPU2.EXE	M1-UN-QF64	
RENESAS	M38027E8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38002E4-SD
RENESAS	M38039FFFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039-Q
RENESAS	M38039FFFP*	XAMPU2.EXE	M1-M38039-QF64	
RENESAS	M38039FFHHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039-TQV2
RENESAS	M38039FFHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039-TQV2
RENESAS	M38039FFLHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039-TQV2
RENESAS	M38039G4HHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039S-LQ
RENESAS	M38039G4HKP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039S-TQ
RENESAS	M38039G6HKP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039S-TQ
RENESAS	M38039G8HKP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039S-TQ
RENESAS	M38039GCHKP	XAMPU2.EXE	M1-UN-DP48	ADP-M38039S-TQ
RENESAS	M38063E6FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38063E6GP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-TQ
RENESAS	M38067ECFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38073E4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38203E4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38203E4HP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-Q
RENESAS	M38207E8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38207E8HP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-Q
RENESAS	M38223E4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38223E4HP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-Q
RENESAS	M38227ECFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-QB
RENESAS	M38227ECHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-Q
RENESAS	M38234G4FP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-Q
RENESAS	M38234G4HP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-TQ
RENESAS	M38235G6FP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-Q
RENESAS	M38238G8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-Q
RENESAS	M38238G8HP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-TQ
RENESAS	M38239GCFP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-Q
RENESAS	M3823AGFFP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-Q
RENESAS	M3823AGFHP	XAMPU2.EXE	M1-UN-DP48	ADP-M3823A-TQ
RENESAS	M38259EFDFFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38259-Q
RENESAS	M38503E4SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503-SD
RENESAS	M38503G4AFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503A-SS
RENESAS	M38503G4ASP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503A-SD
RENESAS	M38504E6FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503-SS
RENESAS	M38507F8FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38507-SS
RENESAS	M38507F8SP	XAMPU2.EXE	M1-UN-DP48	ADP-M38507-SD
RENESAS	M38514E6FP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503-SS
RENESAS	M38588GCFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503A-SS
RENESAS	M38588GCSP	XAMPU2.EXE	M1-UN-DP48	ADP-M38503A-SD
RENESAS	M38859FFHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38859-TQ
RENESAS	M38867E8HP	XAMPU2.EXE	M1-UN-DP48	ADP-M38067-Q
RENESAS	M38869FFAGP	XAMPU2.EXE	M1-UN-DP48	ADP-M38869-Q
RENESAS	M38869FFAHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38869-TQ
RENESAS	M38C13E6HP	XAMPU2.EXE	M1-UN-DP48	ADP-M38C13-TQ
RENESAS	M38C29FFAHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38C29-TQ
RENESAS	M38C29FFHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38C29-TQ
RENESAS	M38C37ECMFP	XAMPU2.EXE	M1-UN-DP48	ADP-M38C37-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	M38D24G4FP	XAMPU2.EXE	M1-UN-QF64	
RENESAS	M38D24G6FP	XAMPU2.EXE	M1-UN-QF64	
RENESAS	M38D24G6HP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	M38D29FFHP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	M38D29GCHP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	M38D29GFHP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	M38D59GCHP	XAMPU2.EXE	M1-UN-DP48	ADP-M38D59-TQ
RENESAS	R4F20102DFA	XAHMPU.EXE	M1-UN-DP48	ADP-R4F20103NFA-TQ
RENESAS	R4F20103NFA	XAHMPU.EXE	M1-UN-DP48	ADP-R4F20103NFA-TQ
RENESAS	R4F20115NFA	XAHMPU.EXE	M1-UN-DP48	ADP-R4F20103NFA-TQ
RENESAS	R4F20203NFD	XAHMPU.EXE	M1-UN-DP48	ADP-R4F20203-TQ80
RENESAS	R4F2112RVTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-TQ
RENESAS	R4F2112RVTE*	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	R4F2112VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-TQ
RENESAS	R4F2112VTE*	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	R4F2113NFT	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	R4F2116VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-TQ
RENESAS	R4F2116VTE*	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	R4F2117VTE	XAHMPU.EXE	M1-UN-DP48	ADP-64F2116-TQ
RENESAS	R4F2117VTE*	XAHMPU.EXE	M1-UN-DP48	ADP-H8S/211X-TQ144
RENESAS	R4F24248NVFPV	XAHMPU.EXE	M1-UN-DP48	ADP-R4F24248-TQ
RENESAS	R5F1007CANA	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-MLF24
RENESAS	R5F1007EANA	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-MLF24
RENESAS	R5F100ACASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F100AEASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F100AGASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F100BEANA	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-MLF32
RENESAS	R5F100FEAFP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-Q44
RENESAS	R5F100FFAFP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-Q44
RENESAS	R5F100LCAFB	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-Q64
RENESAS	R5F1016AASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20
RENESAS	R5F1017CANA	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-MLF24
RENESAS	R5F101ACASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F101LCAFB	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-Q64
RENESAS	R5F10267ASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F10268ASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F1026AASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F102A9DSP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F102AAASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F10367ASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F10368ASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F103AAASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F104AGASP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS30
RENESAS	R5F104GCAFB	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-Q48
RENESAS	R5F1076CGSP	XAUPD78X.EXE	M1-UN-DP48	ADP-R5F10X-SS20AV2
RENESAS	R5F21104FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21112FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21114FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21124FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21132FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21134FP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1013-TQ
RENESAS	R5F21142SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21154SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21172SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21181SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21182SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21184SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21194SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211A1DSP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211A1SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211A2DD	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211A2SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP <small>falls notwendig</small>
RENESAS	R5F211A4DSP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211A4SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211B1SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211B2DSP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211B2SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211B4DSP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F211B4SP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21206JFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2120AJFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2120CJFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21217JFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21226DFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21236DFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21237JFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21238KFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2123AJFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2123AKFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2123CJFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F2123CKFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2023-TQ
RENESAS	R5F21246SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21248SDFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21248SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21254SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21255SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21256SDFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21256SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21257SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21258SDFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21258SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2425-TQ
RENESAS	R5F21262SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21264NFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21266JFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21274KFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21274SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21276DFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21276SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21284JSP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F21294SNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C1417-SS
RENESAS	R5F212A8SDFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212B7SDFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212B8SDFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212B8SNFA	XAMPU2.EXE	M1-UN-DP48	ADP-R8C2A2B-Q64
RENESAS	R5F212B8SNFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212BASNFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212BCSNFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F212G5SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F212K4SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F212L2SNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F212L4SDFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21322CNFP	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F21324CNFP	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F21324GKSP	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F21334CNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21335CNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21336CNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21336TNFP	XAMPU2.EXE	M1-UN-QF32	
RENESAS	R5F21345CNFP	XAMPU2.EXE	M1-UN-LQ48	
RENESAS	R5F21346HJFP	XAMPU2.EXE	M1-UN-LQ48	
RENESAS	R5F21348EJFP	XAMPU2.EXE	M1-UN-LQ48	
RENESAS	R5F21354ANFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C35X-TQ
RENESAS	R5F21358MNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C35X-TQ
RENESAS	R5F2135ACNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C35X-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	R5F2135AMNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C35X-TQ
RENESAS	R5F2135CCNFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C35X-TQ
RENESAS	R5F2136ACNFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F2136CFKFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F213G5ANNP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C3GA-QN24
RENESAS	R5F213J5CNP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C3JX-QN36
RENESAS	R5F213J6ANNP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C3JX-QN36
RENESAS	R5F213J6CNP	XAMPU2.EXE	M1-UN-DP48	ADP-R8C3JX-QN36
RENESAS	R5F2L368CDFP	XAMPU2.EXE	M1-UN-TQ64	
RENESAS	R5F2L388CDFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8CL38X-LQ80
RENESAS	R5F2L3AABDFP	XAMPU2.EXE	M1-UN-DP48	ADP-R8CL3AX-LQ100
RENESAS	R5F2M112ANSP	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F2M120ANDD	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F2M122ANDD	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F2M122ANSP	XAMPU2.EXE	M1-UN-DP48	
RENESAS	R5F363AMNFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F36406NFB	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQV3
RENESAS	R5F36406NFB*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F3640DNFB	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQV3
RENESAS	R5F3640DNFB*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F3640MNFB	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQV3
RENESAS	R5F3640MNFB*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F364A6DFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F364AEDFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F364AENFA	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-Q
RENESAS	R5F364AENFB	XAMPU2.EXE	M1-UN-DP48	ADP-M30624-TQ/V2/V3
RENESAS	R5F364AENFB*	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F364AMNFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F3650KDFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F3650NDFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F52201BDFM	XAHMPU.EXE	M1-UN-DP48	ADP-R5F5220X-LQ64
RENESAS	R5F52206BDFM	XAHMPU.EXE	M1-UN-DP48	ADP-R5F5220X-LQ64
RENESAS	R5F56216BDBG	XAHMPU.EXE	M1-UN-DP48	ADP-R5F562XX-BG176
RENESAS	R5F5631EDDFC	XAHMPU.EXE	M1-UN-DP48	ADP-R5F563XX-TQ176
RENESAS	R5F61527FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61527-TQ
RENESAS	R5F61633N50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61638-TQ
RENESAS	R5F61638N50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61638-TQ
RENESAS	R5F61653FTV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61638-TQ
RENESAS	R5F61654FTV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61638-TQ
RENESAS	R5F61664N50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F6166-TQ
RENESAS	R5F61668RN50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F6166-TQ
RENESAS	R5F61725FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F61725-TQ
RENESAS	R5F64114DFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F64115DFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F64176DFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F64177PFD	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	R5F64179PFD	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	R5F6417BDFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F64185PFD	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	R5F64189DFD	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	R5F64189PFD	XAMPU2.EXE	M1-UN-DP48	ADP-R32C117-LQ144
RENESAS	R5F64219JFB	XAMPU2.EXE	M1-UN-DP48	ADP-M16C6XP-TQ
RENESAS	R5F70835FTV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F70835-TQ
RENESAS	R5F70845FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F70845-TQ112
RENESAS	R5F70854AN80FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F70854A-Q144
RENESAS	R5F71242VD50FP	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7124-Q48
RENESAS	R5F71252N50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7125-Q64
RENESAS	R5F71252N50FPV*	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7125-Q64V2
RENESAS	R5F71253D50FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7125-Q64
RENESAS	R5F71253D50FPV*	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7125-Q64V2
RENESAS	R5F71374AD80FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7147-TQ
RENESAS	R5F71474BJ80FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7147-TQ

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	R5F71494A	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7149-TQ
RENESAS	R5F72395BDFP	XAHMPU.EXE	M1-UN-DP48	ADP-R5F72395-TQ
RENESAS	R5F72856D100FPV	XAHMPU.EXE	M1-UN-DP48	ADP-R5F7285X-TQ144
RENESAS	UPD17P133ES	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P133-SD
RENESAS	UPD17P149CT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P149-SD
RENESAS	UPD17P149GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P149-S
RENESAS	UPD17P202AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD17P202
RENESAS	UPD6P8	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD6P8-SS20
RENESAS	UPD70F3116GJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3116-Q144
RENESAS	UPD70F3210YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3210-Q80
RENESAS	UPD70F3214YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3214-TQ100
RENESAS	UPD70F3231M1	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3231M-TQ64
RENESAS	UPD70F3311GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F331X-TQ100
RENESAS	UPD70F3313YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F331X-TQ100
RENESAS	UPD70F3329GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F332X-QF64
RENESAS	UPD70F3329K8	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F332X-QN64
RENESAS	UPD70F3358GJ(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
RENESAS	UPD70F3714GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3714-Q64
RENESAS	UPD70F3717GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3717-Q100
RENESAS	UPD70F3742GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3717-Q100
RENESAS	UPD70F3746GJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
RENESAS	UPD70F3933BGJ(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
RENESAS	UPD70F3939BGJ	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD70F3358-Q144
RENESAS	UPD75P0016CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
RENESAS	UPD75P0016GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
RENESAS	UPD75P0076CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
RENESAS	UPD75P0076GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P0076-S
RENESAS	UPD75P008CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
RENESAS	UPD75P008GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
RENESAS	UPD75P036CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P036
RENESAS	UPD75P036GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P036-Q
RENESAS	UPD75P068CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008
RENESAS	UPD75P068GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P008QFP
RENESAS	UPD75P108BCW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
RENESAS	UPD75P108BGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
RENESAS	UPD75P108CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
RENESAS	UPD75P108DW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
RENESAS	UPD75P108GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
RENESAS	UPD75P116CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108
RENESAS	UPD75P116GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P108QFP
RENESAS	UPD75P216ACW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216
RENESAS	UPD75P218CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216
RENESAS	UPD75P218GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P216-Q
RENESAS	UPD75P3018AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
RENESAS	UPD75P3018AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
RENESAS	UPD75P3018GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
RENESAS	UPD75P3018GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
RENESAS	UPD75P308GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P308
RENESAS	UPD75P3116GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3116-Q
RENESAS	UPD75P3116GK	XAUPD78X.EXE	M1-UN-DP48	ADP-75P3116-TQ
RENESAS	UPD75P316AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P308
RENESAS	UPD75P316BGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
RENESAS	UPD75P316BGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXB-Q
RENESAS	UPD75P3216GT	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3216-S
RENESAS	UPD75P328GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P3XXA-Q
RENESAS	UPD75P518GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD75P516
RENESAS	UPD77P20D	XAUPD78X.EXE	M1-UN-DP48	
RENESAS	UPD77P25C	XAUPD78X.EXE	M1-UN-DP48	
RENESAS	UPD77P25GW	XAUPD78X.EXE	M1-UN-DP48	
RENESAS	UPD77P25L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD77P25L-PL44
RENESAS	UPD77P56G	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD77P56-S
RENESAS	UPD78CP14GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	UPD78CP14L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-PL
RENESAS	UPD78CP18CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78CP14-SD
RENESAS	UPD78F0034ACW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-SD
RENESAS	UPD78F0034AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
RENESAS	UPD78F0034AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-TQ64
RENESAS	UPD78F0034BGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
RENESAS	UPD78F0034BYGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-Q
RENESAS	UPD78F0034BYGK(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0034-TQ64
RENESAS	UPD78F0058GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0058GC-Q
RENESAS	UPD78F0058GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0058-TQ80
RENESAS	UPD78F0078GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0078-TQ64
RENESAS	UPD78F0078GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0078-Q64V2
RENESAS	UPD78F0103HMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F01XXH-SS30
RENESAS	UPD78F0103M5MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0103-SS
RENESAS	UPD78F0103M5MC*	XAUPD78X.EXE	M1-UPD78F0103-SS30	
RENESAS	UPD78F0124HGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124XH-Q52
RENESAS	UPD78F0124HGB*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124H-Q52
RENESAS	UPD78F0124M5GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124-Q52
RENESAS	UPD78F0124M6GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0124-Q52
RENESAS	UPD78F0134HGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0134H-Q64
RENESAS	UPD78F0134M5GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0138-TQ64
RENESAS	UPD78F0138HGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0134H-Q64
RENESAS	UPD78F0138M5GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0138-TQ64
RENESAS	UPD78F0233GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0233-Q
RENESAS	UPD78F0338GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0338-TQ
RENESAS	UPD78F0354GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0354-TQ100
RENESAS	UPD78F0372GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F03XX-Q80
RENESAS	UPD78F0395GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0395-Q100
RENESAS	UPD78F0413GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F04XX-Q48
RENESAS	UPD78F0421GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0421-Q52
RENESAS	UPD78F0441GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
RENESAS	UPD78F0442GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
RENESAS	UPD78F0451GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
RENESAS	UPD78F0453GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
RENESAS	UPD78F0454GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0442-TQ64
RENESAS	UPD78F0500AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0500AMC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
RENESAS	UPD78F0500MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0500MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
RENESAS	UPD78F0501MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0501MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
RENESAS	UPD78F0502AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0502MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0502MC*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0500-SS30
RENESAS	UPD78F0503AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30/V2
RENESAS	UPD78F0511AGA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F0511AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
RENESAS	UPD78F0511GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
RENESAS	UPD78F0511GB*	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0511-Q44
RENESAS	UPD78F0512GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F0513GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q44
RENESAS	UPD78F0515GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F0523GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
RENESAS	UPD78F0524GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
RENESAS	UPD78F0526AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0524-Q52
RENESAS	UPD78F0535AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
RENESAS	UPD78F0535GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q64
RENESAS	UPD78F0535GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-LQ64
RENESAS	UPD78F0536GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
RENESAS	UPD78F0537GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0536-Q64
RENESAS	UPD78F0537GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q64
RENESAS	UPD78F0550MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0550-SS16

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	UPD78F0703AYGC(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0703-Q
RENESAS	UPD78F0703YGC(A)	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0703-Q
RENESAS	UPD78F0730MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0730-SS30
RENESAS	UPD78F0743MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
RENESAS	UPD78F0744MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
RENESAS	UPD78F0754MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F07XX-SS30
RENESAS	UPD78F0842GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F08XX-Q80
RENESAS	UPD78F0849GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F08XX-Q80
RENESAS	UPD78F0856MAA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0550-SS16
RENESAS	UPD78F0988AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F0988-Q64
RENESAS	UPD78F1018F1	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F10XX-BG64
RENESAS	UPD78F1145GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F11XX-Q64
RENESAS	UPD78F1152GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F115X-Q80
RENESAS	UPD78F1153GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F11XX-Q80
RENESAS	UPD78F1154AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F115X-Q80
RENESAS	UPD78F1201MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-SS30V2
RENESAS	UPD78F1503AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F150X-Q100
RENESAS	UPD78F1508AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F150X-Q128
RENESAS	UPD78F4218AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4218-TQ
RENESAS	UPD78F4218AYGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4218-TQ
RENESAS	UPD78F4225GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F4225-Q
RENESAS	UPD78F8014AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F801XA-Q52
RENESAS	UPD78F8016AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F801XA-Q52
RENESAS	UPD78F8027GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F8028GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F8029GA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F05XX-Q48
RENESAS	UPD78F9026AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9026-TQ44
RENESAS	UPD78F9076MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9076-SS
RENESAS	UPD78F9116AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SS/V2
RENESAS	UPD78F9116BMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SS/V2
RENESAS	UPD78F9136AMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9116-SSV2
RENESAS	UPD78F9177AGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
RENESAS	UPD78F9177AGB*	XAUPD78X.EXE	M1-UPD78F9177-QF44	
RENESAS	UPD78F9177AYGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
RENESAS	UPD78F9177GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
RENESAS	UPD78F9177GB*	XAUPD78X.EXE	M1-UPD78F9177-QF44	
RENESAS	UPD78F9177YGB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9177-Q
RENESAS	UPD78F9202MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
RENESAS	UPD78F9211GR	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
RENESAS	UPD78F9212GR	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9212-SS16
RENESAS	UPD78F9222MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9222-SS20
RENESAS	UPD78F9224MC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9222-SS20
RENESAS	UPD78F9234BMC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9234-SS30
RENESAS	UPD78F9328GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9328-Q
RENESAS	UPD78F9418AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9418-Q80
RENESAS	UPD78F9418AGK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9418AGK-TQ80
RENESAS	UPD78F9456GK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F9456-Q
RENESAS	UPD78F9502MA	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78F92X2-SS
RENESAS	UPD78P014CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P014-SD
RENESAS	UPD78P014GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P014-Q
RENESAS	UPD78P018FCW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P018-SD
RENESAS	UPD78P018FGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P018-Q
RENESAS	UPD78P018FGK	XAUPD78X.EXE	M1-UN-DP48	ADP-78P018GK-TQ
RENESAS	UPD78P0208GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P0208-Q
RENESAS	UPD78P0308GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT
RENESAS	UPD78P0308GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P0308-Q
RENESAS	UPD78P0308YGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT
RENESAS	UPD78P054GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-Q
RENESAS	UPD78P054Gk	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-TQ
RENESAS	UPD78P054KK	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-L
RENESAS	UPD78P058GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P054-Q
RENESAS	UPD78P064GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-AQT

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
RENESAS	UPD78P064GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-Q
RENESAS	UPD78P064KL	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P064-L
RENESAS	UPD78P083CU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-SD
RENESAS	UPD78P083DU	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-SD
RENESAS	UPD78P083GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P083-Q
RENESAS	UPD78P214CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P214
RENESAS	UPD78P214GC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P218A-Q
RENESAS	UPD78P214L	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P214-PL
RENESAS	UPD78P218AGC	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P218A-Q
RENESAS	UPD78P328CW	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P328-SD
RENESAS	UPD78P328GF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P328GF-Q64
RENESAS	UPD78P368AGF	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD78P368-Q80
RENESAS	UPD78P4038GC	XAUPD78X.EXE	M1-UN-DP48	ADP-78P4038-TQ
RENESAS	UPD78P9014CT	XAUPD78X.EXE	M1-UN-DP48	ADP-78P9014-SD
RENESAS	UPD79F7026GB	XAUPD78X.EXE	M1-UN-DP48	ADP-UPD79F7026-Q32
RICHTEK	CM508	X966X.EXE	M1-UN-ML40	
RICHTEK	CM601	X966X.EXE	M1-UN-DP48	CNV-QFN-DIP24
RICHTEK	CM602	X966X.EXE	M1-UN-QN28	
RICOH	27C256	XMEM1.EXE	M1-UN-DP48	
RICOH	27C64(21V)	XMEM1.EXE	M1-UN-DP48	
ROHM	BR24A02	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24A08	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24A32	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24C01AFV-W	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24C02/F	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24C21/F	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G02	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G02-3	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G04-3	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G128	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G16	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G16-3	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G256-3A	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G32	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G64	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24G64-3A	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L01A	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L02	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L04	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L08	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L16	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L32	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24L64	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24S16	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24S256	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24S32	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24S64	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24T02	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24T128	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24T32	XSPROM.EXE	M1-UN-DP48	
ROHM	BR24T64	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L010	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L020	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L040	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L080	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L160	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L320	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25L640	XSPROM.EXE	M1-UN-DP48	
ROHM	BR25S256-W	XSPROM.EXE	M1-UN-DP48	
ROHM	BR34L02	XSPROM.EXE	M1-UN-DP48	
ROHM	BR9016A	XSPROM.EXE	M1-UN-DP48	
ROHM	BR9020	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ROHM	BR9020F	XSPROM.EXE	M1-UN-DP48	
ROHM	BR9080/A	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93A76	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93H56	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93H66	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93H76	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93H86	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93L46	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93L56	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93L66	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93L76	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93LC46	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93LC56	XSPROM.EXE	M1-UN-DP48	
ROHM	BR93LC66	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA24C1024	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA24C512	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25C020	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25C1024H	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25C1024L	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25C512H	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25C512L	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25F005	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25F010	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25F020	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25F040	XSPROM.EXE	M1-UN-DP48	
SAIFUN	SA25F160(SOP16)	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	K5A3240YBA-T	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SAMSUNG	K5A3240YTA-T	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SAMSUNG	K5A3280YBB-T	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SAMSUNG	K5A3280YTB-T	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SAMSUNG	K5J6332CTM	XA28F2.EXE	M1-UN-BG68	TOP-KADXX0300-BG69
SAMSUNG	K5L6331CAM-D	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SAMSUNG	K8D1616UBA-T	XA28F2.EXE	M1-UN-BG68	TOP-K8D1616-BG48
SAMSUNG	K8D1616UBA-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D1616UTA-T	XA28F2.EXE	M1-UN-BG68	TOP-K8D1616-BG48
SAMSUNG	K8D1616UTA-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D1716UBC-P	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D1716UBC-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D1716UTC-F/D	XA28F2.EXE	M1-UN-BG68	TOP-K8D1616-BG48
SAMSUNG	K8D1716UTC-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UBB-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UBC-F/T	XA28F2.EXE	M1-UN-BG68	TOP-K8D1616-BG48
SAMSUNG	K8D3216UBC-P	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UBC-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UBM-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UTB-T	XA28F2.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SAMSUNG	K8D3216UTB-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UTC-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3216UTM-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D3316UBA-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D6316UBM-P	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D6316UBM-T	XA28F2.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SAMSUNG	K8D6316UBM-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8D6316UTM-T	XA28F2.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SAMSUNG	K8D6316UTM-Y	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SAMSUNG	K8P1615UQB-P	XA28F2.EXE	M1-UN-TS48A/TS56	
SAMSUNG	K8P2815UQB-D	XA28F2.EXE	M1-UN-BG68	TOP-K8P2815-BG80
SAMSUNG	K8P2815UQB-E	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SAMSUNG	K8P3215UQB-P	XA28F2.EXE	M1-UN-TS48A/TS56	
SAMSUNG	K8P5615UQA-P	XA28F2.EXE	M1-UN-TS56	
SAMSUNG	K8P6415UQB-P	XA28F2.EXE	M1-UN-TS48A/TS56	
SAMSUNG	K8Q2815UQB-P	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SAMSUNG	KAD070300A-T	XA28F2.EXE	M1-UN-BG68	TOP-KADXX0300-BG69
SAMSUNG	KM2817A	XMEM2.EXE	M1-UN-DP48	
SAMSUNG	KM28C64B	XMEM2.EXE	M1-UN-DP48	
SAMSUNG	KM93C06	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KM93C07	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KM93C46	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C020	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C021	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C040	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C041	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C080	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24C081	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24L161	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24L321	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS24L641	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	S524A40X20	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	S524A40X21	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	S524A60X51	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	S524C20D21	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	S524C80D41	XSPROM.EXE	M1-UN-DP48	
SAMSUNG	KS88P6116	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8615-SD
SAMSUNG	S3F80J9	XAMPU2.EXE	M1-UN-DP48	ADP-S3F80J9-SO
SAMSUNG	S3F8289	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
SAMSUNG	S3F828BX	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
SAMSUNG	S3F828BX(QFP80)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
SAMSUNG	S3F84I9	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
SAMSUNG	S3F84NB	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
SAMSUNG	S3F9444	XAMPU2.EXE	M1-UN-DP48	
SAMSUNG	S3F9454(DIP20)	XAMPU2.EXE	M1-UN-DP48	
SAMSUNG	S3F94C4	XAMPU2.EXE	M1-UN-DP48	
SAMSUNG	S3P7234	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
SAMSUNG	S3P7235	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
SAMSUNG	S3P72K8	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
SAMSUNG	S3P72N4	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
SAMSUNG	S3P7324	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
SAMSUNG	S3P7414	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
SAMSUNG	S3P8245(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
SAMSUNG	S3P8245(TQFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
SAMSUNG	S3P8249(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
SAMSUNG	S3P8249(TQFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
SAMSUNG	S3P825A	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
SAMSUNG	S3P8469(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
SAMSUNG	S3P8469(SDIP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8469-SD
SAMSUNG	S3P863A	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
SAMSUNG	S3P863A(SDIP42)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-SD
SAMSUNG	S3P9228	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
SAMSUNG	S3P9688	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
SANYO	LE28C1001A	XMEM2.EXE	M1-UN-DP48	
SANYO	LE28DW8163T-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SANYO	LE28FV4101T-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SANYO	LE28FW4003N	XMEM2.EXE	M1-UN-DP48	
SANYO	LE28FW8201T-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SANYO	LE28FW8203T-B	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SANYO	LE28FW8203T-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SANYO	LE24L0221	XSPROM.EXE	M1-UN-DP48	
SANYO	LE25FU106B	XSPROM.EXE	M1-UN-DP48	
SANYO	LE25FU206A	XSPROM.EXE	M1-UN-DP48	
SANYO	LE25FW106	XSPROM.EXE	M1-UN-DP48	
SANYO	LE25FW106A	XSPROM.EXE	M1-UN-DP48	
SANYO	LE25FW406	XSPROM.EXE	M1-UN-DP48	
SANYO	LC87F5CC8A(SQFP100)	XMEM2.EXE	M1-UN-DP48	W87F52256SQ
SDMC	DM2016	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SEEQ	82005(21V)	XMEM1.EXE	M1-UN-DP48	
SEEQ	82025(21V)	XMEM1.EXE	M1-UN-DP48	
SEEQ	86063	XMEM1.EXE	M1-UN-DP48	
SEEQ	DQ27128(21V)	XMEM1.EXE	M1-UN-DP48	
SEEQ	DQ2764(21V)	XMEM1.EXE	M1-UN-DP48	
SEEQ	DQ27C256	XMEM1.EXE	M1-UN-DP48	
SEEQ	DQ52B13	XMEM2.EXE	M1-UN-DP48	
SEIKO	S2817A	XMEM2.EXE	M1-UN-DP48	
SEIKO	S-24C02A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C02BP	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C02C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C02D	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C02D(SOT23)	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C04C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C128C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C16A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C16C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C256C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C32C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C512C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24C64C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CC02A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CM01C	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS01A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS02A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS04A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS08A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS16A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24CS64A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-24S/H45	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A010A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A020A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A040A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A080A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A160A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A320A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25A640A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C010A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C020A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C040A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C080A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C128A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C160A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C256A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C320A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C512A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25C640A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-25CM01A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-29131A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-29190A(SOP8)	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-29290A(SOP8)	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-29330A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-2933CR/I	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-29L394A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-34C02A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-34TS04A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93A46A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93A56A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93A66A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93A86A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C46A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C46B	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SEIKO	S-93C56A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C56B	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C66A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C66B	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C76A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93C86B	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93CC46B	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93CC56B	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93L46A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93L56A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93L66A	XSPROM.EXE	M1-UN-DP48	
SEIKO	S-93L76A	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	2764A	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	27C64A	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27128A	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M2716(25V)	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27256	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M2732A(21V)	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27512	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C1000	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C1001	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C1024	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C128A	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C2001	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C202	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C256B	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C4001	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C4002	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C512	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C516	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27C801	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V101	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V102	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V201	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V256	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V401	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V402	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27V512	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W101	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W102	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W201	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W401	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W402	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W512	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M27W801	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M87C257	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M87C512	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	TS2764(21V)	XMEM1.EXE	M1-UN-DP48	
SGS-THOMSON	M24128	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24128A	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24128B	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24256	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24C02	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24C08	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M24C64	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M25P05	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M25P10	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M35560P	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C56(256*8)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SGS-THOMSON	M93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93S46	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93S56	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M93S66	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M95128	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M95160	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	M95640	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24128	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24256	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C01	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C02	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C02A	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C04/ST25C04	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C04C/ST25C04C	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C08	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C16/ST24W16	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C32	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24C64	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24E16	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24E32	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24E64D	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24FC21	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24FW21	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24LC21	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24LC21B	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24LW21	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST24W04C/ST25W04C	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST25C02A	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST25C08	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST25E64D	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C46A(128*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C46A(64*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS46	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS47	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS56	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS57	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS66	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST93CS67	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95010	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95020	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95022	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95040	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95160	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95P02	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95P04	XSPROM.EXE	M1-UN-DP48	
SGS-THOMSON	ST95P08	XSPROM.EXE	M1-UN-DP48	
SHARP	LH5763	XMEM1.EXE	M1-UN-DP48	
SHARP	LH28F008BVT-BTL	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SHARP	LH28F008SAT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SHARP	LH28F008SCHT-TL	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SHARP	LH28F008SCN-V	XA28F2.EXE	M1-UN-PS44	
SHARP	LH28F008SCT	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SHARP	LH28F016SANS	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
SHARP	LH28F016SAT	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F016SCT-L	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SHARP	LH28F128BFHT-PBTL	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F128BFHT-PTTL	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F160BGE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BGHE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BJE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BJE-TTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BJHE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BVE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BVE-TTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BVHE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160BVHE-TTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F160S3HNS-L10	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
SHARP	LH28F160S3T-L	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F160S5T-L	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F160SK	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F320BFHE-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F320BJE-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F320BJE-PTTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F320S3NS	XA28F2.EXE	M1-UN-DP48	ADP-28F640-SS
SHARP	LH28F320S3TD-L	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F400BGE-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F400BGE-TZ1	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F400BGN-TL	XA28F2.EXE	M1-UN-PS44	
SHARP	LH28F400BVE-BL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F400BVE-TL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F640BFHE-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F640BFHE-PTTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F640BFN-PTTL	XA28F2.EXE	M1-UN-PS44	
SHARP	LH28F640SPHT-PTLZ8	XA28F2.EXE	M1-UN-TS56	
SHARP	LH28F800BGE-TL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BGHE-TL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BGN-BL	XA28F2.EXE	M1-UN-PS44	
SHARP	LH28F800BGN-TL	XA28F2.EXE	M1-UN-PS44	
SHARP	LH28F800BJE-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BJE-PTTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BJHE-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BJHR-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BJR-PBTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BVE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BVE-TTLZ1	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800BVHE-BTL	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LH28F800SGHE-L	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LHF00L04(TSOP40)	XMEM2.EXE	M1-UN-DP48	
SHARP	LHF00L06(TSOP40)	XMEM2.EXE	M1-UN-DP48	
SHARP	LHF00L19	XMEM2.EXE	M1-UN-DP48	
SHARP	LHF00L29	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SHARP	LHF00L41(TSOP40)	XMEM2.EXE	M1-UN-DP48	
SHARP	LRS1806F	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
SIEMENS	SDA2506	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA2516/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA2526/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA2546/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA2586/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA25x16/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA25x26/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA25x46/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDA25x86/-5	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SDE2506	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SLA24C01	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SLA24C02	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SLA24C04	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SLA24C08	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SIEMENS	SLA24C16	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SLA24C164	XSPROM.EXE	M1-UN-DP48	
SIEMENS	SAB-C501G-1E	XPGM51.EXE	M1-UN-DP48/PL44	
SIEMENS	SAB-C504-2E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
SIEMENS	SAB-C508-4E(QFP64)	XASIG.EXE	M1-UN-DP48	ADP-C508-Q
SIEMENS	SAB-C508-4E(SDIP64)	XASIG.EXE	M1-UN-DP48	ADP-C508-SD
SIEMENS	SAB-C540U(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-C541-PL
SIEMENS	SAB-C540U(SDIP52)	XASIG.EXE	M1-UN-DP48	ADP-C541-SD
SIEMENS	SAB-C541U(PLCC44)	XASIG.EXE	M1-UN-DP48	ADP-C541-PL
SIEMENS	SAB-C541U(SDIP52)	XASIG.EXE	M1-UN-DP48	ADP-C541-SD
SIEMENS	SAF-C164CI-8E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
SIEMENS	SAF-C164CI-8E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
SIEMENS	SAF-C504-2E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
SIEMENS	SAF-C505CA-4E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
SIEMENS	SAF-C505L-4E	XASIG.EXE	M1-UN-DP48	ADP-C505L-Q
SIEMENS	SAF-C515C-8E	XASIG.EXE	M1-UN-DP48	ADP-C515C-Q
SIEMENS	SAK-C164CI-8E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
SIEMENS	SAK-C164CI-8E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CI-Q
SIEMENS	SAK-C164CM-4E(Segment 0)	XASIG.EXE	M1-UN-DP48	ADP-C164CM/SM-TQ
SIEMENS	SAK-C164CM-4E(Segment 1)	XASIG.EXE	M1-UN-DP48	ADP-C164CM/SM-TQ
SIEMENS	SAK-C505CA-4E	XASIG.EXE	M1-UN-DP48	ADP-SABC504-Q
SIGMA	SD3402	XASIG.EXE	M1-UN-DP48	ADP-SD3402-QN48
SIGMA	ZM5101	XASIG.EXE	M1-ZW4101-QN56	
SIGNETICS	27C64A	XMEM1.EXE	M1-UN-DP48	
SILICON7	SV4E1604UBA	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SILICON7	SV4E3204UBA	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SILICON7	SV4F1604UBA	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SILICON7	SV4F3204UBA	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SILICON7	SV6C2832UBA	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
SILICON7	SV6C6416UBA	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
SILICON7	SV7C1604UBA	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
SILICON7	SV7C3208UTA	XA28F2.EXE	M1-UN-BG68	TOP-69LW3241-BG66
SILICON7	SV7E1602UBA	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SILICON7	SV7E3204UBA	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SILICON7	SVAE3216UTA	XA28F2.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SIMTEK	STK12C68	XMEM2.EXE	M1-UN-DP48	
SIMTEK	STK15C88	XMEM2.EXE	M1-UN-DP48	
SIMTEK	STK22C48	XMEM2.EXE	M1-UN-DP48	
SIMTEK	STK25C48	XMEM2.EXE	M1-UN-DP48	
SMARTCHIP	SMC57C51	XPGM51.EXE	M1-UN-DP48	
SMARTCHIP	SMC57C52	XPGM51.EXE	M1-UN-DP48	
SMARTCHIP	SMC57L51	XPGM51.EXE	M1-UN-DP48	
SMOS	27C128H	XMEM1.EXE	M1-UN-DP48	
SMOS	27C256H	XMEM1.EXE	M1-UN-DP48	
SMOS	27C64H	XMEM1.EXE	M1-UN-DP48	
SMSC	KBC1021(QFP100)	XATMP.EXE	M1-UN-DP48	ADP-KBC1021-TQ
SMSC	KBC1021(QFP128)	XATMP.EXE	M1-UN-DP48	ADP-KBC10XX-VTQ
SMSC	KBC1070(QFP128)	XATMP.EXE	M1-UN-DP48	ADP-KBC10XX-VTQ
SMSC	LPC47N250	XATMP.EXE	M1-UN-DP48	ADP-LPC47N250-TQ/ADP-KBC1021-TQ
SMSC	LPC47N350	XATMP.EXE	M1-UN-DP48	ADP-LPC47N350-TQ
SMSC	MEC5004L	XATMP.EXE	M1-UN-DP48	ADP-MEC5004-Q128
SMSC	OS81050	XATMP.EXE	M1-UN-DP48	ADP-OS81050-QF44
SMSC	OS81110	XATMP.EXE	M1-OS81110-ML48	
SONIX	SN8P1602BP(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1602BS(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1602BX(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1602P(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1602S(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1602X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1603P(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1603S(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1603X(PIN20)	XSONIX.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SONIX	SN8P1604AK(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1604AP(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1604AS(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1604AX(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P17021X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702AP(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702AS(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702AX(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702P(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702S(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1702X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1703AP(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1703AS(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1703AX(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1704K(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1704S(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1706P(PIN40)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1708P(PIN48)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1708X(PIN48)	XSONIX.EXE	M1-UN-DP48	ADP-SN8P1708X-SS48
SONIX	SN8P1819AQ(PIN80)	XSONIX.EXE	M1-UN-DP48	ADP-SN8P1819A-Q
SONIX	SN8P1819Q(PIN80)	XSONIX.EXE	M1-UN-DP48	ADP-SN8P1819-Q
SONIX	SN8P1829Q(PIN80)	XSONIX.EXE	M1-UN-DP48	ADP-SN8P1819-Q
SONIX	SN8P1907P(PIN48)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P1907X(PIN48)	XSONIX.EXE	M1-UN-DP48	ADP-SN8PXX-SS48
SONIX	SN8P2202S(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2202X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2203K(PIN24)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2203S(PIN24)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2203X(PIN24)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2204K(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501AP(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501AS(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501AX(PIN16)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501BP(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501BS(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2501BX(PIN16)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602AP(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602AS(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602AX(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602BP(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602BS(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2602BX(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P26042P(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P26042S(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P26042X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2604AK(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2604AS(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2604K(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2604S(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2604X(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2608P(PIN48)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2608X(PIN48)	XSONIX.EXE	M1-UN-DP48	ADP-SN8PXX-SS48
SONIX	SN8P2613P(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2613S(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2613X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2624K(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2624X(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2704AK(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2704AS(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2705AP(PIN32)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2705AS(PIN32)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2706AP(PIN40)	XSONIX.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SONIX	SN8P2708AP(PIN48)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2708AX(PIN48)	XSONIX.EXE	M1-UN-DP48	ADP-SN8PXX-SS48
SONIX	SN8P2711P(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2711S(PIN14)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2711X(PIN16)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P27142P(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P27142S(PIN18)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P27143P(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P27143X(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2714K(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2714S(PIN28)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2715P(PIN32)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8P2715S(PIN32)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8PC01P(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8PC01S(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8PC13P(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONIX	SN8PC13S(PIN20)	XSONIX.EXE	M1-UN-DP48	
SONY	CXK27C1001	XMEM1.EXE	M1-UN-DP48	
SONY	CXK27C256	XMEM1.EXE	M1-UN-DP48	
SONY	CXK27C512	XMEM1.EXE	M1-UN-DP48	
SPANSION	AM28F010	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM28F010A	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM28F020	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM28F020A	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM28F256	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM28F512	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29BL162CB	XA28F1.EXE	M1-UN-DP48	ADP-29BL162-SS
SPANSION	AM29BL802CB	XA28F1.EXE	M1-UN-DP48	ADP-29BL162-SS
SPANSION	AM29DL161DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL161DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL161DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL161DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL162CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL162CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL162DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL162DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL162DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL162DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL163CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL163CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL163DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL163DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL163DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL163DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL164DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL164DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL164DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL164DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29DL316CT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29DL320GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL320GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL322GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	AM29DL323GB-WD	XA28F1.EXE	M1-UN-BG68A	TOP-AM29DL323-BG63
SPANSION	AM29DL323GB-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29DL323GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL323GT-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29DL324DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL324DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL324GB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL324GT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL640D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL640G-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL640H-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL800B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL800BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29DL800BB-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29DL800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DL800BT-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29DL800T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DS163DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DS163DT-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	AM29DS323DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DS323DB-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29DS323DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29DS323DT-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29F002B	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002BB	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002BT	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002NB	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002NBB	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002NBT	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002NT	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F002T	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F004BB	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F004BT	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F010	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F010A	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F010B	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F016-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F016-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F016B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F016B-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F016B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F016D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F016D-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F016D-EF	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	AM29F016D-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F017B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F017B-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F017D-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F017D-E4	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F032B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F032B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F040	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F040B	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29F080-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F080B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29F080B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F100B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F100B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F100T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	AM29F100T-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F160DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F160DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200AB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200AB-S	XA28F1.EXE	M1-UN-PS44/AM1-UN-SOP-500	
SPANSION	AM29F200AT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200AT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F200B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200BB-S	XA28F1.EXE	M1-UN-PS44/AM1-UN-SOP-500	
SPANSION	AM29F200BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F200BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F200T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400AT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F400T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F400T-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F800AB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F800B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F800B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F800BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F800BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29F800T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29F800T-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV001BB	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29LV001BT	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29LV002B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV002BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV002BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV002T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV004B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV004BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV004BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV004T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV008B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV008BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV008BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV008T-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV010B	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29LV017B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV017B-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV017D-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV017D-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV033C-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV033MU-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV040B	XMEM2.EXE	M1-UN-DP48	
SPANSION	AM29LV065DU-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV065DU-WH	XA28F1.EXE	M1-UN-BG68	TOP-AM29LV065D-BG63
SPANSION	AM29LV081B-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV116BB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV116BT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV116DB-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV116DT-E	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	AM29LV128MH-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV128ML-E	XA28F1.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	AM29LV160BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV160BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV160BB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV160BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV160BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV160BT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV160DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV160DB-F	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV160DB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV160DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV160DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV160DT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV160DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29LV200B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV200B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV200BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV200BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV200BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV200BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV200T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV200T-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV256MH-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV256ML-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV320DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV320DB-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29LV320DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV320DT-WM	XA28F1.EXE	M1-UN-BG68	TOP-29F320-BG48
SPANSION	AM29LV320MH-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV320ML-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV400B-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV400BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV400BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV400BB-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	AM29LV400BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV400BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV400BT-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	AM29LV400T-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV640MH-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV640ML-E	XA28F1.EXE	M1-UN-TS56	
SPANSION	AM29LV641DH-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV641DH-EF	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	AM29LV641DH-F	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	AM29LV641DL-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV641GH-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV642DU	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	AM29LV800B-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV800BB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV800BB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV800BB-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29LV800BT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV800BT-F	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV800BT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV800BT-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29LV800DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV800DB-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV800DB-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29LV800DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29LV800DT-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29LV800DT-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29LV800T-S	XA28F1.EXE	M1-UN-PS44	
SPANSION	AM29PL160CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29PL160CB-S	XA28F1.EXE	M1-UN-PS44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	AM29SL160CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL160CB-VD	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29SL160CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL160CT-VD	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29SL400CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL400CB-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
SPANSION	AM29SL400CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL400CT-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
SPANSION	AM29SL800CB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL800CB-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29SL800CT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL800CT-WB	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	AM29SL800DB-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL800DB-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
SPANSION	AM29SL800DB-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM29SL800DT-E	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	AM29SL800DT-WA	XA28F1.EXE	M1-UN-BG68/A	TOP-MX29LV320-BG48/A
SPANSION	AM29SL800DT-WC	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	AM41DL1624DT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL1634DT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL1644DB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL1644DT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL3208GB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL322xGB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL322xGT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL323xGB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL323xGT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL324xGB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL324xGT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL6408G	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM41DL6408H	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL161xDB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL161xDT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL162xDB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL162xDT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL163xDB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL163xDT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL164xDB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL164xDT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM42DL640AH	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM45DL3208GB	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM45DL3208GT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM49DL323BGT	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM49DL6408H	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM49DL640AG	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM49PDL127BH	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM49PDL129BH	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	AM50DL128BG/H	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42514	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42515	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42516	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42546	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42553	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42585	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	DS42587	XA28F1.EXE	M1-UN-BG68	TOP-41DL1644-BG69
SPANSION	MB84VD21194A-PBS	XA28F1.EXE	M1-UN-BG68	TOP-K5A3240-BG69
SPANSION	MBM29DL161BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL161BE-NC	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	MBM29DL161TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL162BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL162TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL162TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	MBM29DL163BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL163BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL163TD-PBT	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	MBM29DL163TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL164BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL164TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL321BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL321TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL322BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL322TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL322TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL323BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL323BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL323TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL323TE-PBT	XA28F1.EXE	M1-UN-BG68	TOP-M29DW32X-BG63
SPANSION	MBM29DL323TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL324BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL324BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL324TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL324TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL32BF-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL32TF-PBT	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	MBM29DL32TF-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL34TF-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL640E-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL640F-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL64DF-PBT	XA28F1.EXE	M1-UN-BG68	TOP-29DL64DF-BG48
SPANSION	MBM29DL64DF-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800BA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800TA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29DL800TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F002TC	XMEM2.EXE	M1-UN-DP48	
SPANSION	MBM29F016-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F016A-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F017A-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F033C-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29F040A	XMEM2.EXE	M1-UN-DP48	
SPANSION	MBM29F040C	XMEM2.EXE	M1-UN-DP48	
SPANSION	MBM29F080-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F080-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29F080A-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F080A-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29F160BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F160DB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F160DT-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F160TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F200B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F200BC-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29F200BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F200T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F200TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400BC-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29F400BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400TA-PF	XA28F1.EXE	M1-UN-PS44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	MBM29F400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F400TC-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29F400TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F800B-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29F800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F800BA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29F800TA-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29F800TA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV002B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV002T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV004B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV004T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV008B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV008T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV016B-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV016T-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV017-PTN	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	MBM29LV160B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV160BE-PBT	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	MBM29LV160BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV160T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV160TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV160TM-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV200B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV200T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV320BE-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV320TE-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400BC-PBT	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	MBM29LV400BC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV400TC-PBT	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	MBM29LV400TC-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV650UE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV651UE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800B-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800BA-PBT	XA28F1.EXE	M1-UN-BG68	TOP-K8D6316-BG48
SPANSION	MBM29LV800BA-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29LV800BA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800BB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800BE-PBT	XA28F1.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SPANSION	MBM29LV800BE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800T-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800TA-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800TB-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29LV800TE-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29PL12LM-PCN	XA28F1.EXE	M1-UN-TS56	
SPANSION	MBM29PL160BD-PF	XA28F1.EXE	M1-UN-PS44	
SPANSION	MBM29PL160BD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29PL160TD-PFTN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29PL32BM-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29PL64LM-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	MBM29PL65LM-TN	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AD016D-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL004D-BA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL004D-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL004D-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL004D-MF-01	XA28F1.EXE	M1-UN-PS44	
SPANSION	S29AL004D-MF-02	XA28F1.EXE	M1-UN-PS44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29AL004D-TA-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL004D-TA-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL004D-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL004D-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008D-BA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008D-BA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008D-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008D-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008D-MF-02	XA28F1.EXE	M1-UN-PS44	
SPANSION	S29AL008D-TA-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL008D-TA-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL008D-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008D-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008D-TF-R1	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008J-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008J-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008J-BF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008J-BF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008J-BF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL008J-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008J-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008J-TF-03	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008J-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL008J-TF-R1	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016D-BA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016D-BA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016D-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016D-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016D-MF-01	XA28F1.EXE	M1-UN-PS44	
SPANSION	S29AL016D-MF-02	XA28F1.EXE	M1-UN-PS44	
SPANSION	S29AL016D-TA-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016D-TA-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016D-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016D-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016J-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016J-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016J-BF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016J-BF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016J-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016J-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016J-TF-03	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016J-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016M-BA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BA-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BA-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-BF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AL016M-TA-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016M-TA-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016M-TA-R1	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016M-TA-R2	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL016M-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016M-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016M-TF-R1	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL016M-TF-R2	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL032D-BA-04	XA28F1.EXE	M1-UN-BG68	TOP-S29GL064A-BG48
SPANSION	S29AL032D-BF-03	XA28F1.EXE	M1-UN-BG68	TOP-S29GL064A-BG48
SPANSION	S29AL032D-BF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GL064A-BG48/A
SPANSION	S29AL032D-TA-00	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	S29AL032D-TA-03	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29AL032D-TA-04	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29AL032D-TF-00	XA28F1.EXE	M1-UN-DP48/TS48A/TS56	
SPANSION	S29AL032D-TF-03	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AL032D-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AS008J-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AS008J-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AS008J-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AS008J-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AS016J-BF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AS016J-BF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29AS016J-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AS016J-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29AS016J-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL016A-BF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL016A-BF-W1	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S29GL016A-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL016A-TF-03	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL016A-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL016A-TF-R1	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL016A-TF-R2	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL01GP-FA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-S7	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-FF-S8	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GP-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GP-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GP-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GP-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GR-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GR-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GS-DH-01	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-02	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-S1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-S2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-S3	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-S4	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-DH-S6	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL01GS-FH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-S6	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-V1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-FH-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL01GS-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GS-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GS-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL01GS-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032A-BA-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032A-BA-R4	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032A-BF-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032A-BF-R4	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032A-FA-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032A-FA-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032A-FA-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032A-FA-R4	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032A-FA-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032A-FA-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29GL032A-FA-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032A-FA-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032A-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032A-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032A-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032A-TA-R3	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032A-TA-R4	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032A-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032A-TF-R3	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL032A-TF-R4	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL032M-BA-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	S29GL032M-BA-R4	XA28F1.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
SPANSION	S29GL032M-FA-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032M-FA-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032M-FA-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032M-FA-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032M-FA-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032M-FF-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032M-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032M-TA-R0	XA28F1.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SPANSION	S29GL032M-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032M-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032M-TA-R3	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032M-TA-R4	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032M-TC-R3	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032M-TC-R4	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL032M-TF-R0	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL032M-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032M-TF-R3	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL032M-TF-R4	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL032N-BF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032N-BF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL032N-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL032N-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032N-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL032N-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032N-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL032N-TF-03	XA28F1.EXE	M1-UN-TS48/TS56	
SPANSION	S29GL032N-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064A-BF-R4	XA28F1.EXE	M1-UN-BG68	TOP-S29GL064A-BG48
SPANSION	S29GL064A-FA-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-R3	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-R4	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-R5	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FA-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064A-FA-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064A-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064A-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064A-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064A-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064A-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064A-TA-R3	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064A-TA-R4	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064A-TF-R1	XA28F1.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29GL064A-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064A-TF-R3	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064A-TF-R4	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064A-TF-R6	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064A-TF-R7	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064A-TF-R9	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064M-FA-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064M-FA-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064M-FA-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064M-FA-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064M-TA-R0	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064M-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064M-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064M-TA-R3	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064M-TA-R4	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064M-TA-R7	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064M-TC-R2	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29GL064M-TF-R0	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064M-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064M-TF-R3	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064M-TF-R4	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064M-TF-R7	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-BF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL064N-BF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29GL064N-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-03	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-04	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064N-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL064N-FF-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL064N-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064N-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064N-TF-03	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-TF-04	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-TF-06	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-TF-07	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064N-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL064N-TF-R3	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL064N-TF-R4	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29GL128M-FA-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128M-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128M-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128M-TD-R9	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128M-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128M-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-FA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FA-IH	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128N-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128N-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128N-FF-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128N-TA-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-TA-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-TF-01	XA28F1.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29GL128N-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128N-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-FA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FA-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-S0	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128P-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128P-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128P-FF-S7	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128P-FF-S9	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL128P-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128P-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128S-DH-01	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-02	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-S1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-S2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-S3	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-S4	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-V1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-DH-V2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL128S-FH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-FH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-FH-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-FH-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-FH-V1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-FH-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL128S-GH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S29GL128S-GH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S29GL128S-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128S-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128S-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL128S-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256M-TA-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256M-TA-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-FA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FA-IH	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256N-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256N-FF-V1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256N-TA-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TA-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TA-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TF-R2	XA28F1.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29GL256N-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256N-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-S0	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256P-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-S3	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256P-FF-S4	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256P-FF-S7	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-S8	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256P-FF-S9	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S29GL256P-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256P-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256S-DH-01	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-02	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-S1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-S2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-S3	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-S4	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-S6	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-V1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-DH-V2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL256S-FH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-S6	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-V1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-FH-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL256S-GH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S29GL256S-GH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S29GL256S-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256S-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256S-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL256S-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512N-FA-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-FA-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512N-TA-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512N-TA-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512N-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512N-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512P-FF-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-R1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-R2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-S7	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-FF-S8	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512P-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512P-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512P-TF-R1	XA28F1.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29GL512P-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-R1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-R2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512R-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512S-DH-01	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-02	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-S1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-S2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-S3	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-S4	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-S5	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-V1	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-DH-V2	XA28F1.EXE	M1-UN-BG68A	TOP-S29GLXXR-BG64
SPANSION	S29GL512S-FH-01	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-02	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-S1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-S2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-S5	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-V1	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-FH-V2	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S29GL512S-TF-01	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512S-TF-02	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512S-TF-V1	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29GL512S-TF-V2	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29JL032H-BA-31	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29JL032H-BA-32	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29JL032H-TA-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-21	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-22	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-31	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-32	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-41	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TA-42	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-01	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-02	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-21	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-22	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-31	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-32	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-41	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TC-42	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	
SPANSION	S29JL032H-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032H-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032H-TF-21	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032H-TF-31	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032H-TF-32	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032H-TF-42	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-BH-31	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29JL032J-BH-32	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29JL032J-TF-01	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-02	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-21	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-22	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-31	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-32	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-41	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL032J-TF-42	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL064H-TA	XA28F1.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S29JL064H-TF	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29JL064J-BH-00	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29JL064J-TF-00	XA28F1.EXE	M1-UN-TS48A/TS56	
SPANSION	S29PL032J-BF-12	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29PL064J-BA-12	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29PL064J-BF-12	XA28F1.EXE	M1-UN-BG68/A	TOP-S29PL064J-BG48/A
SPANSION	S29PL127J-TF-13	XA28F1.EXE	M1-UN-TS56	
SPANSION	S29WS512P-BF-00	XA28F1.EXE	M1-UN-BG68	TOP-S29WS512P-BG84
SPANSION	S71AL016D02BA-T	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL016A-BA-3J	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL016A-BF-3J	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032M-BA-BQ	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032M-BA-FQ	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032N-BF-0P	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032N-BF-0Z	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032N-BH-0K	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL032N-BH-0P	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL064A-BF-0Z	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL064N-BF-0U	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL064N-BF-0Z	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL064N-BH-0K	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71GL064N-BH-0P	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71PL032JxxBA	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71PL032JxxBF	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71PL064JxxBA	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71PL064JxxBF	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S71PL127JxxBA	XA28F1.EXE	M1-UN-BG68	TOP-S71PL127J-BG64
SPANSION	S71PL127JxxBF	XA28F1.EXE	M1-UN-BG68	TOP-S71PL127J-BG64
SPANSION	S71PL127NxxHA	XA28F1.EXE	M1-UN-BG68	TOP-S71PL127J-BG64
SPANSION	S71PL127NxxHF	XA28F1.EXE	M1-UN-BG68	TOP-S71PL127J-BG64
SPANSION	S71PL129JxxBA	XA28F1.EXE	M1-UN-BG68	TOP-S71PL127J-BG64
SPANSION	S71PL254JxxBF	XA28F1.EXE	M1-UN-BG68	TOP-S71PL254J-BG84
SPANSION	S99-50048	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S99-50052	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S99-50138	XA28F1.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
SPANSION	S99-50183	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S99-50196	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50197	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50198	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S99-50200	XA28F1.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
SPANSION	S99-50204	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50206	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50217	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50221	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50222	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50251	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50262	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	S99-50268	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50291	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50292	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXR-BG64
SPANSION	S99-50294	XA28F1.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
SPANSION	AM25FL005D	XSPROM.EXE	M1-UN-DP48	
SPANSION	AM25FL010D	XSPROM.EXE	M1-UN-DP48	
SPANSION	AM25FL020D	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL001D	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL004A	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL004D	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL004K	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL008A	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL008K	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL016A(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL016A(SOP8)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S25FL016A(WSON8)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL016K	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL032A	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL032K	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL032P	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL032P(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-MA-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-MA-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-MF-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VA-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VA-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VA-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL040A-VF-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL064A	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL064K	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL064K(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL064P	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL064P(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-BH-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-BH-03	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-BH-S2	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-BH-S3	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-MF-04	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL116K-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL127S-MF-10-256	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL127S-MF-10-64	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128K(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128P-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128P-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128P-NF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128P-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-BH-20	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-BH-30	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-BH-31	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-BH-Z0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-MF-G0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-MF-G1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-MF-R0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL128S-NF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-BH-30	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-BH-31	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-NF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL129P-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-BH-02	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-BH-03	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-BH-S2	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-BH-S3	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-MF-04	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-MF-Q1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL132K-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL164K-BH-03	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL164K-MF-00	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SPANSION	S25FL164K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL164K-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL204K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL204K-MF-04	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL208K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL208K-MF-04	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL216K-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL216K-MF-04	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-BH-20	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-BH-30	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-BH-31	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-BH-Z0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-G0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-G1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-R0	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-MF-R1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-NF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL256S-NF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-BH-31	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-BH-D1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-BH-T1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-MF-G1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S25FL512S-MF-R1	XSPROM.EXE	M1-UN-DP48	
SPANSION	S70FL01GS-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S70FL256P-MF-00	XSPROM.EXE	M1-UN-DP48	
SPANSION	S70FL256P-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S70FL512S-MF-01	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50263(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50346	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50347	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50350(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50364(SOP16)	XSPROM.EXE	M1-UN-DP48	
SPANSION	S99-50367(SOP16)	XSPROM.EXE	M1-UN-DP48	
SST	SST27SF010	XMEM2.EXE	M1-UN-DP48	
SST	SST27SF020	XMEM2.EXE	M1-UN-DP48	
SST	SST27SF256	XMEM2.EXE	M1-UN-DP48	
SST	SST27SF512	XMEM2.EXE	M1-UN-DP48	
SST	SST27SF512(TSOP)	XMEM2.EXE	M1-UN-DP48	
SST	SST27VF020	XMEM2.EXE	M1-UN-DP48	
SST	SST28LF040	XMEM2.EXE	M1-UN-DP48	
SST	SST28SF040	XMEM2.EXE	M1-UN-DP48	
SST	SST28SF040A	XMEM2.EXE	M1-UN-DP48	
SST	SST28VF040	XMEM2.EXE	M1-UN-DP48	
SST	SST28VF040A	XMEM2.EXE	M1-UN-DP48	
SST	SST29EE010	XMEM2.EXE	M1-UN-DP48	
SST	SST29EE020	XMEM2.EXE	M1-UN-DP48	
SST	SST29EE512	XMEM2.EXE	M1-UN-DP48	
SST	SST29LE010	XMEM2.EXE	M1-UN-DP48	
SST	SST29LE020	XMEM2.EXE	M1-UN-DP48	
SST	SST29LE512	XMEM2.EXE	M1-UN-DP48	
SST	SST29SF020	XMEM2.EXE	M1-UN-DP48	
SST	SST29SF040	XMEM2.EXE	M1-UN-DP48	
SST	SST29VE010	XMEM2.EXE	M1-UN-DP48	
SST	SST29VE020	XMEM2.EXE	M1-UN-DP48	
SST	SST29VE512	XMEM2.EXE	M1-UN-DP48	
SST	SST29VF020	XMEM2.EXE	M1-UN-DP48	
SST	SST29VF040	XMEM2.EXE	M1-UN-DP48	
SST	SST31LF021	XMEM2.EXE	M1-UN-DP48	
SST	SST31LF041	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SST	SST32HF164-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST32HF1642C-LS	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST32HF202-L3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST32HF3282C-LS	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST32HF402-L3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST32HF64A2-L2S	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST32HF802-L3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST34HF1601B-B1P	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1601B-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST34HF1621-LFP	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1621A-LFP	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1621S-L1P	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1641-LFP	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1641A-LFP	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1641C-L1P	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1641J-LS	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF1681J-LSE	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF3244C-LS	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF32A4-L1PE	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST34HF32A4-LSE	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST36LF1601-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36LF1601C-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF1601-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST36VF1601C-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF1601E-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST36VF1601E-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF1601E-EKE	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF1602C-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF1602E-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST36VF1602E-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST36VF1602E-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF3203-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST36VF3204-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST37VF010	XMEM2.EXE	M1-UN-DP48	
SST	SST37VF020	XMEM2.EXE	M1-UN-DP48	
SST	SST37VF040	XMEM2.EXE	M1-UN-DP48	
SST	SST37VF512	XMEM2.EXE	M1-UN-DP48	
SST	SST38VF166-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST38VF6401-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST38VF6401-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST38VF6401B-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST38VF6402-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST38VF6402-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST38VF6403-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST38VF6404-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST38VF6404-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39LF010	XMEM2.EXE	M1-UN-DP48	
SST	SST39LF020	XMEM2.EXE	M1-UN-DP48	
SST	SST39LF020-B3K	XMEM2.EXE	M1-UN-BG68	TOP-49B1614A-BG48
SST	SST39LF040	XMEM2.EXE	M1-UN-DP48	
SST	SST39LF040-B3K	XMEM2.EXE	M1-UN-BG68	TOP-49B1614A-BG48
SST	SST39LF080-EI	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SST	SST39LF100	XMEM2.EXE	M1-UN-DP48	
SST	SST39LF160-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39LF200A-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39LF400A-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39LF400A-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39LF512	XMEM2.EXE	M1-UN-DP48	
SST	SST39LF800A-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39LF800A-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39SF010	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF010A	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SST	SST39SF020	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF020A	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF020P	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF040	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF040P	XMEM2.EXE	M1-UN-DP48	
SST	SST39SF512	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF010	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF010-B3K	XMEM2.EXE	M1-UN-BG68	TOP-49B1614A-BG48
SST	SST39VF016-EI	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SST	SST39VF016Q-EI	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SST	SST39VF020	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF020-B3K	XMEM2.EXE	M1-UN-BG68	TOP-49B1614A-BG48
SST	SST39VF020P	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF040	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF040P	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF080-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF080-EI	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SST	SST39VF080Q-EI	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
SST	SST39VF088-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF100	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF160-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF160-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF1601-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF1601-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF1601-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF1601C-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF1602-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF1602-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF1602C-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF160Q-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF1681-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF1681-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF1682-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF200A-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF200A-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF320-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF3201-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF3201-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF3201-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF3201-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF3201B-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF3201B-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF3201C-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF3202-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF3202-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF400A-B2K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF400A-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF400A-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF400A-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF512	XMEM2.EXE	M1-UN-DP48	
SST	SST39VF6401-B1K	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF6401-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF6401B-B1K	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF6401B-B1KE	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF6401B-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF6401B-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF6402-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF6402B-B1K	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF6402B-B1KE	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF6402B-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF6402B-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39VF800-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SST	SST39VF800A-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF800A-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39VF800A-BK	XA28F2.EXE	M1-UN-BG68/A	TOP-36VF160-BG48/A
SST	SST39VF800A-EK	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SST	SST39VF800A-EKE	XA28F2.EXE	M1-UN-TS48A/TS56	
SST	SST39WF1601-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39WF1602-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39WF400A-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39WF400A-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39WF800A-B3K	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST39WF800B-B3KE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
SST	SST49LF002A	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF002B	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF003A	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF003B	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004A(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004A(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004B(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004B(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004C(PLCC)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF004C(TSOP)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF008A(40Pin)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF008A(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF008A(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF008C(PLCC)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF008C(TSOP)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF016C(40pin)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF016C(PLCC)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF016C(TSOP)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF020	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF020A	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF030A	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF040	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF040A	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF040B(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF040B(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF080A(PLCC32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF080A(TSOP32)	XMEM2.EXE	M1-UN-DP48	
SST	SST49LF160C(PLCC)	XMEM2.EXE	M1-UN-DP48	
SST	SST25LF020A	XSPROM.EXE	M1-UN-DP48	
SST	SST25LF040A	XSPROM.EXE	M1-UN-DP48	
SST	SST25LF080A	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF010	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF010A	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF016B	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF020	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF020B	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF032B	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF032B(SOP16)	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF040	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF040B	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF064C	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF064C(SOP16)	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF080B	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF512	XSPROM.EXE	M1-UN-DP48	
SST	SST25VF512A	XSPROM.EXE	M1-UN-DP48	
SST	SST25WF010	XSPROM.EXE	M1-UN-DP48	
SST	SST25WF020	XSPROM.EXE	M1-UN-DP48	
SST	SST25WF040	XSPROM.EXE	M1-UN-DP48	
SST	SST25WF080	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SST	SST25WF512	XSPROM.EXE	M1-UN-DP48	
SST	SST26VF064B	XSPROM.EXE	M1-UN-DP48	
SST	SST26VF064BA	XSPROM.EXE	M1-UN-DP48	
SST	SST45LF010	XSPROM.EXE	M1-UN-DP48	
SST	SST45VF010	XSPROM.EXE	M1-UN-DP48	
SST	SST89C54	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89C58	XPGM52.EXE	M1-UN-DP48	
SST	SST89C58RC	XPGM52.EXE	M1-UN-DP48	
SST	SST89E516M	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E516RD(DIP40)	XPGM52.EXE	M1-UN-DP48	
SST	SST89E516RD(WQFN40)	XPGM52.EXE	M1-UN-ML40	
SST	SST89E516RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E52RC	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E52RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89E52RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E54RC	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E54RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89E54RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E554RC	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E564RD	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E58RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89E58RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89E58RD2A	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89F54	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89F58	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V516RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89V516RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V52RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89V52RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V54RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89V54RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V554RC	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V564RD	XPGM52.EXE	M1-UN-DP48/PL44	
SST	SST89V58RD	XPGM52.EXE	M1-UN-DP48	
SST	SST89V58RD2	XPGM52.EXE	M1-UN-DP48/PL44	
SST	W65P542R	XST62.EXE	M1-UN-DP48	
STM	2764A	XMEM1.EXE	M1-UN-DP48	
STM	27C64A	XMEM1.EXE	M1-UN-DP48	
STM	M27128A	XMEM1.EXE	M1-UN-DP48	
STM	M2716(25V)	XMEM1.EXE	M1-UN-DP48	
STM	M27256	XMEM1.EXE	M1-UN-DP48	
STM	M2732A(21V)	XMEM1.EXE	M1-UN-DP48	
STM	M27512	XMEM1.EXE	M1-UN-DP48	
STM	M27C1000	XMEM1.EXE	M1-UN-DP48	
STM	M27C1001	XMEM1.EXE	M1-UN-DP48	
STM	M27C1024	XMEM1.EXE	M1-UN-DP48	
STM	M27C128A	XMEM1.EXE	M1-UN-DP48	
STM	M27C160	XAEP42.EXE	M1-UN-DP48	
STM	M27C2001	XMEM1.EXE	M1-UN-DP48	
STM	M27C202	XMEM1.EXE	M1-UN-DP48	
STM	M27C256B	XMEM1.EXE	M1-UN-DP48	
STM	M27C320(SOP44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PS
STM	M27C322	XAEP42.EXE	M1-UN-DP48	
STM	M27C322(SD42)	XAEP42.EXE	M1-UN-SD42	
STM	M27C400	XMEM1.EXE	M1-UN-DP48	
STM	M27C4001	XMEM1.EXE	M1-UN-DP48	
STM	M27C4002	XMEM1.EXE	M1-UN-DP48	
STM	M27C512	XMEM1.EXE	M1-UN-DP48	
STM	M27C516	XMEM1.EXE	M1-UN-DP48	
STM	M27C800	XAEP42.EXE	M1-UN-DP48	
STM	M27C801	XMEM1.EXE	M1-UN-DP48	
STM	M27V101	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M27V102	XMEM1.EXE	M1-UN-DP48	
STM	M27V160	XAEP42.EXE	M1-UN-DP48	
STM	M27V160(PL44)	XAEP42.EXE	M1-UN-DP48	ADP-EP42-PL
STM	M27V201	XMEM1.EXE	M1-UN-DP48	
STM	M27V256	XMEM1.EXE	M1-UN-DP48	
STM	M27V322	XAEP42.EXE	M1-UN-DP48	
STM	M27V401	XMEM1.EXE	M1-UN-DP48	
STM	M27V402	XMEM1.EXE	M1-UN-DP48	
STM	M27V512	XMEM1.EXE	M1-UN-DP48	
STM	M27V800	XAEP42.EXE	M1-UN-DP48	
STM	M27W016	XAEP42.EXE	M1-UN-TS48	
STM	M27W032	XAEP42.EXE	M1-UN-TS48	
STM	M27W064	XAEP42.EXE	M1-UN-TS48	
STM	M27W101	XMEM1.EXE	M1-UN-DP48	
STM	M27W102	XMEM1.EXE	M1-UN-DP48	
STM	M27W201	XMEM1.EXE	M1-UN-DP48	
STM	M27W401	XMEM1.EXE	M1-UN-DP48	
STM	M27W402	XMEM1.EXE	M1-UN-DP48	
STM	M27W512	XMEM1.EXE	M1-UN-DP48	
STM	M27W801	XMEM1.EXE	M1-UN-DP48	
STM	M87C257	XMEM1.EXE	M1-UN-DP48	
STM	M87C512	XMEM1.EXE	M1-UN-DP48	
STM	TS2764(21V)	XMEM1.EXE	M1-UN-DP48	
STM	TS27C64A	XMEM1.EXE	M1-UN-DP48	
STM	M26C201	XMEM2.EXE	M1-UN-DP48	
STM	M28256	XMEM2.EXE	M1-UN-DP48	
STM	M28C17	XMEM2.EXE	M1-UN-DP48	
STM	M28C64C	XMEM2.EXE	M1-UN-DP48	
STM	M28F101	XMEM2.EXE	M1-UN-DP48	
STM	M28F102	XMEM2.EXE	M1-UN-DP48	
STM	M28F211-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M28F220-M	XA28F2.EXE	M1-UN-PS44	
STM	M28F220-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28F256	XMEM2.EXE	M1-UN-DP48	
STM	M28F410-M	XA28F2.EXE	M1-UN-PS44	
STM	M28F411-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M28F420-M	XA28F2.EXE	M1-UN-PS44	
STM	M28F512	XMEM2.EXE	M1-UN-DP48	
STM	M28W160B-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W160BT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W160BT-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W160CB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W160CB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W160CT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W160ECB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W160T-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W320CB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W320CT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W320ECB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320ECT-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320FCB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320FCT-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320FSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320FST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320FSU-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320HSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320HSB-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320HST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320HST-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W320HSU-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W320HSU-ZB	XA28F2.EXE	M1-UN-BG68/A	TOP-M28W320-BG48/A
STM	M28W640ECB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M28W640ECT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W640FCB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W640FCT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W640FSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W640FST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W640FSU-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W640HSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W640HSU-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M28W800BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W800BT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W800CB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M28W800CT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW128F-NF	XA28F2.EXE	M1-UN-TS56	
STM	M29DW128G-NF	XA28F2.EXE	M1-UN-TS56	
STM	M29DW323DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW323DB-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29DW323DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW323DT-ZA	XA28F2.EXE	M1-UN-BG68	TOP-M29DW32X-BG63
STM	M29DW323DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29DW324DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW324DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW640D-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29DW640D-ZA	XA28F2.EXE	M1-UN-BG68	TOP-M29DW32X-BG63
STM	M29F002B	XMEM2.EXE	M1-UN-DP48	
STM	M29F002BB	XMEM2.EXE	M1-UN-DP48	
STM	M29F002BT	XMEM2.EXE	M1-UN-DP48	
STM	M29F002NT	XMEM2.EXE	M1-UN-DP48	
STM	M29F002T	XMEM2.EXE	M1-UN-DP48	
STM	M29F010B	XMEM2.EXE	M1-UN-DP48	
STM	M29F016D-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29F032D-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29F040	XMEM2.EXE	M1-UN-DP48	
STM	M29F040B	XMEM2.EXE	M1-UN-DP48	
STM	M29F080A-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29F080D-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29F100B-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F100T-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F102B	XMEM2.EXE	M1-UN-DP48	
STM	M29F102BB	XMEM2.EXE	M1-UN-DP48	
STM	M29F200B-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F200B-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F200BB-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F200BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F200T-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F200T-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F400B-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F400B-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F400BB-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F400BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F400BT-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F400BT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F400T-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F400T-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F800AB-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F800AB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F800AT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F800DB-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F800DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29F800DT-M	XA28F2.EXE	M1-UN-PS44	
STM	M29F800DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29KW016E-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29KW032E-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M29KW064E-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W004B-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W004BB-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W004BT-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W004T-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008AB-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008AT-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008B-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008DB-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008EB-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W008T-N	XA28F2.EXE	M1-UN-DP48/TS48/TS48A/TS56	
STM	M29W010B	XMEM2.EXE	M1-UN-DP48	
STM	M29W040	XMEM2.EXE	M1-UN-DP48	
STM	M29W040B	XMEM2.EXE	M1-UN-DP48	
STM	M29W102BB	XMEM2.EXE	M1-UN-DP48	
STM	M29W102BT	XMEM2.EXE	M1-UN-DP48	
STM	M29W128FH-N	XA28F2.EXE	M1-UN-TS56	
STM	M29W128FH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M29W128FL-N	XA28F2.EXE	M1-UN-TS56	
STM	M29W128GH-N	XA28F2.EXE	M1-UN-TS56	
STM	M29W128GH-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M29W128GH-ZS	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
STM	M29W128GL-N	XA28F2.EXE	M1-UN-TS56	
STM	M29W128GL-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M29W160BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W160DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W160DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W160DT-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
STM	M29W160EB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W160EB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W160ET-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W160ET-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W200BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W320DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W320DB-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W320DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W320EB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W320EB-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W320ET-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W320ET-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W400B-M	XA28F2.EXE	M1-UN-PS44	
STM	M29W400B-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W400BB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W400BT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W400DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W400DB-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W400DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W400DT-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W400T-M	XA28F2.EXE	M1-UN-PS44	
STM	M29W400T-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W512B	XMEM2.EXE	M1-UN-DP48	
STM	M29W640DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W640DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W640FB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W640FB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W640FT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W640GB-NA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W640GH-NB	XA28F2.EXE	M1-UN-TS56	
STM	M29W640GT-NA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W800AB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W800AT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W800B-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M29W800DB-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W800DB-ZE	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
STM	M29W800DT-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M29W800DT-ZA	XA28F2.EXE	M1-UN-BG68	TOP-K8D6316-BG48
STM	M29W800T-N	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
STM	M30LW128D-N	XA28F2.EXE	M1-UN-TS56	
STM	M30LW128D-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M36L0T7050T3-ZAQ	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
STM	M36W0R6050T-ZAQE	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
STM	M36W0T5040T-ZA	XA28F2.EXE	M1-UN-BG68	TOP-PF38FXXX-BG88
STM	M48T02	XMEM2.EXE	M1-UN-DP48	
STM	M48T08	XMEM2.EXE	M1-UN-DP48	
STM	M48T128Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T129V	XMEM2.EXE	M1-UN-DP48	
STM	M48T129Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T18	XMEM2.EXE	M1-UN-DP48	
STM	M48T35/Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T35AV	XMEM2.EXE	M1-UN-DP48	
STM	M48T512Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T58Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T59Y	XMEM2.EXE	M1-UN-DP48	
STM	M48T86	XMEM2.EXE	M1-UN-DP48	
STM	M48Z02	XMEM2.EXE	M1-UN-DP48	
STM	M48Z129V	XMEM2.EXE	M1-UN-DP48	
STM	M48Z35/Y	XMEM2.EXE	M1-UN-DP48	
STM	M48Z512AY	XMEM2.EXE	M1-UN-DP48	
STM	M48Z58Y	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW040A(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW040A(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW040B(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW080A(32pin)	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW080A(40pin)	XMEM2.EXE	M1-UN-DP48	
STM	M50FLW080B(32pin)	XMEM2.EXE	M1-UN-DP48	
STM	M50FW002	XMEM2.EXE	M1-UN-DP48	
STM	M50FW016(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M50FW020	XMEM2.EXE	M1-UN-DP48	
STM	M50FW040(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50FW040(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M50FW080(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50FW080(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW002	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW012	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW020	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW040(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW041	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW080(PLCC)	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW080(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M50LPW116(TSOP)	XMEM2.EXE	M1-UN-DP48	
STM	M58BW016DB-T	XA28F2.EXE	M1-FLASH-PQ80	
STM	M58LT128GSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT128GST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT128HSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT128HST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT128KSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT128KST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT256JSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT256JST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT256KSB-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LT256KST-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LW032A-N	XA28F2.EXE	M1-UN-TS56	
STM	M58LW032A-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LW032C-N	XA28F2.EXE	M1-UN-TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M58LW032C-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LW032D-N	XA28F2.EXE	M1-UN-TS56	
STM	M58LW032D-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LW064D-N	XA28F2.EXE	M1-UN-TS56	
STM	M58LW064D-ZA	XA28F2.EXE	M1-UN-BG68/A	TOP-28F128K3-BG64/A
STM	M58LW128A-N	XA28F2.EXE	M1-UN-TS56	
STM	M59PW064-M	XA28F2.EXE	M1-UN-PS44	
STM	M74DW66500B-Z	XA28F2.EXE	M1-UN-BG68	TOP-41DL1644-BG69
STM	M24128	XSPROM.EXE	M1-UN-DP48	
STM	M24128A	XSPROM.EXE	M1-UN-DP48	
STM	M24128B	XSPROM.EXE	M1-UN-DP48	
STM	M24256	XSPROM.EXE	M1-UN-DP48	
STM	M24256-A	XSPROM.EXE	M1-UN-DP48	
STM	M24256-B	XSPROM.EXE	M1-UN-DP48	
STM	M24256-D	XSPROM.EXE	M1-UN-DP48	
STM	M24256-W	XSPROM.EXE	M1-UN-DP48	
STM	M24512	XSPROM.EXE	M1-UN-DP48	
STM	M24512-D	XSPROM.EXE	M1-UN-DP48	
STM	M24C01	XSPROM.EXE	M1-UN-DP48	
STM	M24C02	XSPROM.EXE	M1-UN-DP48	
STM	M24C04	XSPROM.EXE	M1-UN-DP48	
STM	M24C08	XSPROM.EXE	M1-UN-DP48	
STM	M24C16	XSPROM.EXE	M1-UN-DP48	
STM	M24C32	XSPROM.EXE	M1-UN-DP48	
STM	M24C64	XSPROM.EXE	M1-UN-DP48	
STM	M24LR04E-R	XSPROM.EXE	M1-UN-DP48	
STM	M24LR16E-R	XSPROM.EXE	M1-UN-DP48	
STM	M24LR64-R	XSPROM.EXE	M1-UN-DP48	
STM	M24LR64E-R	XSPROM.EXE	M1-UN-DP48	
STM	M24M01	XSPROM.EXE	M1-UN-DP48	
STM	M24M02-D	XSPROM.EXE	M1-UN-DP48	
STM	M25P05	XSPROM.EXE	M1-UN-DP48	
STM	M25P05-A	XSPROM.EXE	M1-UN-DP48	
STM	M25P10	XSPROM.EXE	M1-UN-DP48	
STM	M25P10-A	XSPROM.EXE	M1-UN-DP48	
STM	M25P128(MLP8)	XSPROM.EXE	M1-UN-DP48	
STM	M25P128(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25P16(MLP8)	XSPROM.EXE	M1-UN-DP48	
STM	M25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25P16(SOP8)	XSPROM.EXE	M1-UN-DP48	
STM	M25P20	XSPROM.EXE	M1-UN-DP48	
STM	M25P32	XSPROM.EXE	M1-UN-DP48	
STM	M25P32(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25P40	XSPROM.EXE	M1-UN-DP48	
STM	M25P64(MLP8)	XSPROM.EXE	M1-UN-DP48	
STM	M25P64(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25P80	XSPROM.EXE	M1-UN-DP48	
STM	M25P80(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25PE10	XSPROM.EXE	M1-UN-DP48	
STM	M25PE16	XSPROM.EXE	M1-UN-DP48	
STM	M25PE20	XSPROM.EXE	M1-UN-DP48	
STM	M25PE40	XSPROM.EXE	M1-UN-DP48	
STM	M25PE80	XSPROM.EXE	M1-UN-DP48	
STM	M25PX32	XSPROM.EXE	M1-UN-DP48	
STM	M25PX32(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M25PX64	XSPROM.EXE	M1-UN-DP48	
STM	M34A02	XSPROM.EXE	M1-UN-DP48	
STM	M34C02	XSPROM.EXE	M1-UN-DP48	
STM	M35080	XSPROM.EXE	M1-UN-DP48	
STM	M35160	XSPROM.EXE	M1-UN-DP48	
STM	M35560P	XSPROM.EXE	M1-UN-DP48	
STM	M45PE10	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	M45PE16	XSPROM.EXE	M1-UN-DP48	
STM	M45PE20	XSPROM.EXE	M1-UN-DP48	
STM	M45PE40	XSPROM.EXE	M1-UN-DP48	
STM	M45PE80	XSPROM.EXE	M1-UN-DP48	
STM	M45PE80(SOP16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C46(128*8)	XSPROM.EXE	M1-UN-DP48	
STM	M93C46(64*16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
STM	M93C66(256*16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
STM	M93C76(1024*8)	XSPROM.EXE	M1-UN-DP48	
STM	M93C76(512*16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C86(1024*16)	XSPROM.EXE	M1-UN-DP48	
STM	M93C86(2048*8)	XSPROM.EXE	M1-UN-DP48	
STM	M93S46	XSPROM.EXE	M1-UN-DP48	
STM	M93S56	XSPROM.EXE	M1-UN-DP48	
STM	M93S66	XSPROM.EXE	M1-UN-DP48	
STM	M95010	XSPROM.EXE	M1-UN-DP48	
STM	M95020	XSPROM.EXE	M1-UN-DP48	
STM	M95040	XSPROM.EXE	M1-UN-DP48	
STM	M95080	XSPROM.EXE	M1-UN-DP48	
STM	M95128	XSPROM.EXE	M1-UN-DP48	
STM	M95160	XSPROM.EXE	M1-UN-DP48	
STM	M95256	XSPROM.EXE	M1-UN-DP48	
STM	M95256-D	XSPROM.EXE	M1-UN-DP48	
STM	M95320	XSPROM.EXE	M1-UN-DP48	
STM	M95320-D	XSPROM.EXE	M1-UN-DP48	
STM	M95512	XSPROM.EXE	M1-UN-DP48	
STM	M95512-D	XSPROM.EXE	M1-UN-DP48	
STM	M95640	XSPROM.EXE	M1-UN-DP48	
STM	M95640-D	XSPROM.EXE	M1-UN-DP48	
STM	M95M01	XSPROM.EXE	M1-UN-DP48	
STM	M95M02-D	XSPROM.EXE	M1-UN-DP48	
STM	ST24128	XSPROM.EXE	M1-UN-DP48	
STM	ST24256	XSPROM.EXE	M1-UN-DP48	
STM	ST24C01	XSPROM.EXE	M1-UN-DP48	
STM	ST24C02	XSPROM.EXE	M1-UN-DP48	
STM	ST24C02A	XSPROM.EXE	M1-UN-DP48	
STM	ST24C04/ST25C04	XSPROM.EXE	M1-UN-DP48	
STM	ST24C04C/ST25C04C	XSPROM.EXE	M1-UN-DP48	
STM	ST24C08	XSPROM.EXE	M1-UN-DP48	
STM	ST24C16/ST24W16	XSPROM.EXE	M1-UN-DP48	
STM	ST24C32	XSPROM.EXE	M1-UN-DP48	
STM	ST24C64	XSPROM.EXE	M1-UN-DP48	
STM	ST24E16	XSPROM.EXE	M1-UN-DP48	
STM	ST24E32	XSPROM.EXE	M1-UN-DP48	
STM	ST24E64D	XSPROM.EXE	M1-UN-DP48	
STM	ST24FC21	XSPROM.EXE	M1-UN-DP48	
STM	ST24FW21	XSPROM.EXE	M1-UN-DP48	
STM	ST24LC21	XSPROM.EXE	M1-UN-DP48	
STM	ST24LC21B	XSPROM.EXE	M1-UN-DP48	
STM	ST24LW21	XSPROM.EXE	M1-UN-DP48	
STM	ST24W04C/ST25W04C	XSPROM.EXE	M1-UN-DP48	
STM	ST25C02A	XSPROM.EXE	M1-UN-DP48	
STM	ST25C08	XSPROM.EXE	M1-UN-DP48	
STM	ST25E64D	XSPROM.EXE	M1-UN-DP48	
STM	ST93C46A(128*8)	XSPROM.EXE	M1-UN-DP48	
STM	ST93C46A(64*16)	XSPROM.EXE	M1-UN-DP48	
STM	ST93C56(128*16)	XSPROM.EXE	M1-UN-DP48	
STM	ST93C56(256*8)	XSPROM.EXE	M1-UN-DP48	
STM	ST93C66(256*16)	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	ST93C66(512*8)	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS46	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS47	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS56	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS57	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS66	XSPROM.EXE	M1-UN-DP48	
STM	ST93CS67	XSPROM.EXE	M1-UN-DP48	
STM	ST95010	XSPROM.EXE	M1-UN-DP48	
STM	ST95020	XSPROM.EXE	M1-UN-DP48	
STM	ST95022	XSPROM.EXE	M1-UN-DP48	
STM	ST95040	XSPROM.EXE	M1-UN-DP48	
STM	ST95160	XSPROM.EXE	M1-UN-DP48	
STM	ST95P02	XSPROM.EXE	M1-UN-DP48	
STM	ST95P04	XSPROM.EXE	M1-UN-DP48	
STM	ST95P08	XSPROM.EXE	M1-UN-DP48	
STM	STTS2002	XSPROM.EXE	M1-UN-DP48	
STM	STTS424E02	XSPROM.EXE	M1-UN-DP48	
STM	DSM2150F5V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD835G-TQ80
STM	DSM2180F3	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	DSM2180F3V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	DSM2190F4V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8803F2W	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8803F2Y	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8803F3W	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8803F3Y	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8813F2W	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8813F2Y	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8813F3W	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	M8813F3Y	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
STM	PSD301B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	PSD312B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	PSD313B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	PSD4235G2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD835G-TQ80
STM	PSD834F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52
STM	PSD835G2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD835G-TQ80
STM	PSD854F2(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-Q52
STM	PSD854F2V*	XAPSD4.EXE	M1-PSD8XX-QF52	
STM	ST62E00	XST62.EXE	M1-UN-DP48	
STM	ST62E00C	XST62.EXE	M1-UN-DP48	
STM	ST62E01	XST62.EXE	M1-UN-DP48	
STM	ST62E01C	XST62.EXE	M1-UN-DP48	
STM	ST62E03	XST62.EXE	M1-UN-DP48	
STM	ST62E03C	XST62.EXE	M1-UN-DP48	
STM	ST62E08C	XST62.EXE	M1-UN-DP48	
STM	ST62E09	XST62.EXE	M1-UN-DP48	
STM	ST62E09C	XST62.EXE	M1-UN-DP48	
STM	ST62E10	XST62.EXE	M1-UN-DP48	
STM	ST62E10C	XST62.EXE	M1-UN-DP48	
STM	ST62E15	XST62.EXE	M1-UN-DP48	
STM	ST62E15C	XST62.EXE	M1-UN-DP48	
STM	ST62E18C	XST62.EXE	M1-UN-DP48	
STM	ST62E20	XST62.EXE	M1-UN-DP48	
STM	ST62E20C	XST62.EXE	M1-UN-DP48	
STM	ST62E25	XST62.EXE	M1-UN-DP48	
STM	ST62E25C	XST62.EXE	M1-UN-DP48	
STM	ST62E28C	XST62.EXE	M1-UN-DP48	
STM	ST62E30B	XST62.EXE	M1-UN-DP48	
STM	ST62E32B(SDIP42)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-SD
STM	ST62E35B(QFP52)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-Q
STM	ST62E40(QFP80)	XST62.EXE	M1-UN-DP48	ADP-ST6240-Q
STM	ST62E40B(QFP80)	XST62.EXE	M1-UN-DP48	ADP-ST62T42-Q
STM	ST62E42B(QFP64)	XST62.EXE	M1-UN-DP48	ADP-ST62T42-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	ST62E45B(QFP52)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-Q
STM	ST62E52C	XST62.EXE	M1-UN-DP48	
STM	ST62E53B	XST62.EXE	M1-UN-DP48	
STM	ST62E53C	XST62.EXE	M1-UN-DP48	
STM	ST62E55C	XST62.EXE	M1-UN-DP48	
STM	ST62E60	XST62.EXE	M1-UN-DP48	
STM	ST62E60B	XST62.EXE	M1-UN-DP48	
STM	ST62E60C	XST62.EXE	M1-UN-DP48	
STM	ST62E62B	XST62.EXE	M1-UN-DP48	
STM	ST62E62C	XST62.EXE	M1-UN-DP48	
STM	ST62E63B	XST62.EXE	M1-UN-DP48	
STM	ST62E63C	XST62.EXE	M1-UN-DP48	
STM	ST62E65B	XST62.EXE	M1-UN-DP48	
STM	ST62E65C	XST62.EXE	M1-UN-DP48	
STM	ST62E80B(QFP100)	XST62.EXE	M1-UN-DP48	ADP-ST62T80-Q
STM	ST62T00	XST62.EXE	M1-UN-DP48	
STM	ST62T00C	XST62.EXE	M1-UN-DP48	
STM	ST62T01	XST62.EXE	M1-UN-DP48	
STM	ST62T01C	XST62.EXE	M1-UN-DP48	
STM	ST62T03	XST62.EXE	M1-UN-DP48	
STM	ST62T03C	XST62.EXE	M1-UN-DP48	
STM	ST62T08C	XST62.EXE	M1-UN-DP48	
STM	ST62T09	XST62.EXE	M1-UN-DP48	
STM	ST62T09C	XST62.EXE	M1-UN-DP48	
STM	ST62T10	XST62.EXE	M1-UN-DP48	
STM	ST62T10C	XST62.EXE	M1-UN-DP48	
STM	ST62T15	XST62.EXE	M1-UN-DP48	
STM	ST62T15C	XST62.EXE	M1-UN-DP48	
STM	ST62T18C	XST62.EXE	M1-UN-DP48	
STM	ST62T20	XST62.EXE	M1-UN-DP48	
STM	ST62T20C	XST62.EXE	M1-UN-DP48	
STM	ST62T25	XST62.EXE	M1-UN-DP48	
STM	ST62T25C	XST62.EXE	M1-UN-DP48	
STM	ST62T28C	XST62.EXE	M1-UN-DP48	
STM	ST62T30B	XST62.EXE	M1-UN-DP48	
STM	ST62T32B(QFP52)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-Q
STM	ST62T32B(SDIP42)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-SD
STM	ST62T35B(QFP52)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-Q
STM	ST62T40(QFP80)	XST62.EXE	M1-UN-DP48	ADP-ST6240-Q
STM	ST62T40B(QFP80)	XST62.EXE	M1-UN-DP48	ADP-ST62T42-Q
STM	ST62T42B(QFP64)	XST62.EXE	M1-UN-DP48	ADP-ST62T42-Q
STM	ST62T45B(QFP52)	XST62.EXE	M1-UN-DP48	ADP-ST62T32-Q
STM	ST62T52C	XST62.EXE	M1-UN-DP48	
STM	ST62T53B	XST62.EXE	M1-UN-DP48	
STM	ST62T53C	XST62.EXE	M1-UN-DP48	
STM	ST62T55C	XST62.EXE	M1-UN-DP48	
STM	ST62T60	XST62.EXE	M1-UN-DP48	
STM	ST62T60B	XST62.EXE	M1-UN-DP48	
STM	ST62T60C	XST62.EXE	M1-UN-DP48	
STM	ST62T62B	XST62.EXE	M1-UN-DP48	
STM	ST62T62C	XST62.EXE	M1-UN-DP48	
STM	ST62T63B	XST62.EXE	M1-UN-DP48	
STM	ST62T63C	XST62.EXE	M1-UN-DP48	
STM	ST62T65B	XST62.EXE	M1-UN-DP48	
STM	ST62T65C	XST62.EXE	M1-UN-DP48	
STM	ST62T80B(QFP100)	XST62.EXE	M1-UN-DP48	ADP-ST62T80-Q
STM	ST72C215G2	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32/SO28
STM	ST72C216G1	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32/SO28
STM	ST72C334J2	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72C334J4Bx	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72C334J4Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-Q44
STM	ST72C334N2	XAST72.EXE	M1-UN-DP48	ADP-ST72C334-TQ64/SD56

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	ST72C334N4	XAST72.EXE	M1-UN-DP48	ADP-ST72C334-TQ64/SD56
STM	ST72F260G1M6	XAST72.EXE	M1-UN-DP48	ADP-ST72F26X-S28
STM	ST72F262G1M6	XAST72.EXE	M1-UN-DP48	ADP-ST72F26X-S28
STM	ST72F264G1	XAST72.EXE	M1-UN-DP48	ADP-ST72F26X-S28
STM	ST72F264G2	XAST72.EXE	M1-UN-DP48	ADP-ST72F26X-S28
STM	ST72F321AR6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521AR-Q64
STM	ST72F321AR9Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521AR-Q64
STM	ST72F321BR9Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521R-Q64
STM	ST72F321J7	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F321J9	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F321R6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521R-Q64
STM	ST72F321R9Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521R-Q64
STM	ST72F324BJ4Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F324BJ6Bx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-SD42
STM	ST72F324BJ6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F324BK4Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72F324BK6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72F324J4	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44/SD42
STM	ST72F324J6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F324K2	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72F324K4	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72F324K6	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72F324LJ6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q44
STM	ST72F325AR9	XAST72.EXE	M1-UN-DP48	ADP-ST72F521AR-Q64
STM	ST72F361K9	XAST72.EXE	M1-ST72F561-QF32	
STM	ST72F521R9	XAST72.EXE	M1-UN-DP48	ADP-ST72F521AR/R-Q64
STM	ST72F561AR9	XAST72.EXE	M1-UN-DP48	ADP-ST72F561AR-Q64
STM	ST72F561J6	XAST72.EXE	M1-UN-DP48	ADP-ST72T561-Q44
STM	ST72F561K6Tx	XAST72.EXE	M1-ST72F561-QF32	
STM	ST72F60K2U1	XAST72.EXE	M1-UN-DP48	ADP-ST72F60KX-MLF40
STM	ST72F621J4	XAST72.EXE	M1-UN-DP48	ADP-ST72F62X-QF44
STM	ST72F621K4	XAST72.EXE	M1-UN-DP48	ADP-ST72F62X-SD32
STM	ST72F621L4	XAST72.EXE	M1-UN-DP48	ADP-ST72F62X-SO34
STM	ST72F63BK2Ux	XAST72.EXE	M1-UN-DP48	ADP-ST72F60KX-MLF40
STM	ST72F63BK4M1	XAST72.EXE	M1-UN-DP48	ADP-ST72F63B-SO34
STM	ST72F63BK6M1	XAST72.EXE	M1-UN-DP48	ADP-ST72F63B-SO34
STM	ST72P324BK4Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F324-Q32
STM	ST72T101G1	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32
STM	ST72T101G2	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32
STM	ST72T121J4	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72T212G2	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32
STM	ST72T213G1	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32
STM	ST72T251G1	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32
STM	ST72T251G2	XAST72.EXE	M1-UN-DP48	ADP-ST72C215-SD32/SO28
STM	ST72T311J2	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72T311J4	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72T331J2	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST72T331J4	XAST72.EXE	M1-UN-DP48	ADP-ST72T311-SD42
STM	ST7FAUDIOAR9Tx	XAST72.EXE	M1-UN-DP48	ADP-ST72F521AR-Q64
STM	ST7FDALIF2M6	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-SO20
STM	ST7FLITE05B6	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE0X-DP16
STM	ST7FLITE05M6	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE0X-S16
STM	ST7FLITE05M6*	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FLITE09M6	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE0X-S16
STM	ST7FLITE09M6*	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FLITE15BF1	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-SO20
STM	ST7FLITE15BY1	XAST72.EXE	M1-UN-DP48	ADP-ST7FLIT15BY-SO16
STM	ST7FLITE19BF1	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-DP20/SO20
STM	ST7FLITE25F2M6	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-SO20
STM	ST7FLITE29F2Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-SO20
STM	ST7FLITE39	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE3X-DP20/SO20
STM	ST7FLITES2Y0Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITE0X-S16

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	ST7FLITES2Y0Mx*	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FLITES5Y0Bx	XAST72.EXE	M1-UN-DP48	ADP-ST72FLITE0X-DP16
STM	ST7FLITEU05Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FLITEU05Mx*	XAST72.EXE	M1-ST7FLITEXX-SO16	
STM	ST7FLITEU09Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FLITEU09Mx*	XAST72.EXE	M1-ST7FLITEXX-SO16	
STM	ST7FLITEUS2Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FMC2S4Tx(LQFP44)	XAST72.EXE	M1-UN-DP48	ADP-ST7FMCX-Q44
STM	ST7FMC2S6Tx	XAST72.EXE	M1-UN-DP48	ADP-ST7FMCX-Q44
STM	ST7FOXA0Mx	XAST72.EXE	M1-UN-DP48	ADP-ST7FLITEXX-S16
STM	ST7FOXA0Mx*	XAST72.EXE	M1-ST7FLITEXX-SO16	
STM	ST7FOXK1Tx	XAST72.EXE	M1-UN-DP48	ADP-ST7FOXKX-Q32
STM	ST7FOXK2Tx	XAST72.EXE	M1-UN-DP48	ADP-ST7FOXKX-Q32
STM	ST92T163R4T1(QFP64)	XAST9.EXE	M1-UN-DP48	ADP-ST92T163-Q64
STM	ST92T163R4T1E(QFP64)	XAST9.EXE	M1-UN-DP48	ADP-ST92T163-Q64
STM	ST92T163R4T1L(QFP64)	XAST9.EXE	M1-UN-DP48	ADP-ST92T163-Q64
STM	STM32F030C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F030F4Px(TSSOP20)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F03XF-TSS20
STM	STM32F031C4Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F050C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F051C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F051C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F051R8Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F100C4Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F100C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F100C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F100CBTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F100VCTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F100ZETx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144/V2
STM	STM32F101C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F101C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F101CBTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F101R8Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F101RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F101RCTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F101RDTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F101T8Ux(VFQFPN36)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F103T-QFN36
STM	STM32F101VCTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F101VETx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F102C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F102C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F102CBTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F102R6Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F102R8Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F102RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103C4Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F103C6Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F103C8Tx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F103CBTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48/V2	
STM	STM32F103R6Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103R8Tx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103RCTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103RDTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103RETx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103RFTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F103T6Ux(VFQFPN36)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F103T-QFN36
STM	STM32F103T8Ux(VFQFPN36)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F103T-QFN36
STM	STM32F103TBUx(VFQFPN36)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F103T-QFN36
STM	STM32F103VBTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F103VCHx(BGA100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-BG100
STM	STM32F103VCTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	STM32F103VEHx(BGA100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-BG100
STM	STM32F103VETx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F103VGTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F103ZCHx(LFBGA144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-BG144
STM	STM32F103ZCTx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144/V2
STM	STM32F103ZDTx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144/V2
STM	STM32F103ZEHx(LFBGA144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-BG144
STM	STM32F103ZETx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144/V2
STM	STM32F103ZGTx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144/V2
STM	STM32F105RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F105RCTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F105VBTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F105VCTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F107RBTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F107RCTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64/V2
STM	STM32F107VCTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100/A/AV2
STM	STM32F205RCT6(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64V2
STM	STM32F205ZETx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144V2
STM	STM32F205ZGTx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144V2
STM	STM32F207VETx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100AV2
STM	STM32F207VGTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100AV2
STM	STM32F207ZETx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144V2
STM	STM32F215RGTx(LQFP64)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XR-QF64V2
STM	STM32F217ZETx(LQFP144)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XZ-QF144V2
STM	STM32F373CCTx(LQFP48)	XASTM32.EXE	M1-STM32F10XC-QF48V2	
STM	STM32F405VGTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100AV2
STM	STM32F415VGTx(LQFP100)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XV-QF100AV2
STM	STM32L100C6Ux(UFQFPN48)	XASTM32.EXE	M1-UN-DP48	ADP-STM32F10XC-QN48
STM	STM8AF5168T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8AF51AAT	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q80
STM	STM8AF5268T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8L052C6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q48
STM	STM8L151C8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q48
STM	STM8L151K4T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q32
STM	STM8L152C4T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q48
STM	STM8L152C6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q48
STM	STM8L152C8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8L-Q48
STM	STM8L152R8T	XASTM8.EXE	M1-STM8L-LQ64	
STM	STM8S003F3P	XASTM8.EXE	M1-UN-DP48	ADP-STM8-TS20
STM	STM8S003K3T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S005C6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8S005K6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S103F2P	XASTM8.EXE	M1-UN-DP48	ADP-STM8-TS20
STM	STM8S103F3P	XASTM8.EXE	M1-UN-DP48	ADP-STM8-TS20
STM	STM8S103K3T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S105C6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8S105K4T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S105K4U	XASTM8.EXE	M1-UN-DP48	ADP-STM8-QFN32
STM	STM8S105K6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S105S6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q44
STM	STM8S207C6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8S207C8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8S207CBT	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q48
STM	STM8S207K6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S207K8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q32
STM	STM8S207R8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q64
STM	STM8S207RBT	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q64
STM	STM8S207S6T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q44
STM	STM8S207S8T	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q44
STM	STM8S208MBT	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q80
STM	STM8S208RBT	XASTM8.EXE	M1-UN-DP48	ADP-STM8-Q64
STM	STR912FAW42X6	XASIG.EXE	M1-UN-DP48	ADP-STR9-Q128

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
STM	STR912FAW44X6	XASIG.EXE	M1-UN-DP48	ADP-STR9-Q128
STM	UPSD3212A(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3212A(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3212C(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3212C(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3212CV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3212CV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3233B(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3233B(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3233BV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3233BV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3234A(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3234A(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3234BV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3253B(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3253B(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3253BV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3253BV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3254A(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52(V2)
STM	UPSD3254A(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3254BV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80(V2)
STM	UPSD3312D (TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3312DV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3333D (TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3333D (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3333DV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3333DV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3334D (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3334DV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3354D (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3354D(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3354DV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3354DV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3422E (TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3422E (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3422EV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3422EV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3433E (TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3433E (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3433EV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3433EV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3434E (TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3434E(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3434EV(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	UPSD3434EV(TQFP80)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ80V2
STM	UPSD3454EB(TQFP52)	XAPSD4.EXE	M1-UN-DP48	ADP-UPSD3200-TQ52V2
STM	Z86E21	XST62.EXE	M1-UN-DP48	
STM	ZPSD301B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	ZPSD302B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	ZPSD303B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
STM	ZPSD312VB	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
SUMMIT	S93WD663	XSPROM.EXE	M1-UN-DP48	
SUMMIT	S39421	XHT48R.EXE	M1-UN-DP48	
SUNPLUS	SPCE061A	XAMPU2.EXE	M1-UN-DP48	ADP-PA7647-PL84
SYNCMOS	F29C31004B	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C31004T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C31400T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
SYNCMOS	F29C51000T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C51001B	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C51001T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C51002B	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C51002T	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SYNCMOS	F29C51004B	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29C51004T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29LC51000	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29LC51001	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	F29LC51002	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	S29C31001T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	S29C31004T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	S29C51001T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	S29C51002T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	S29C51004T	XMEM2.EXE	M1-UN-DP48	
SYNCMOS	SM2952	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM2958	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM2964	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM2965	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM39R04G1W10(MSOP10)	XPGM52.EXE	M1-UN-DP48	CNV-MSOP-DIP10
SYNCMOS	SM39R04G1W14(DIP14)	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM39R08A2W20	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R08A2W24	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R08A2W28	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R08A3U16	XPGM52.EXE	M1-UN-DP48	CNV-SOP-NDIP16F
SYNCMOS	SM39R08A3U20	XPGM52.EXE	M1-UN-DP48	CNV-SOP-DIP28A
SYNCMOS	SM39R08A5W10(MSOP10)	XPGM52.EXE	M1-UN-DP48	CNV-MSOP-DIP10
SYNCMOS	SM39R16A2W20	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R16A2W24	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R16A2W28	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R16A3U20	XPGM52.EXE	M1-UN-DP48	CNV-SOP-DIP28A
SYNCMOS	SM39R2051	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM39R4051	XPGM52.EXE	M1-UN-DP48/SO28	
SYNCMOS	SM59128	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5912C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5912L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5916C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5916L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59264	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5952	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5952E	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5953	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5954	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM5958	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5964	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM5964AC	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM5964AL	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM5964B	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59D03G2C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59D03G2L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59D04G2C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59D04G2L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R02A1C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R02A1C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R02A1L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R02A1L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R02G1	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R03A1C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R03A1C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R03A1L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R03A1L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R04A1C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R04A1C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R04A1L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R04A1L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R04A2C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R04A2C(QFP48)	XPGM52.EXE	M1-UN-LQ48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SYNCMOS	SM59R04A2L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R04A2L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R05A3C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R05A3C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R05A3L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R05A3L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R05A5C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R05A5C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R05A5L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R05A5L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R05G6	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R08A2	XPGM52.EXE	M1-UN-TQ64	
SYNCMOS	SM59R09A3C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R09A3C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R09A3L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R09A3L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R09A5C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R09A5C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R09A5L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R09A5L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R09G6	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16A2	XPGM52.EXE	M1-UN-TQ64	
SYNCMOS	SM59R16A3C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16A3C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R16A3L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16A3L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R16A5C	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16A5C(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R16A5L	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16A5L(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM59R16G6	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM59R16G6(QFP48)	XPGM52.EXE	M1-UN-LQ48	
SYNCMOS	SM7908	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM79108	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM79164	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM7932	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM7964	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM894051C	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM8951	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM89516	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM89516A	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM89516B	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8951A	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8951BC	XPGM52.EXE	M1-UN-DP48	
SYNCMOS	SM8951BL	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8952	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8952A	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8952B	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8954	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8954A	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8954B	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8958	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8958A	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM8958B	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM89S16R1	XPGM52.EXE	M1-UN-DP48/PL44	
SYNCMOS	SM89T16R1	XPGM52.EXE	M1-UN-DP48	
SYNTEK	STK6006	XMPU5.EXE	M1-UN-DP48	ADP-STK6006-DIP40/-SDIP42/-PL
SYNTEK	STK6006(DIP40)	XMPU5.EXE	M1-UN-DP48	
SYNTEK	STK6011-3V	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6011-3V(LQ48)	XPGM51.EXE	M1-UN-DP48	
SYNTEK	STK6011-5V	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6012-3V	XPGM51.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
SYNTEK	STK6012-5V	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6012B-5V	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6021-3V	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6031	XPGM51.EXE	M1-UN-DP48/PL44	
SYNTEK	STK6031(LQ48)	XPGM51.EXE	M1-UN-LQ48	
SYNTEK	STK6032	XPGM51.EXE	M1-UN-DP48	
SYNTEK	STK6032(LQ48)	XPGM51.EXE	M1-UN-LQ48	
SYNTEK	STK6033	XPGM51.EXE	M1-UN-DP48	
SYNTEK	STK6033(LQ48)	XPGM51.EXE	M1-UN-LQ48	
SYNTEK	STK60516(LQ48)	XPGM51.EXE	M1-UN-LQ48	
Silicon Labs	C8051F005	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F015	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F018	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F020	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F021	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F022	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F023	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F041	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F044	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F045	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F060	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F062	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F064	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F120	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F124	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F125	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F126	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F130	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F132	XASIG.EXE	M1-UN-DP48	ADP-C8051FXXX-Q100
Silicon Labs	C8051F133	XASIG.EXE	M1-UN-DP48	ADP-C8051F023-Q64
Silicon Labs	C8051F206	XASIG.EXE	M1-UN-DP48	ADP-C8051F226-Q48
Silicon Labs	C8051F221	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F226	XASIG.EXE	M1-UN-DP48	ADP-C8051F226-Q48
Silicon Labs	C8051F230	XASIG.EXE	M1-UN-DP48	ADP-C8051F226-Q48
Silicon Labs	C8051F231	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F236	XASIG.EXE	M1-UN-DP48	ADP-C8051F226-Q48
Silicon Labs	C8051F300	XASIG.EXE	M1-UN-DP48	ADP-C8051F30X-QFN
Silicon Labs	C8051F301	XASIG.EXE	M1-UN-DP48	ADP-C8051F30X-QFN
Silicon Labs	C8051F310	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-Q-QV2
Silicon Labs	C8051F311	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F311*	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F312	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-Q-QV2
Silicon Labs	C8051F313	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F314	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-Q-QV2
Silicon Labs	C8051F315	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F317	XASIG.EXE	M1-UN-DP48	ADP-C8051F317-QN24
Silicon Labs	C8051F320	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-Q-QV2
Silicon Labs	C8051F321	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F326	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F327	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F330	XASIG.EXE	M1-UN-DP48	ADP-C8051F33X-QFN
Silicon Labs	C8051F330(DIP20)	XASIG.EXE	M1-UN-DP48	
Silicon Labs	C8051F330*	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F331	XASIG.EXE	M1-UN-DP48	ADP-C8051F33X-QFN
Silicon Labs	C8051F331*	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F332	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F333	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F334	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F335	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F336	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F337*	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F338	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
Silicon Labs	C8051F339	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F340	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F341(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F342	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F342(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F343(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F344	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F345	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F346(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F346(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F347	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F347(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F348(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F349(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F349(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F34A(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F34A(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F34B(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F34B(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F34C(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F34D(QFP32)	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F350	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F351	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F352	XASIG.EXE	M1-UN-DP48	ADP-C8051F320-QV2
Silicon Labs	C8051F353	XASIG.EXE	M1-UN-DP48	ADP-C8051F321-QFN
Silicon Labs	C8051F360(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F361*	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F362(QFN28)	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F363	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F364(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F365(QFN28)	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F366(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F367(QFN28)	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F368(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F369(QFN28)	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F370	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F371	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F374	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F375	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F380(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F381(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F381(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F382(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F383(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F383(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F384(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F385(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F385(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F386(QFP48)	XASIG.EXE	M1-UN-TQ48	
Silicon Labs	C8051F387(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F387(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F390	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F391	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F392	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F393	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F394	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F395	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F396	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F397	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F398	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F399	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F410	XASIG.EXE	M1-UN-QF32	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
Silicon Labs	C8051F411	XASIG.EXE	M1-UN-DP48	ADP-C8051F41X-QFN
Silicon Labs	C8051F411*	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F412	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F413	XASIG.EXE	M1-UN-DP48	ADP-C8051F41X-QFN
Silicon Labs	C8051F413*	XASIG.EXE	M1-UN-QN28	
Silicon Labs	C8051F500	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48
Silicon Labs	C8051F500(QFP48)	XASIG.EXE	M1-UN-TQ48/LQ48	
Silicon Labs	C8051F501	XASIG.EXE	M1-UN-TQ48/LQ48	
Silicon Labs	C8051F501(QFN48)	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48A
Silicon Labs	C8051F502(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F502(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F503(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F503(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F504(QFP48)	XASIG.EXE	M1-UN-TQ48/LQ48	
Silicon Labs	C8051F505(QFN48)	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48A
Silicon Labs	C8051F505(QFP48)	XASIG.EXE	M1-UN-TQ48/LQ48	
Silicon Labs	C8051F506(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F506(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F507(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F507(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F508(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F509(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F510(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F511(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F530-C(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
Silicon Labs	C8051F530A*	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F531-C(QFN20)	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F531-C(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
Silicon Labs	C8051F534-C(QFN20)	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F534-C(TSSOP20)	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
Silicon Labs	C8051F534A*	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F540(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F540(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F541(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F541(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F542(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F543(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F544(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F545(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F545(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F547(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F550(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F551(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F553(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F554(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F555(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F557(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F560(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F561(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F561(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F563(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F563(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F564(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F565(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F567(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F568(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F569(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F570(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F571(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F572(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F575(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F580	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
Silicon Labs	C8051F580(QFP48)	XASIG.EXE	M1-UN-TQ48/-LQ48	
Silicon Labs	C8051F581(QFP48)	XASIG.EXE	M1-UN-TQ48/-LQ48	
Silicon Labs	C8051F582(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F582(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F583(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F583(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F584(QFN48)	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48A
Silicon Labs	C8051F584(QFP48)	XASIG.EXE	M1-UN-TQ48/-LQ48	
Silicon Labs	C8051F585(QFN48)	XASIG.EXE	M1-UN-BG68A	TOP-UN-QN48A
Silicon Labs	C8051F585(QFP48)	XASIG.EXE	M1-UN-TQ48/-LQ48	
Silicon Labs	C8051F586(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F586(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F587(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F587(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F589(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F590(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F591(QFN40)	XASIG.EXE	M1-UN-ML40	
Silicon Labs	C8051F751	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F760	XASIG.EXE	M1-UN-DP48	ADP-C8051F760-QN48
Silicon Labs	C8051F761	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F819	XASIG.EXE	M1-UN-ML20	
Silicon Labs	C8051F850(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F851(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F852(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F853(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F854(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F855(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F860(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F861(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F862(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F863(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F864(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F865(SOP16)	XASIG.EXE	M1-UN-SO16	
Silicon Labs	C8051F901	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F901(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F902(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F902(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F911(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F911(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F912(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F912(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F920(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F920(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F921	XASIG.EXE	M1-UN-DP48	ADP-C8051F317-QN24
Silicon Labs	C8051F930(QFN32)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051F930(QFP32)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051F931	XASIG.EXE	M1-UN-DP48	ADP-C8051F317-QN24
Silicon Labs	C8051F986(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F986(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F987(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F987(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F988(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F988(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F989(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F996(QFN24)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	C8051F996(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051F997(QSOP24)	XASIG.EXE	M1-UN-QS28	
Silicon Labs	C8051T600	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16F/-NDIP16G
Silicon Labs	C8051T605	XASIG.EXE	M1-UN-DP48	CNV-SOP-NDIP16F
Silicon Labs	C8051T610(Before 1119)	XASIG.EXE	M1-UN-QF32	
Silicon Labs	C8051T621(After 1041)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A
Silicon Labs	C8051T621(Before 1040)	XASIG.EXE	M1-UN-BG68A	TOP-AVR-ML32A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
Silicon Labs	C8051T623(Before 1111)	XASIG.EXE	M1-UN-DP48	CNV-QFN-DIP24
Silicon Labs	EM357	XASIM.EXE	M1-UN-DP48	ADP-EM35X-QN48
Silicon Labs	SIM3C134	XASIM.EXE	M1-UN-DP48	ADP-SIM3C13X-QN40
SunplusT	SPCP826A(DP24)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP826A(DP28)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP826A(SOP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP826A(SOP24)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP826A(SOP28)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP826A(SSOP28)	XAMPU2.EXE	M1-UN-SS34	
SunplusT	SPCP866E2A(DP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP866E2A(SOP24)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP866E2A(SSOP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP866E2A(SSOP28)	XAMPU2.EXE	M1-UN-SS34	
SunplusT	SPCP868A(DP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP868A(SOP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP868A(SOP24)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP868A(SSOP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPCP868A(SSOP24)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2102A(DP18)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2102A(SO18)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2104A(DP18)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2202A(DP16)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2202A(DP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2204A(DP16)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2204A(DP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2204C(SO20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2404A(DP20)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2404A(DP28)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2408A(DP28)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC65P2408A(DP32)	XAMPU2.EXE	M1-UN-DP48	
SunplusT	SPMC75F2313A	XAMPU2.EXE	M1-UN-DP48	ADP-SPMC75F2313A-SD42
TEMIC	T87C5101	XPGM52.EXE	M1-UN-DP48	
TEMIC	T89C51RD2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS8754	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C51RA2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C51RB2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C51RC2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C51RD2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C51U2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C52X2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C54X2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TS87C58X2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251A1	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251G1	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251G1A	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251G2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251G2D	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87251G2D_L	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC8751C3	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC8751I2	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC8758	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87C51	XPGM52.EXE	M1-UN-DP48	
TEMIC	TSC87C52	XPGM52.EXE	M1-UN-DP48	
TI	TBP18S030	XBPPGM.EXE	M1-UN-DP48	
TI	TM27C210/PC210	XMEM1.EXE	M1-UN-DP48	
TI	TMS2516(25V)	XMEM1.EXE	M1-UN-DP48	
TI	TMS2532A	XMEM1.EXE	M1-UN-DP48	
TI	TMS27128(21V)	XMEM1.EXE	M1-UN-DP48	
TI	TMS2764(21V)	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C010A	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C020	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C040	XMEM1.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	TMS27C128	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C240/PC240	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C256	XMEM1.EXE	M1-UN-DP48	
TI	TMS27C291	XBPPGM.EXE	M1-UN-DP48	
TI	TMS27C292	XBPPGM.EXE	M1-UN-DP48	
TI	TMS27C512	XMEM1.EXE	M1-UN-DP48	
TI	TMS27PC010A	XMEM1.EXE	M1-UN-DP48	
TI	TMS27PC040	XMEM1.EXE	M1-UN-DP48	
TI	TMS27PC128	XMEM1.EXE	M1-UN-DP48	
TI	TMS27PC256	XMEM1.EXE	M1-UN-DP48	
TI	TMS27PC512	XMEM1.EXE	M1-UN-DP48	
TI	TMS87C257	XMEM1.EXE	M1-UN-DP48	
TI	TMS87C510	XMEM1.EXE	M1-UN-DP48	
TI	TMS28F400ASB-CD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TI	TMS28F400AST-CD	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TI	TMS28F512A	XMEM2.EXE	M1-UN-DP48	
TI	TMS29F010	XMEM2.EXE	M1-UN-DP48	
TI	TMS29F040	XMEM2.EXE	M1-UN-DP48	
TI	TMS29LF040	XMEM2.EXE	M1-UN-DP48	
TI	bq2022A(SOT23)	XDS2502.EXE	M1-UN-DP48	
TI	BUF08821	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	BUF16821	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	BUF22821	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-8XC5XX2
TI	CC2430F64RTCR	XACC2430.EXE	M1-UN-DP48	ADP-CC2430-MLF48
TI	CC2510F16RSP	XACC2430.EXE	M1-UN-DP48	ADP-CC251X-MLF36
TI	CC2510F16RSP*	XACC2430.EXE	M1-CC251X-ML36	
TI	CC2510F32RSP	XACC2430.EXE	M1-UN-DP48	ADP-CC251X-MLF36
TI	CC2511F16RSP	XACC2430.EXE	M1-UN-DP48	ADP-CC251X-MLF36
TI	CC2511F16RSP*	XACC2430.EXE	M1-CC251X-ML36	
TI	CC2511F32RSP	XACC2430.EXE	M1-UN-DP48	ADP-CC251X-MLF36
TI	CC2530F256RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2530F64RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2531F128RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2531F256RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2533F32RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2533F64RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2533F96RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2540F256RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2541F128RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC2541F256RHAx	XACC2430.EXE	M1-UN-DP48	ADP-CC2530-MLF40
TI	CC430F5137IRGZ	XAMSP.EXE	M1-UN-DP48	ADP-CC430F513XX-MLF48
TI	CC430F5137IRGZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-CC430F513XX-MLF48
TI	CDCE706	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCE906	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCE913	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCE925	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCE937	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCE949	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCEL913	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCEL925	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCEL937	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CDCEL949	XASIG.EXE	M1-UN-DP48	CNV-TSSOP-DIP28
TI	CM508	X966X.EXE	M1-UN-ML40	
TI	DRV91670	XAMSP.EXE	M1-UN-DP48	ADP-DRV91670-Q48
TI	DRV91670(Info)	XAMSP.EXE	M1-UN-DP48	ADP-DRV91670-Q48
TI	LM3S1607(LQFP64)	XALUM.EXE	M1-UN-DP48	ADP-LM3S1XXX-QF64
TI	LM3S1776(LQFP64)	XALUM.EXE	M1-UN-DP48	ADP-LM3S1XXX-QF64
TI	LM3S1B21(BGA108)	XALUM.EXE	M1-UN-BG68A	TOP-LM3S9XXX-BG108
TI	LM3S1D21(LQFP100)	XALUM.EXE	M1-UN-DP48	ADP-LM3S9XXX-QF100V2
TI	LM3S9B96(BGA108)	XALUM.EXE	M1-UN-BG68A	TOP-LM3S9XXX-BG108
TI	LM3S9BN6(BGA108)	XALUM.EXE	M1-UN-BG68A	TOP-LM3S9XXX-BG108
TI	LM3S9D90(LQFP100)	XALUM.EXE	M1-UN-DP48	ADP-LM3S9XXX-QF100/V2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	LM3S9D96(LQFP100)	XALUM.EXE	M1-UN-DP48	ADP-LM3S9XXX-QF100V2
TI	MSC1200Y2	XASIG.EXE	M1-UN-TQ48	
TI	MSC1200Y3	XASIG.EXE	M1-UN-TQ48	
TI	MSC1210Y2	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSC1210Y3	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSC1210Y4	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSC1210Y5	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSC1213Y5	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSC1214Y5	XASIG.EXE	M1-UN-DP48	ADP-MSC1210-TQ
TI	MSP430F1101AIDW	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1101AIDW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1101AIPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1101AIPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1101IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1101IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1111AIPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1111AIPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1111AIRGE	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F1111AIRGE(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F1121AIDW	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1121AIDW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1121AIPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1121AIPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1121IDW	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1121IDW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F1121IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1121IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1122IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1122IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1132IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1132IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F1222IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F1222IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F1222IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F1222IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F122IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F122IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F1232IDW	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-S28
TI	MSP430F1232IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F1232IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F1232IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F1232IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F1331IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1331IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1351IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1351IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1471IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1471IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1471IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1471IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1481IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1481IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1481IRTD	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F1481IRTD(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F1481IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1481IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1491IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1491PAG(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1491IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1551IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1551IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1561IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	MSP430F156IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F157IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F157IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1611IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F1611IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F167IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F167IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F169IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F169IRTD(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2001IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2001IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2001IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2001IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2002IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2002IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2002IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2002IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2003IN	XAMSP.EXE	M1-UN-DP48	
TI	MSP430F2003IN(Info)	XAMSP.EXE	M1-UN-DP48	
TI	MSP430F2003IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2003IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2003IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2003IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2011IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2011IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2011IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2011IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2011TPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2011TPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2012IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2012IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2012IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2012IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2013IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2013IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2013IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2013IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2013TPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2013TPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2013TRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430F2101IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2101IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2101IRGE	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2101IRGE(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2111IDW	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F2111IDW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F11X1-S20
TI	MSP430F2111IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2111IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2111IRGE	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2111IRGE(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2112IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F2121IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2121IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2121IRGE	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2121IRGE(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2122IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F2131IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2131IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430F2131IRGE	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2131IRGE(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML24
TI	MSP430F2132IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28
TI	MSP430F2132IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-SS28

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	MSP430F2132IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F2132IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F12X2-MLF32
TI	MSP430F2232IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2232IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2232IRHA(Info)*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2232IRHA*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2234IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2234IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2252IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2252IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2252IRHA(Info)*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2252IRHA*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2252TRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2252TRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2272IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2272IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2272IRHA(Info)*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2272IRHA*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2272TRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2272TRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F233TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F233TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2350IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2350IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2350IRHA(Info)*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2350IRHA*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2370IRHA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2370IRHA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40V2
TI	MSP430F2370IRHA(Info)*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2370IRHA*	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML40
TI	MSP430F2410TRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2410TRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2419TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2419TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2471TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2471TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2471TRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2471TRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F247TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F247TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F247TRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F247TRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2481TRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F2481TRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F248TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F248TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2618TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2618TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2619TPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F2619TPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F412IRTD	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F412IRTD(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F4132IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64V2
TI	MSP430F4132IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64V2
TI	MSP430F413IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F413IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F4152IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64V2
TI	MSP430F4152IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64V2
TI	MSP430F415IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F415IPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F417IRTD	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64
TI	MSP430F417IRTD(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX1-MLF64

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	MSP430F427AIPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F427AIPM(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430F447IPZ	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430F447IPZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430F448IPZ	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430F448IPZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430F449IPZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430F5324IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5324IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5328IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5328IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5437IPN	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-QF80
TI	MSP430F5437IPN(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-QF80
TI	MSP430F5503IRGZ	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF48
TI	MSP430F5503IRGZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF48
TI	MSP430F5508IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5508IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5510IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5510IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5514IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5514IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5524IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5524IRGC(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430F5528IRGC	XAMSP.EXE	M1-UN-DP48	ADP-M430F55XX-MLF64
TI	MSP430FE427IPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430FG437IPN	XAMSP.EXE	M1-UN-DP48	ADP-M430F4XX-Q80
TI	MSP430FG438IPN	XAMSP.EXE	M1-UN-DP48	ADP-M430F4XX-Q80
TI	MSP430FG4618IPZ	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430FG4618IPZ(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q100
TI	MSP430G2001IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2001IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2001IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2001IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2101IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2101IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2102IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2102IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2121IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2121IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2131IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2131IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2131IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2131IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2201IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2201IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2201IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2201IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2202IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2202IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2211IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2211IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2221IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2221IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2230ID	XAMSP.EXE	M1-UN-DP48	ADP-M430G2230-SO8
TI	MSP430G2230ID(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2230-SO8
TI	MSP430G2231IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2231IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-SS20
TI	MSP430G2231IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2231IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2233IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2233IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2302IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TI	MSP430G2302IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2313IPW28	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2313IPW28(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2333IPW	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2333IPW(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2333IRHB32	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430G2333IRHB32(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430G2353IPW28	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2353IPW28(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2402IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2402IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2402IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2402IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2433IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430G2433IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430G2452IPW14	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2452IPW14(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2452IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2452IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2452IRSA	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2452IRSA(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-ML16
TI	MSP430G2533IPW28	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2533IPW28(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2553IPW20	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2553IPW20(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2553IPW28	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2553IPW28(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430G2XXX-SS28
TI	MSP430G2553IRHB	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430G2553IRHB(Info)	XAMSP.EXE	M1-UN-DP48	ADP-M430F2XXX-MLF32
TI	MSP430P325AIPM	XAMSP.EXE	M1-UN-DP48	ADP-M430F1XX-Q64/V2
TI	MSP430P337AIPJM	XAMSP.EXE	M1-UN-DP48	ADP-M430P337-Q100
TI	TM4C123AE6PM(LQFP64)	XALUM.EXE	M1-UN-DP48	ADP-TM4C1XXX-QF64
TI	TMS320E14	XATMP.EXE	M1-UN-DP48	ADP-TMS320E14
TI	TMS320E15(PLCC44)	XATMP.EXE	M1-UN-DP48	ADP-TMS320E1P
TI	TMS320E17(PLCC44)	XATMP.EXE	M1-UN-DP48	ADP-TMS320E1P
TI	TMS320E25	XATMP.EXE	M1-UN-DP48	ADP-TMS320E
TI	TMS320P14	XATMP.EXE	M1-UN-DP48	ADP-TMS320E14
TI	TMS320P25	XATMP.EXE	M1-UN-DP48	ADP-TMS320E
TI	TMS370C610NA	XAMPU5.EXE	M1-UN-DP48	ADP-370CX1X
TI	TMS370C702FNT	XAMPU5.EXE	M1-UN-DP48	ADP-370CX1X-PL
TI	TMS370C710FNA	XAMPU5.EXE	M1-UN-DP48	ADP-370CX1X-PL
TI	TMS370C712AFNA	XAMPU5.EXE	M1-UN-DP48	ADP-370CX1X-PL
TI	TMS370C742/A	XAMPU5.EXE	M1-UN-DP48	ADP-370CX4X
TI	TMS370C742AFNT	XAMPU5.EXE	M1-UN-DP48	ADP-370CX4X-PL
TI	TMS370C756AFNT	XAMPU5.EXE	M1-UN-DP48	ADP-370CX5X-PL
TI	TMS370C758AFNT	XAMPU5.EXE	M1-UN-DP48	ADP-370CX5X-PL
TI	EP1810(PGA)	XA1810.EXE	M1-UN-DP48	ADP-1810PGA
TI	EP1810(PLCC)	XA1810.EXE	M1-UN-DP48	ADP-1810PLCC
TI	EP610	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
TI	EP630	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP610
TI	EP910	XEPLD1.EXE	M1-UN-DP48	CNV-PLCC-EP910
TI	TIBPAL16L8-25 (DIP20)	XPLD3.EXE	M1-UN-DP48	ADP-TIBPAL16
TI	TIBPAL16R4-25 (DIP20)	XPLD3.EXE	M1-UN-DP48	ADP-TIBPAL16
TI	TIBPAL20L8-15	XPLD3.EXE	M1-UN-DP48	
TI	TIBPAL22V10-20	XPLD3.EXE	M1-UN-DP48	
TI	TIBPAL22V10A	XPLD3.EXE	M1-UN-DP48	
TI	TIBPAL22VP10-20	XPLD3.EXE	M1-UN-DP48	
TI	TICPAL22V10Z(TURBO MODE)	XPLD3.EXE	M1-UN-DP48	
TI	TICPAL22V10Z(ZERO POWER MODE)	XPLD3.EXE	M1-UN-DP48	
TMC	24A02	XSPROM.EXE	M1-UN-DP48	
TMC	24A02(SOT25)	XSPROM.EXE	M1-UN-DP48	
TMC	24A08	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TMC	24A08(SOT25)	XSPROM.EXE	M1-UN-DP48	
TMC	24A16	XSPROM.EXE	M1-UN-DP48	
TMC	24A16(SOT25)	XSPROM.EXE	M1-UN-DP48	
TMC	24A32	XSPROM.EXE	M1-UN-DP48	
TMC	24A64	XSPROM.EXE	M1-UN-DP48	
TMC	93LC46	XSPROM.EXE	M1-UN-DP48	
TMC	93LC46M/MA	XSPROM.EXE	M1-UN-DP48	
TMC	93LC46M/MB	XSPROM.EXE	M1-UN-DP48	
TMC	93LC56M/MA	XSPROM.EXE	M1-UN-DP48	
TMC	93LC56M/MB	XSPROM.EXE	M1-UN-DP48	
TMC	93LC66M/MA	XSPROM.EXE	M1-UN-DP48	
TMC	93LC66M/MB	XSPROM.EXE	M1-UN-DP48	
TOPRO	TP2804HC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2804HP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2804HQ	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2804LC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2804LP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2804LQ	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2808HC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2808HP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2808LC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2808LP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2851HC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2851HP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2851HQ	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2851LC	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2851LP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2851LQ	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2852HC	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2852HP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2852HQ	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2852LC	XPGM52.EXE	M1-UN-DP48/PL44	
TOPRO	TP2852LP	XPGM52.EXE	M1-UN-DP48	
TOPRO	TP2852LQ	XPGM52.EXE	M1-UN-DP48	
TOSHIBA	27C256A	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC532000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC541000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC54256AP	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC54512AP	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC54H1024AP/AF	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC571000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC571024/H1024/A	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC572000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57256AD	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57256D	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC574000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC574096D	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57512AD	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57C1025A	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57H1000	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC57H1025AD	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27128A	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27128D(21V)	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27256D(21V)	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM2732(25V)	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27512	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27512AD	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM27512D	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM2764A	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM2764D(21V)	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TMM57256AD	XMEM1.EXE	M1-UN-DP48	
TOSHIBA	TC58F401FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TOSHIBA	TC58FVB160FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVB321FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVB641FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVB800FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVM5B2ATG	XA28F2.EXE	M1-UN-TS48A/TS56	
TOSHIBA	TC58FVM5B3ATG	XA28F2.EXE	M1-UN-TS48A/TS56	
TOSHIBA	TC58FVM5T2ATG	XA28F2.EXE	M1-UN-TS48A/TS56	
TOSHIBA	TC58FVM6B2AFT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVM6B2ATG	XA28F2.EXE	M1-UN-TS48A/TS56	
TOSHIBA	TC58FVM6B5BTG	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVM6T2AFT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVM6T5BTG	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVM7B2ATG	XA28F2.EXE	M1-UN-TS56	
TOSHIBA	TC58FVM7T2AFT	XA28F2.EXE	M1-UN-TS56	
TOSHIBA	TC58FVM7T5BTG	XA28F2.EXE	M1-UN-TS56	
TOSHIBA	TC58FVT160AFT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVT160FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVT321FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVT641FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC58FVT800FT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
TOSHIBA	TC89101P(128*8)	XSPROM.EXE	M1-UN-DP48	
TOSHIBA	TC89101P(64*16)	XSPROM.EXE	M1-UN-DP48	
TOSHIBA	TC89102P(128*16)	XSPROM.EXE	M1-UN-DP48	
TOSHIBA	TC89102P(256*8)	XSPROM.EXE	M1-UN-DP48	
TOSHIBA	TC89122P	XSPROM.EXE	M1-UN-DP48	
TOSHIBA	8755A	XPGM51.EXE	M1-UN-DP48	
TOSHIBA	T5CE6	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD23AF-Q
TOSHIBA	TMP1940FDBF	XATMP.EXE	M1-UN-DP48	ADP-TMP1940FDBF-TQ
TOSHIBA	TMP47P1637VN	XATMP.EXE	M1-UN-DP48	ADP-TMP47P1637-SD
TOSHIBA	TMP47P201VP	XATMP.EXE	M1-UN-DP48	ADP-TMP47P201
TOSHIBA	TMP47P201VPG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P201
TOSHIBA	TMP47P202VM	XATMP.EXE	M1-UN-DP48	ADP-TMP47P202-S
TOSHIBA	TMP47P202VP	XATMP.EXE	M1-UN-DP48	ADP-TMP47P202
TOSHIBA	TMP47P202VPG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P202
TOSHIBA	TMP47P241VM	XATMP.EXE	M1-UN-DP48	ADP-47P241-S
TOSHIBA	TMP47P241VN	XATMP.EXE	M1-UN-DP48	ADP-47P241-SD
TOSHIBA	TMP47P241VNG	XATMP.EXE	M1-UN-DP48	ADP-47P241-SD
TOSHIBA	TMP47P242VN	XATMP.EXE	M1-UN-DP48	ADP-TMP47P242-SD
TOSHIBA	TMP47P400VF	XATMP.EXE	M1-UN-DP48	ADP-47P400-Q
TOSHIBA	TMP47P400VN	XATMP.EXE	M1-UN-DP48	ADP-47P400-SD
TOSHIBA	TMP47P403VN	XATMP.EXE	M1-UN-DP48	ADP-47P403-SD
TOSHIBA	TMP47P403VNG	XATMP.EXE	M1-UN-DP48	ADP-47P403-SD
TOSHIBA	TMP47P422VFG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P422-Q
TOSHIBA	TMP47P422VN	XATMP.EXE	M1-UN-DP48	ADP-TMP47P422-SD
TOSHIBA	TMP47P422VU	XATMP.EXE	M1-UN-DP48	ADP-TMP47P422-TQ
TOSHIBA	TMP47P422VUG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P422-TQ
TOSHIBA	TMP47P443VN	XATMP.EXE	M1-UN-DP48	ADP-TMP47P443-SD
TOSHIBA	TMP47P443VNG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P443-SD
TOSHIBA	TMP47P857VF	XATMP.EXE	M1-UN-DP48	ADP-TMP47P857-Q
TOSHIBA	TMP47P862VNG	XATMP.EXE	M1-UN-DP48	ADP-TMP47P862-SD
TOSHIBA	TMP68HC11A1	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E
TOSHIBA	TMP68HC11A1*	XAMMPU.EXE	M1-UN-DP48	ADP-68HC711E-PL52
TOSHIBA	TMP86F409NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH09N-SD
TOSHIBA	TMP86F807NG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86F807-SD28
TOSHIBA	TMP86F808NG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86F808-SD30
TOSHIBA	TMP86F809NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH09N-SD
TOSHIBA	TMP86FH09ANG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH09N-SD
TOSHIBA	TMP86FH09NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH09N-SD
TOSHIBA	TMP86FH12MG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH12M-SS/V2
TOSHIBA	TMP86FH46ANG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH46AN-SD
TOSHIBA	TMP86FH46BNG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH46AN-SD
TOSHIBA	TMP86FH46N	XATMP8.EXE	M1-UN-DP48	ADP-TMP86FH46N

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TOSHIBA	TMP86FH47ADUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH47ADU-TQ
TOSHIBA	TMP86FH47AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH47AU-TQ
TOSHIBA	TMP86FH47BUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH47AU-TQ
TOSHIBA	TMP86FH47UG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86FH47U-TQ
TOSHIBA	TMP86FH92IDMG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH12M-SSV2
TOSHIBA	TMP86FH93NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FH09N-SD
TOSHIBA	TMP86FM25FG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86FM25F-Q
TOSHIBA	TMP86FM29UG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86FM29UG-Q64
TOSHIBA	TMP86FM48FG	XATMP8.EXE	M1-UN-DP48	ADP-TMP86FM48FG-Q64
TOSHIBA	TMP86FS23AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS23U-TQ
TOSHIBA	TMP86FS23UG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS23U-TQ
TOSHIBA	TMP86FS28DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS28DF-TQ
TOSHIBA	TMP86FS28FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS28F-Q
TOSHIBA	TMP86FS49AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-Q
TOSHIBA	TMP86FS49AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-TQ
TOSHIBA	TMP86FS49BFG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-Q
TOSHIBA	TMP86FS49BNG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-SD
TOSHIBA	TMP86FS49BUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-TQ
TOSHIBA	TMP86FS49FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-Q
TOSHIBA	TMP86FS49NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-SD
TOSHIBA	TMP86FS49UG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS49-TQ
TOSHIBA	TMP86FS64FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86FS64F-TQ
TOSHIBA	TMP86P202M	XATMP.EXE	M1-UN-DP48	ADP-TMP86P202-S
TOSHIBA	TMP86P202P	XATMP.EXE	M1-UN-DP48	ADP-TMP86P202
TOSHIBA	TMP86P807M	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-S
TOSHIBA	TMP86P807MG	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-S
TOSHIBA	TMP86P807N	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-SD
TOSHIBA	TMP86P807NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86P807-SD
TOSHIBA	TMP86P820U	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-TQV2
TOSHIBA	TMP86P820U(TQFP64*)	XATMP.EXE	M1-TMP86P820U-QF64	
TOSHIBA	TMP86PH22UG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PH22U-TQ
TOSHIBA	TMP86PH46NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM46-SD
TOSHIBA	TMP86PM23U	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM23-TQ
TOSHIBA	TMP86PM29AF	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-Q
TOSHIBA	TMP86PM29AU	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-TQV2
TOSHIBA	TMP86PM29AU(TQFP64*)	XATMP.EXE	M1-TMP86P820U-QF64	
TOSHIBA	TMP86PM29AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-TQV2
TOSHIBA	TMP86PM29BFG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-Q
TOSHIBA	TMP86PM29BUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM29-TQV2
TOSHIBA	TMP86PM29BUG*	XATMP.EXE	M1-TMP86PM29-TQ64V2	
TOSHIBA	TMP86PM46N	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM46-SD
TOSHIBA	TMP86PM46NG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM46-SD
TOSHIBA	TMP86PM47AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM47-Q
TOSHIBA	TMP86PM47U	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM47-Q
TOSHIBA	TMP86PM72FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM72-Q
TOSHIBA	TMP86PS23UG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PM23-TQ
TOSHIBA	TMP86PS27FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PS27FG-Q80
TOSHIBA	TMP86PS43FG	XATMP.EXE	M1-UN-DP48	ADP-TMP86PS43FG-QF80
TOSHIBA	TMP87P808LN	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-SD
TOSHIBA	TMP87P808M	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-S
TOSHIBA	TMP87P808N	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-SD
TOSHIBA	TMP87P809M	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-S
TOSHIBA	TMP87P809N	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-SD
TOSHIBA	TMP87P809NG	XATMP.EXE	M1-UN-DP48	ADP-TMP87P808-SD
TOSHIBA	TMP87PH00N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-SD
TOSHIBA	TMP87PH00NG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-SD
TOSHIBA	TMP87PH40AF	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PH40AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PH40AN	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-SD
TOSHIBA	TMP87PH46N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH46-SD
TOSHIBA	TMP87PH46NG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH46-SD
TOSHIBA	TMP87PH47U	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH47-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TOSHIBA	TMP87PH48U	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM48U-LQ64
TOSHIBA	TMP87PM14FG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM14-Q64
TOSHIBA	TMP87PM14N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM14-SD
TOSHIBA	TMP87PM29UG	XATMP.EXE	M1-TMP87PM29UG-LQ64	
TOSHIBA	TMP87PM36N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM36-SD
TOSHIBA	TMP87PM40AF	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM40AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM40AN	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-SD
TOSHIBA	TMP87PM40ANG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-SD
TOSHIBA	TMP87PM41F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM41FG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PH40-Q
TOSHIBA	TMP87PM41N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM41-SD
TOSHIBA	TMP87PM41U	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM41-TQ
TOSHIBA	TMP87PM41UG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM41-TQ
TOSHIBA	TMP87PM48U	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM48U-LQ64
TOSHIBA	TMP87PM53F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM53-Q
TOSHIBA	TMP87PM70FG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM70FG-QF80
TOSHIBA	TMP87PM74ZFG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PM74Z-Q80
TOSHIBA	TMP87PP21DF	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS68-TQ
TOSHIBA	TMP87PP21F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PP21-Q
TOSHIBA	TMP87PP21FG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PP21-Q
TOSHIBA	TMP87PP23F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS64-Q
TOSHIBA	TMP87PS38F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS38-Q
TOSHIBA	TMP87PS38N	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS38-SD
TOSHIBA	TMP87PS64F	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS64-Q
TOSHIBA	TMP87PS68DF	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS68-TQ
TOSHIBA	TMP87PS68DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP87PS68-TQ
TOSHIBA	TMP88F846UG	XATMP.EXE	M1-UN-DP48	ADP-TMP88FH41U-Q
TOSHIBA	TMP88FH41UG	XATMP.EXE	M1-UN-DP48	ADP-TMP88FH41U-Q
TOSHIBA	TMP88FW44FG	XATMP.EXE	M1-UN-DP48	ADP-TMP88FW44-Q
TOSHIBA	TMP88FW45AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP88FW45-Q
TOSHIBA	TMP88FW45FG	XATMP.EXE	M1-UN-DP48	ADP-TMP88FW45-Q
TOSHIBA	TMP88PH40N	XATMP.EXE	M1-UN-DP48	ADP-TMP88PH40-SD
TOSHIBA	TMP88PH47FG	XATMP.EXE	M1-UN-DP48	ADP-TMP88PH47F-Q44
TOSHIBA	TMP88PH47N	XATMP.EXE	M1-UN-DP48	ADP-TMP88PH47-SD
TOSHIBA	TMP88PH47NG	XATMP.EXE	M1-UN-DP48	ADP-TMP88PH47-SD
TOSHIBA	TMP88PS42NG	XATMP.EXE	M1-UN-DP48	ADP-TMP88PS42N-SD
TOSHIBA	TMP88PS43FG	XATMP.EXE	M1-UN-DP48	ADP-TMP88PS43F-Q
TOSHIBA	TMP88PS49NG	XATMP.EXE	M1-UN-DP48	ADP-TMP88PS49N-SD
TOSHIBA	TMP88PU74F	XATMP.EXE	M1-UN-DP48	ADP-TMP88PU74FG-Q80
TOSHIBA	TMP89FH40NG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH40-SD
TOSHIBA	TMP89FH42LUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FH42UG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FH46DUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FH46LDUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM40NG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH40-SD
TOSHIBA	TMP89FM42AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FM42KUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FM42LUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FM42UG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH42U-Q
TOSHIBA	TMP89FM43LQG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FM43L-QFN44
TOSHIBA	TMP89FM46ADUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM46DUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM46KDUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM46LDUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM82DUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FM82TDUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FH46DU-Q
TOSHIBA	TMP89FS60FG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FS60F-Q
TOSHIBA	TMP89FS60UG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FS60U-TQ
TOSHIBA	TMP89FS61QFG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FS60F-Q
TOSHIBA	TMP89FW20AUG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FW20AUG-LQ64

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TOSHIBA	TMP89FW24ADFG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FW24DFG-LQ80
TOSHIBA	TMP89FW24AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FW24DFG-LQ80
TOSHIBA	TMP89FW24DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FW24DFG-LQ80
TOSHIBA	TMP89FW24FG	XATMP.EXE	M1-UN-DP48	ADP-TMP89FW24DFG-LQ80
TOSHIBA	TMP90PH44N	XATMP.EXE	M1-UN-DP48	ADP-TMP90PH44N-SD
TOSHIBA	TMP90PM40N	XATMP.EXE	M1-UN-DP48	ADP-TMP9-SD
TOSHIBA	TMP91FU62DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FU62DF-Q
TOSHIBA	TMP91FU62FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FU62F-Q
TOSHIBA	TMP91FW27FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FW27F-Q
TOSHIBA	TMP91FW27UG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FW27U-Q
TOSHIBA	TMP91FW40FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FW40F-Q
TOSHIBA	TMP91FW60DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FW60DF-Q
TOSHIBA	TMP91FW60FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FY42F-Q
TOSHIBA	TMP91FW64DFG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FW60DF-Q
TOSHIBA	TMP91FW64FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FY42F-Q
TOSHIBA	TMP91FY42FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91FY42F-Q
TOSHIBA	TMP91P640N-10	XATMP.EXE	M1-UN-DP48	ADP-TMP9-SD
TOSHIBA	TMP91PW12FG	XATMP.EXE	M1-UN-DP48	ADP-TMP91PW12FG-Q100
TOSHIBA	TMP92FD23ADFG	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD23ADF-Q
TOSHIBA	TMP92FD23AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD23AF-Q
TOSHIBA	TMP92FD28ADFG	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD28ADF-Q
TOSHIBA	TMP92FD28AFG	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD28AF-Q
TOSHIBA	TMP92FD54AIF	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD54AIF-Q
TOSHIBA	TMP92FD54AIFG	XATMP.EXE	M1-UN-DP48	ADP-TMP92FD54AIF-Q
TOSHIBA	TMP93PS40F	XATMP.EXE	M1-UN-DP48	ADP-TMP93PS40F-Q100
TOSHIBA	TMP93PS44F	XATMP.EXE	M1-UN-DP48	ADP-TMP93PS44F-Q
TOSHIBA	TMP93PS44FG	XATMP.EXE	M1-UN-DP48	ADP-TMP93PS44F-Q
TOSHIBA	TMP93PW44ADFG	XATMP.EXE	M1-UN-DP48	ADP-TMP93PW44ADF-Q
TOSHIBA	TMPM324F10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM360F20FG-LQ144
TOSHIBA	TMPM330DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM330FDWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM330FWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330FDG-Q100
TOSHIBA	TMPM330FYFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM330FYWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM332FWUG	XATMP.EXE	M1-UN-DP48	ADP-TMPM332FWUG-Q64
TOSHIBA	TMPM333DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM333FWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330FDG-Q100
TOSHIBA	TMPM333FYFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM330DFG-Q100
TOSHIBA	TMPM341FDXBG	XATMP.EXE	M1-UN-DP48	ADP-TMPM341FDXBG-BG113
TOSHIBA	TMPM341FYXBG	XATMP.EXE	M1-UN-DP48	ADP-TMPM341FDXBG-BG113
TOSHIBA	TMPM360F20FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM360F20FG-LQ144
TOSHIBA	TMPM361F10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM361F10FG-LQ100
TOSHIBA	TMPM362F10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM360F20FG-LQ144
TOSHIBA	TMPM363F10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM361F10FG-LQ100
TOSHIBA	TMPM364F10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM360F20FG-LQ144
TOSHIBA	TMPM366DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM366DFG-LQ100
TOSHIBA	TMPM366FDXBG	XATMP.EXE	M1-UN-DP48	ADP-TMPM366FDXBG-BG109
TOSHIBA	TMPM367DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM368DFG-LQ100
TOSHIBA	TMPM368DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM368DFG-LQ100
TOSHIBA	TMPM369DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM369DFG-LQ144
TOSHIBA	TMPM36BF10FG	XATMP.EXE	M1-UN-DP48	ADP-TMPM36BF10-Q100
TOSHIBA	TMPM370FYDFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM370FYDFG-Q100
TOSHIBA	TMPM370FYFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM370FYFG-Q100
TOSHIBA	TMPM374FWUG	XATMP.EXE	M1-UN-DP48	ADP-TMPM374FWUG-LQ44
TOSHIBA	TMPM376FDDFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM370FYDFG-Q100
TOSHIBA	TMPM377FDFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM377FDFG-LQ80
TOSHIBA	TMPM377FYFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM377FDFG-LQ80
TOSHIBA	TMPM380DFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM380FYFG-Q100
TOSHIBA	TMPM380FWDFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM380FYDFG-Q100
TOSHIBA	TMPM380FWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM380FYFG-Q100
TOSHIBA	TMPM380FYDFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM380FYDFG-Q100
TOSHIBA	TMPM380FYFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM380FYFG-Q100

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
TOSHIBA	TMPM382FSFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM382FWFG-Q64
TOSHIBA	TMPM382FWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM382FWFG-Q64
TOSHIBA	TMPM384DFDG	XATMP.EXE	M1-UN-DP48	ADP-TMPM384DFDG-LQ144
TOSHIBA	TMPM390FWFG	XATMP.EXE	M1-UN-DP48	ADP-TMPM390FWFG-Q100
TOSHIBA	TMPM395FWXBG	XATMP.EXE	M1-UN-DP48	ADP-TMPM395FWXBG-BG120
TOUCHPLUS	TX56A1	XPGM52.EXE	M1-UN-DP48	
TOUCHPLUS	TX64A1	XPGM52.EXE	M1-UN-DP48	
TSI	TS25L010A	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L020A	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L032A	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L16AP	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L16BP	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L16P	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L16PE	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L512A	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L80P	XSPROM.EXE	M1-UN-DP48	
TSI	TS25L80PE	XSPROM.EXE	M1-UN-DP48	
TURBO IC	TU24C02	XSPROM.EXE	M1-UN-DP48	
TURBO IC	TU24C04	XSPROM.EXE	M1-UN-DP48	
TURBO IC	TU24C08	XSPROM.EXE	M1-UN-DP48	
TURBO IC	TU24C16	XSPROM.EXE	M1-UN-DP48	
TURBO IC	TU24C32	XSPROM.EXE	M1-UN-DP48	
UBICOM	IP2022/PQ80	XAIP.EXE	M1-UN-DP48	ADP-IP2022-QFP80
UBICOM	SX18AC/DP	XUBICOM.EXE	M1-UN-DP48	
UBICOM	SX20AC/SS	XUBICOM.EXE	M1-UN-DP48	
UBICOM	SX28AC/DP	XUBICOM.EXE	M1-UN-DP48	
UBICOM	SX28AC/SO	XUBICOM.EXE	M1-UN-DP48	
UBICOM	SX28AC/SS	XUBICOM.EXE	M1-UN-DP48	
UBICOM	SX48BD/TQ	XUBICOM.EXE	M1-UN-DP48	ADP-SX48BD-Q
UBICOM	SX52BD/PQ	XUBICOM.EXE	M1-UN-DP48	ADP-SX52BD-Q
ULEADTEK	AG89F516	XPGM52.EXE	M1-UN-DP48/PL44	
ULEADTEK	AG89F516(LQFP48)	XPGM52.EXE	M1-UN-LQ48	
ULEADTEK	AG89F54	XPGM52.EXE	M1-UN-DP48	
ULEADTEK	AG89F54(LQFP48)	XPGM52.EXE	M1-UN-LQ48	
URM	U29LV040	XMEM2.EXE	M1-UN-DP48	
USI	USI29F325B-T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV017BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV040AT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV040T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV081AT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV160ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV160BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV320BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV400ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV400TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV800ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV800BTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
UTI	UTI29LV800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
VLSI	VT27C128	XMEM1.EXE	M1-UN-DP48	
VLSI	VT27C256	XMEM1.EXE	M1-UN-DP48	
VLSI	VT27C512	XMEM1.EXE	M1-UN-DP48	
VLSI	VT27C64	XMEM1.EXE	M1-UN-DP48	
VersaChips	V87C54	XPGM51.EXE	M1-UN-DP48	
VersaChips	V87C58	XPGM51.EXE	M1-UN-DP48	
WELTREND	WT5109(PDIP24)	XHT48R.EXE	M1-UN-DP48	ADP-ET5109-DIP32
WELTREND	WT5109(SOP14-150)	XHT48R.EXE	M1-UN-DP48	ADP-ET5109-SO16
WELTREND	WT5109(SOP18-300)	XHT48R.EXE	M1-UN-DP48	ADP-ET5109-SO28
WELTREND	WT5109(SOP24-300)	XHT48R.EXE	M1-UN-DP48	ADP-ET5109-SO28
WELTREND	WT5109(SOP8-150)	XHT48R.EXE	M1-UN-DP48	ADP-ET5109-SO16
WELTREND	WT61P7(LQFP44)	XWT.EXE	M1-AVR-QF44	
WELTREND	WT61P7(LQFP48)	XWT.EXE	M1-UN-LQ48	
WELTREND	WT61P8(LQFP44)	XWT.EXE	M1-AVR-QF44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WELTREND	WT61P802(LQFP48)	XWT.EXE	M1-UN-TQ48	
WELTREND	WT61P803(LQFP48)	XWT.EXE	M1-UN-TQ48	
WELTREND	WT61P8S(LQFP44)	XWT.EXE	M1-AVR-QF44	
WELTREND	WT61P8S(LQFP48)	XWT.EXE	M1-UN-TQ48	
WELTREND	WT6702F(SOP16)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6702F(SOP24)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6702F(SSOP20)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6702F(SSOP24)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6703F(SSOP20)	XWT.EXE	M1-UN-LQ48	
WELTREND	WT6703F(SSOP24)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6703F(SSOP28)	XWT.EXE	M1-UN-DP48	
WELTREND	WT6703F*(SSOP24)	XWT.EXE	M1-UN-QS28	
WELTREND	WT69P3(SOP16)	XWT.EXE	M1-UN-DP48	
WELTREND	WT69P3(SSOP20)	XWT.EXE	M1-UN-DP48	
WELTREND	WT69P3(SSOP24)	XWT.EXE	M1-UN-DP48	
WELTREND	WT69P3(SSOP28)	XWT.EXE	M1-UN-DP48	
WELTREND	WT69P803(LQFP48)	XWT.EXE	M1-UN-TQ48	
WELTREND	WT69P8S(LQFP48)	XWT.EXE	M1-UN-TQ48	
WHITE MACRO	WMF512K8	XMEM2.EXE	M1-UN-DP48	
WIN VIRTUE	V29C3S032TATA	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B160ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B160ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B160BBT-H/M	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W19B160BTT-H/M	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W19B320ABB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B320ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B320ATB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B320ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B320BBT-H/M	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W19B320BTT-H	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W19B320SBB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B320SBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B320STB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B320STT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B322MBB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B322MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B322MTB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B322MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B323MBB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B323MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B323MTB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B323MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B324MBB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B324MBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B324MTB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19B324MTT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B800ABT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19B800ATT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19L320SBB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19L320SBT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W19L320STB	XA28F2.EXE	M1-UN-BG68	TOP-19B320-BG48
WINBOND	W19L320STT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W27C01	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27C010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27C02	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27C020/M	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27C257	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27C512	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E01	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E02	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E020	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	W27E040	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E257	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27E512	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27L01	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27L010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W27L02	XMEM2.EXE	M1-UN-DP48	
WINBOND	W28F321BB	XA28F2.EXE	M1-UN-BG68	TOP-28F160A-BG48
WINBOND	W28F321TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28F641TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J160BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J160TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J320BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J320TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J800BT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W28J800TT	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W29C010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C010M	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C011A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C020/C	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C040	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C042	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C102	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C512A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29C512M	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29EE010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29EE011	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29EE512	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29F002/B	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29F002U/N	XMEM2.EXE	M1-UN-DP48	
WINBOND	W29F400T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W29GL032CBxA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
WINBOND	W29GL032CBxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL032CBxS	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W29GL032CHxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL032CHxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL032CLxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL032CTxA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
WINBOND	W29GL032CTxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL032CTxS	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W29GL064CBxA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
WINBOND	W29GL064CBxS	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W29GL064CHxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL064CHxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL064CLxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL064CLxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL064CTxA	XA28F2.EXE	M1-UN-BG68/A	TOP-49B1614A-BG48/A
WINBOND	W29GL064CTxS	XA28F2.EXE	M1-UN-TS48A/TS56	
WINBOND	W29GL128CHxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL128CHxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL128CLxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL256PHxB	XA28F2.EXE	M1-UN-BG68/A	TOP-S29GLXXN-BG64/A/B
WINBOND	W29GL256PHxT	XA28F2.EXE	M1-UN-TS56	
WINBOND	W29GL256SLxC	XA28F2.EXE	M1-UN-BG68/A	TOP-S71PL064J-BG56/A
WINBOND	W39D040A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39F010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L010	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L020	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L020A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L040	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L040A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L040B	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39L040C	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	W39L512	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040B	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040C	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040FA	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040FB	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V040FC	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V080A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V080A(TSOP40)	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V080FA	XMEM2.EXE	M1-UN-DP48	
WINBOND	W39V080FA(TSOP40)	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49F002U	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49F020	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49F102	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49F201T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W49L102	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49L201T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W49L401T	XA28F2.EXE	M1-UN-TS48/TS48A/TS56	
WINBOND	W49V002	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49V002A	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49V002F	XMEM2.EXE	M1-UN-DP48	
WINBOND	W49V002FA	XMEM2.EXE	M1-UN-DP48	
WINBOND	W15B020L	XSPROM.EXE	M1-UN-DP48	
WINBOND	W15B020M	XSPROM.EXE	M1-UN-DP48	
WINBOND	W15B040L	XSPROM.EXE	M1-UN-DP48	
WINBOND	W15B040M	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25B20	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25B40	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25D40V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25D80V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P10	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P16	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P16(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P20	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P40	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25P80	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q05CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q10CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q128BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q128BV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q128FVxxxG	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q128FVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q128FW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16BV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16CV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16CV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16DVxxxG	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16DVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16DVxxxQ	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16DW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16DW(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q16V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q20BW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q20CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q256FVxxxG	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q256FVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q257FVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32BV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32BW	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	W25Q32DW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32FVxxxG	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32FVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32FWxxxQ	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32JVxxxQ	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q32V(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q40BL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q40BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q40BW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64BV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64CV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64CV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64DW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64FVxxxG	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64FVxxxG(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q64FW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q80BL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q80BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q80BW	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25Q80DV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25R128FV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25R64FV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X05CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X10AV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X10BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X10CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X10V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X16	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X16AV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X16BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X20AV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X20BL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X20BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X20CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X20V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X21CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X32	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X32(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X32A	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X32A(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40AL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40AV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40BL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X40V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X41CL	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X64	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X64(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X64BV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X64BV(SOP16)	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X80AV	XSPROM.EXE	M1-UN-DP48	
WINBOND	W25X80V	XSPROM.EXE	M1-UN-DP48	
WINBOND	W45B012	XSPROM.EXE	M1-UN-DP48	
WINBOND	W45B512	XSPROM.EXE	M1-UN-DP48	
WINBOND	W55F05B	XSPROM.EXE	M1-UN-DP48	
WINBOND	W55F10A	XSPROM.EXE	M1-UN-DP48	
WINBOND	W55F20	XSPROM.EXE	M1-UN-DP48	
WINBOND	ISD15002	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
WINBOND	ISD15004	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	ISD15008	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
WINBOND	ISD15102	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
WINBOND	ISD15104	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
WINBOND	ISD15108	XASIG.EXE	M1-UN-DP48	ADP-ISD15000-QF48
WINBOND	W541E260(QFP80)	XAW741E2.EXE	M1-UN-DP48	ADP-W741E260-Q
WINBOND	W541E261(QFP80)	XAW741E2.EXE	M1-UN-DP48	ADP-W741E260-Q
WINBOND	W541E280(QFP80)	XAW741E2.EXE	M1-UN-DP48	ADP-W741E260-Q
WINBOND	W541E480(QFP80)	XAW741E2.EXE	M1-UN-DP48	ADP-W741E260-Q
WINBOND	W681308	XASIG.EXE	M1-UN-DP48	ADP-W681308-Q48
WINBOND	W741E260(QFP80)	XAW741E2.EXE	M1-UN-DP48	ADP-W741E260-Q
WINBOND	W77E058A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77E468	XPGM52.EXE	M1-UN-DP48	
WINBOND	W77E516	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77E516A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77E532	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77E532A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77E58	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77I058A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77IE58	XPGM52.EXE	M1-UN-DP48	
WINBOND	W77L058A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77L516A	XPGM52.EXE	M1-UN-DP48	
WINBOND	W77L532A	XPGM52.EXE	M1-UN-DP48	
WINBOND	W77LE516	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77LE532	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W77LE58	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E051B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E051C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E051D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E052B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E052C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E052D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E054C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E054D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E058B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E058D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E065A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E354	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E365	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E365A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E374E	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E378	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E378E	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E51	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E512	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E516	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E516B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E516D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E51B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E51C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E52	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E52B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E52C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E54	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E54B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E54C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E58	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E58B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E61	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E62	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78E62B	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E65	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78E858	XPGM52.EXE	M1-UN-DP48/PL44	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	W78ERD2	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78ERD2A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78I052D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78I058D	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78IE52	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78IE54	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78IRD2A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L051A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L051C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L052A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L052C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L054C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L058A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L365A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L516A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78L812A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE365	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78LE51	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE516	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE51C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE52	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE52C	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE54	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE54C	XPGM52.EXE	M1-UN-DP48	
WINBOND	W78LE58	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W78LE812	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79A9311	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
WINBOND	W79E201	XASIG.EXE	M1-UN-DP48	ADP-W79E201-PL44
WINBOND	W79E201A	XASIG.EXE	M1-UN-DP48	ADP-W79E201-PL44
WINBOND	W79E2051	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E217A	XASIG.EXE	M1-UN-DP48	ADP-W79E217-Q100
WINBOND	W79E218	XASIG.EXE	M1-UN-DP48	ADP-W79E218-Q100
WINBOND	W79E21J	XASIG.EXE	M1-UN-DP48	ADP-W79E218-Q100
WINBOND	W79E225(PLCC44)	XASIG.EXE	M1-UN-PL44	
WINBOND	W79E225(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-W79E22X-QF48
WINBOND	W79E226(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-W79E22X-QF48
WINBOND	W79E227(PLCC44)	XASIG.EXE	M1-UN-PL44	
WINBOND	W79E227(QFP48)	XASIG.EXE	M1-UN-DP48	ADP-W79E22X-QF48
WINBOND	W79E35J	XASIG.EXE	M1-UN-TQ64	
WINBOND	W79E4051	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
WINBOND	W79E4051(SSOP20)	XASIG.EXE	M1-UN-SS34	
WINBOND	W79E532	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79E532A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79E549A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79E632A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79E633A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79E648	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79E649	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79E658A	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
WINBOND	W79E659A(PLCC68)	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79E659A(QFP100)	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
WINBOND	W79E801A	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E802A	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E803A	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E804A	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E822	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E823	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E824	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E825	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E82J	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E832A	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A
WINBOND	W79E833A	XASIG.EXE	M1-UN-DP48	CNV-SOP-DIP28A

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WINBOND	W79E834A	XASIG.EXE	M1-UN-DP48	
WINBOND	W79E83JA	XASIG.EXE	M1-UN-LQ48	
WINBOND	W79E87J	XASIG.EXE	M1-UN-LQ48	
WINBOND	W79L532A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79L548A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79L549A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79L632A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79L633A	XPGM52.EXE	M1-UN-DP48/PL44	
WINBOND	W79L649A	XASIG.EXE	M1-UN-DP48	ADP-W79E648-PL68
WINBOND	W79L658A	XASIG.EXE	M1-UN-DP48	ADP-W79E658-Q100
WINBOND	W83960G	XAMPU2.EXE	M1-UN-TQ64	
WINBOND	W83L950D	XAMPU2.EXE	M1-UN-DP48	ADP-W83L950D-TQ
WINBOND	W83L951ADG	XAMPU2.EXE	M1-UN-DP48	ADP-W83L951D-TQ
WINBOND	W83L951D	XAMPU2.EXE	M1-UN-DP48	ADP-W83L951D-TQ
WINBOND	W83L951F	XAMPU2.EXE	M1-UN-DP48	ADP-W83L951F-Q
WINBOND	W925EP01	XASIG.EXE	M1-UN-DP48	ADP-W925EP01-Q100
WINBOND	W99100	XPGM52.EXE	M1-UN-DP48	CNV-QFP48-78E61
WINBOND	W99100*	XPGM52.EXE	M1-UN-LQ48	
WIZNET	W7100	XWIZNET.EXE	M1-UN-DP48	ADP-W7100-Q100
WSI	57C191B	XBPPGM.EXE	M1-UN-DP48	
WSI	57C191C	XBPPGM.EXE	M1-UN-DP48	
WSI	57C291B	XBPPGM.EXE	M1-UN-DP48	
WSI	57C43B	XBPPGM.EXE	M1-UN-DP48	
WSI	57C45	XBPPGM.EXE	M1-UN-DP48	
WSI	57C49B	XBPPGM.EXE	M1-UN-DP48	
WSI	57C49C	XBPPGM.EXE	M1-UN-DP48	
WSI	57C51B	XBPPGM.EXE	M1-UN-DP48	
WSI	57C51C	XBPPGM.EXE	M1-UN-DP48	
WSI	57C71C	XBPPGM.EXE	M1-UN-DP48	
WSI	WS57C128FB	XMEM1.EXE	M1-UN-DP48	
WSI	WS57C256F(PLCC)	XMEM1.EXE	M1-UN-DP48	
WSI	PSD211R	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD211RB	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD301	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD301B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD301L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD302	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD302B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD302L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD302V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD303	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD303B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD303L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD304	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD311	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD311B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD311L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD312	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD312B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD312L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD312V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD313	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD313B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD313L	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD314	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	PSD401A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD401A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD402A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD402A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD403A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD403A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD411A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
WSI	PSD411A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD412A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD412A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD413A1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD413A2	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD4235G2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD835G-TQ80
WSI	PSD4235G2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD835G-TQ80
WSI	PSD501B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD502B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD503B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD511B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD512B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD513B1	XAPSD5.EXE	M1-UN-DP48	ADP-PSD4XX
WSI	PSD813F1	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52/TQ64
WSI	PSD813F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52
WSI	PSD813F3	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F3V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F4	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F4V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F5	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD813F5V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD833F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52
WSI	PSD833F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD834F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD834F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD853F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD853F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD854F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD854F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52
WSI	PSD913F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL/Q52
WSI	PSD913F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD933F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD933F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD934F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD934F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD953F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD953F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD954F2	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	PSD954F2V	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
WSI	ZPSD211R	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD211RV	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD301B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD301V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD302B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD303B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD303V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD311B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD311V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD312B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD312V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301
WSI	ZPSD313B	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD313V	XAPSD3.EXE	M1-UN-DP48	ADP-PSD301/-Q/Q44/Q44A
WSI	ZPSD813F1	XAPSD4.EXE	M1-UN-DP48	ADP-PSD8XX-PL
XICOR	X2212P(DIP)	XMEM1.EXE	M1-UN-DP48	
XICOR	X22C12(DIP)	XMEM1.EXE	M1-UN-DP48	
XICOR	X2004D	XMEM2.EXE	M1-UN-DP48	
XICOR	X20C04	XMEM2.EXE	M1-UN-DP48	
XICOR	X2864B	XMEM2.EXE	M1-UN-DP48	
XICOR	X28C64	XMEM2.EXE	M1-UN-DP48	
XICOR	X28HC256	XMEM2.EXE	M1-UN-DP48	
XICOR	X28HC64	XMEM2.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
XICOR	X22C10(DIP)	XSPROM.EXE	M1-UN-DP48	
XICOR	X24012	XSPROM.EXE	M1-UN-DP48	
XICOR	X24022	XSPROM.EXE	M1-UN-DP48	
XICOR	X24042	XSPROM.EXE	M1-UN-DP48	
XICOR	X24164	XSPROM.EXE	M1-UN-DP48	
XICOR	X24256	XSPROM.EXE	M1-UN-DP48	
XICOR	X24325	XSPROM.EXE	M1-UN-DP48	
XICOR	X24641	XSPROM.EXE	M1-UN-DP48	
XICOR	X24645	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C00	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C01/I	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C01A	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C02/I	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C04/I	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C08	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C16	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C16(SOP14)	XSPROM.EXE	M1-UN-DP48	
XICOR	X24C44	XSPROM.EXE	M1-UN-DP48	
XICOR	X24F016	XSPROM.EXE	M1-UN-DP48	
XICOR	X24F032	XSPROM.EXE	M1-UN-DP48	
XICOR	X24F064	XSPROM.EXE	M1-UN-DP48	
XICOR	X25020	XSPROM.EXE	M1-UN-DP48	
XICOR	X25040	XSPROM.EXE	M1-UN-DP48	
XICOR	X25045	XSPROM.EXE	M1-UN-DP48	
XICOR	X25057	XSPROM.EXE	M1-UN-DP48	
XICOR	X25080	XSPROM.EXE	M1-UN-DP48	
XICOR	X25128	XSPROM.EXE	M1-UN-DP48	
XICOR	X25160	XSPROM.EXE	M1-UN-DP48	
XICOR	X25320	XSPROM.EXE	M1-UN-DP48	
XICOR	X25330	XSPROM.EXE	M1-UN-DP48	
XICOR	X25640(SOP14)	XSPROM.EXE	M1-UN-DP48	
XICOR	X25640/X25642	XSPROM.EXE	M1-UN-DP48	
XICOR	X25650	XSPROM.EXE	M1-UN-DP48	
XICOR	X25C02	XSPROM.EXE	M1-UN-DP48	
XICOR	X25F008	XSPROM.EXE	M1-UN-DP48	
XICOR	X25F016	XSPROM.EXE	M1-UN-DP48	
XICOR	X25F032	XSPROM.EXE	M1-UN-DP48	
XICOR	X25F064	XSPROM.EXE	M1-UN-DP48	
XICOR	X25F128	XSPROM.EXE	M1-UN-DP48	
XICOR	X4043	XSPROM.EXE	M1-UN-DP48	
XICOR	X4045	XSPROM.EXE	M1-UN-DP48	
XICOR	X5043	XSPROM.EXE	M1-UN-DP48	
XICOR	X5045	XSPROM.EXE	M1-UN-DP48	
XICOR	X5083	XSPROM.EXE	M1-UN-DP48	
XICOR	X76F101(SOP)	XSPROM.EXE	M1-UN-DP48	
XICOR	X76F400(SOP)	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1701	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1701L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1702L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1704L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17128D	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17128E	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17128EL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17128L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17128X	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1718D	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1718L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17256D	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17256E	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17256EL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17256L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17256X	XSPROM.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteinotyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
XILINX	XC1736A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1736D	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1736E	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17512L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1765D	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1765E	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1765EL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1765L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC1765X	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S05	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S05L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S05XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S10	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S100A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S100L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S100XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S10L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S10XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S150A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S150L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S150XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S15A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S20	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S200A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S20L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S20XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S30	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S300A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S30A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S30L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S30XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S40	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S40L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S40XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S50A	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S50L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17S50XL	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17V01	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17V02	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17V04	XSPROM.EXE	M1-UN-DP48	
XILINX	XC17V16	XSPROM.EXE	M1-UN-DP48	
XILINX	XC18V01	XSPROM.EXE	M1-UN-DP48	ADP-XC18XX-SO20/-PL20/-Q44
XILINX	XC18V02	XSPROM.EXE	M1-UN-DP48	ADP-XC18XX-Q44/-PL44
XILINX	XC18V04	XSPROM.EXE	M1-UN-DP48	ADP-XC18XX-Q44/-PL44
XILINX	XC18V256	XSPROM.EXE	M1-UN-DP48	ADP-XC18XX-SO20/-PL20/-Q44
XILINX	XC18V512	XSPROM.EXE	M1-UN-DP48	ADP-XC18XX-SO20/-PL20/-Q44
XILINX	XCF01S	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
XILINX	XCF02S	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
XILINX	XCF04S	XSPROM.EXE	M1-UN-DP48	ADP-XCFXXS-VO20
XILINX	XCF08P	XSPROM.EXE	M1-UN-TS48A	
XILINX	XCF08P(BGA48)	XSPROM.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
XILINX	XCF16P	XSPROM.EXE	M1-UN-TS48A	
XILINX	XCF16P(BGA48)	XSPROM.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
XILINX	XCF32P	XSPROM.EXE	M1-UN-TS48A	
XILINX	XCF32P(BGA48)	XSPROM.EXE	M1-UN-BG68/A	TOP-29F160-BG48/A
XILINX	XQ1701L	XSPROM.EXE	M1-UN-DP48	
XILINX	XQR1701L	XSPROM.EXE	M1-UN-DP48	
XILINX	XC2C128 (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C128 (TQFP144)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q144
XILINX	XC2C128 (VQFP100)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q100
XILINX	XC2C256 (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C256 (PQFP208)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q208

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
XILINX	XC2C256 (TQFP144)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q144
XILINX	XC2C256 (VQFP100)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q100
XILINX	XC2C32 (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C32 (PLCC44)	XXC2.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
XILINX	XC2C32 (PLCC44*)	XXC2.EXE	M1-UN-PL44	
XILINX	XC2C32 (VQFP44)	XXC2.EXE	M1-UN-DP48	CNV-QFP-MPU51B
XILINX	XC2C32 (VQFP44*)	XXC2.EXE	M1-AVR-QF44	
XILINX	XC2C32A (BGA56)	XXC2.EXE	M1-UN-BG68A	TOP-XC2C64A-BG56
XILINX	XC2C32A (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C32A (PLCC44)	XXC2.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
XILINX	XC2C32A (PLCC44*)	XXC2.EXE	M1-UN-PL44	
XILINX	XC2C32A (QFN32)	XXC2.EXE	M1-UN-DP48	CNV-MLF-HT82K68E
XILINX	XC2C32A (QFN32*)	XXC2.EXE	M1-UN-BG68/A	TOP-AVR-ML32/A
XILINX	XC2C32A (VQFP44)	XXC2.EXE	M1-UN-DP48	CNV-QFP-MPU51B
XILINX	XC2C32A (VQFP44*)	XXC2.EXE	M1-AVR-QF44	
XILINX	XC2C384 (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C384 (PQFP208)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q208
XILINX	XC2C384 (TQFP144)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q144
XILINX	XC2C512 (PQFP208)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q208
XILINX	XC2C64 (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C64 (PLCC44)	XXC2.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
XILINX	XC2C64 (PLCC44*)	XXC2.EXE	M1-UN-PL44	
XILINX	XC2C64 (VQFP44)	XXC2.EXE	M1-UN-DP48	CNV-QFP-MPU51B
XILINX	XC2C64 (VQFP44*)	XXC2.EXE	M1-AVR-QF44	
XILINX	XC2C64A (BGA56)	XXC2.EXE	M1-UN-BG68A	TOP-XC2C64A-BG56
XILINX	XC2C64A (ISP)	XXC2.EXE	M1-JTAG-CN10	
XILINX	XC2C64A (PLCC44)	XXC2.EXE	M1-UN-DP48	CNV-PLCC-MPU51B
XILINX	XC2C64A (PLCC44*)	XXC2.EXE	M1-UN-PL44	
XILINX	XC2C64A (QFN48)	XXC2.EXE	M1-UN-BG68/A	TOP-UN-QN48/A
XILINX	XC2C64A (QFN48*)	XXC2.EXE	M1-UN-BG68	TOP-MCU-QN48
XILINX	XC2C64A (VQFP100)	XXC2.EXE	M1-UN-DP48	ADP-XC2C-Q100
XILINX	XC2C64A (VQFP44)	XXC2.EXE	M1-UN-DP48	CNV-QFP-MPU51B
XILINX	XC2C64A (VQFP44*)	XXC2.EXE	M1-AVR-QF44	
XILINX	XC95108 (PLCC84)	XA9500.EXE	M1-UN-DP48	ADP-XC73108-PL84
XILINX	XC95108 (PQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC73108-Q100
XILINX	XC95108 (PQFP160)	XA9500.EXE	M1-UN-DP48	ADP-XC73108-Q160
XILINX	XC95108 (PQFP160*)	XA9500.EXE	M1-XC73108-Q160	
XILINX	XC95108 (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC95108-TQ
XILINX	XC95144 (PQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC73108-Q100
XILINX	XC95144 (PQFP160)	XA9500.EXE	M1-UN-DP48	ADP-XC73108-Q160
XILINX	XC95144 (PQFP160*)	XA9500.EXE	M1-XC73108-Q160	
XILINX	XC95144 (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC95108-TQ
XILINX	XC95144 (TQFP100*)	XA9500.EXE	M1-XC95108-QF100	
XILINX	XC95144XL (CSP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-CS144
XILINX	XC95144XL (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC95108-TQ
XILINX	XC95144XL (TQFP100*)	XA9500.EXE	M1-XC95108-QF100	
XILINX	XC95144XL (TQFP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-TQ
XILINX	XC95144XV (CSP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-CS144
XILINX	XC95144XV (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC95108-TQ
XILINX	XC95144XV (TQFP100*)	XA9500.EXE	M1-XC95108-QF100	
XILINX	XC95144XV (TQFP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-TQ
XILINX	XC95216 (PQFP160)	XA9500.EXE	M1-UN-DP48	ADP-XC95216-Q160
XILINX	XC95216 (QFP208)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-Q208
XILINX	XC95288 (QFP208)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-Q208
XILINX	XC95288XL (BGA256)	XA9500.EXE	M1-UN-DP48	ADP-XC95288XL-BG256
XILINX	XC95288XL (FBGA256)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-BG256
XILINX	XC95288XL (QFP208)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-Q208
XILINX	XC95288XL (TQFP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-TQ
XILINX	XC95288XV (FBGA256)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-BG256
XILINX	XC95288XV (QFP208)	XA9500.EXE	M1-UN-DP48	ADP-XC95288-Q208
XILINX	XC95288XV (TQFP144)	XA9500.EXE	M1-UN-DP48	ADP-XC95144XL-TQ
XILINX	XC9536 (CSP48)	XA9500.EXE	M1-UN-DP48	ADP-XC9536XL-BG48V2

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
XILINX	XC9536 (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC7354-PL44
XILINX	XC9536 (VQFP44)	XA9500.EXE	M1-UN-DP48	ADP-XC7336-Q
XILINX	XC9536 (VQFP44*)	XA9500.EXE	M1-AVR-QF44	
XILINX	XC9536XL (CSP48)	XA9500.EXE	M1-UN-DP48	ADP-XC9536XL-BG48/-BG48V2
XILINX	XC9536XL (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC7354-PL44
XILINX	XC9536XL (VQFP44)	XA9500.EXE	M1-UN-DP48	ADP-XC7336-Q
XILINX	XC9536XL (VQFP44*)	XA9500.EXE	M1-AVR-QF44	
XILINX	XC9536XL (VQFP64)	XA9500.EXE	M1-UN-DP48	ADP-XC9536XL-VQ
XILINX	XC9536XL (VQFP64*)	XA9500.EXE	M1-UN-TQ64	
XILINX	XC9536XV (CSP48)	XA9500.EXE	M1-UN-DP48	ADP-XC9536XL-BG48/-BG48V2
XILINX	XC9536XV (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC7354-PL44
XILINX	XC9536XV (VQFP44)	XA9500.EXE	M1-UN-DP48	ADP-XC7336-Q
XILINX	XC9536XV (VQFP44*)	XA9500.EXE	M1-AVR-QF44	
XILINX	XC9572 (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-PL44
XILINX	XC9572 (PLCC84)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-PL84
XILINX	XC9572 (PQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-PQ
XILINX	XC9572 (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-TQ
XILINX	XC9572 (TQFP100*)	XA9500.EXE	M1-XC9572-QF100	
XILINX	XC9572XL (CSP48)	XA9500.EXE	M1-UN-DP48	ADP-XC9572XL-BG48
XILINX	XC9572XL (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-PL44
XILINX	XC9572XL (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-TQ
XILINX	XC9572XL (TQFP100*)	XA9500.EXE	M1-XC9572-QF100	
XILINX	XC9572XL (VQFP44)	XA9500.EXE	M1-UN-DP48	ADP-XC9572XL-VQ44
XILINX	XC9572XL (VQFP44*)	XA9500.EXE	M1-AVR-QF44	
XILINX	XC9572XL (VQFP64)	XA9500.EXE	M1-UN-DP48	ADP-XC9572XL-VQ
XILINX	XC9572XL (VQFP64*)	XA9500.EXE	M1-UN-TQ64	
XILINX	XC9572XV (CSP48)	XA9500.EXE	M1-UN-DP48	ADP-XC9572XL-BG48
XILINX	XC9572XV (PLCC44)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-PL44
XILINX	XC9572XV (TQFP100)	XA9500.EXE	M1-UN-DP48	ADP-XC9572-TQ
XILINX	XC9572XV (TQFP100*)	XA9500.EXE	M1-XC9572-QF100	
XILINX	XC9572XV (VQFP44)	XA9500.EXE	M1-UN-DP48	ADP-XC9572XL-VQ44
XILINX	XC9572XV (VQFP44*)	XA9500.EXE	M1-AVR-QF44	
XILINX	XCR3032XL	XAXPLA3.EXE	M1-UN-DP48	ADP-XPLA3-PL44/-VQ44
XILINX	XCR3032XL(CSP48)	XAXPLA3.EXE	M1-UN-BG68	TOP-XPLA3-CS48
XILINX	XCR3032XL(ISP)	XAXPLA3.EXE	M1-JTAG-CN10	
XILINX	XCR3064XL	XAXPLA3.EXE	M1-UN-DP48	ADP-XPLA3-PL44/-VQ44/-VQ100
XILINX	XCR3064XL(CSP48)	XAXPLA3.EXE	M1-UN-BG68	TOP-XPLA3-CS48
XILINX	XCR3064XL(ISP)	XAXPLA3.EXE	M1-JTAG-CN10	
XILINX	XCR3064XL(VQFP100*)	XAXPLA3.EXE	M1-XPLA3-VQ100	
XILINX	XCR3128XL	XAXPLA3.EXE	M1-UN-DP48	ADP-XPLA3-VQ100/-TQ144
XILINX	XCR3128XL(ISP)	XAXPLA3.EXE	M1-JTAG-CN10	
XILINX	XCR3128XL(VQFP100*)	XAXPLA3.EXE	M1-XPLA3-VQ100	
XILINX	XCR5128(VQFP 100)	XAPZ5000.EXE	M1-UN-DP48	ADP-PZ5128-TQ100
YMC	Y24LC02	XSPROM.EXE	M1-UN-DP48	
YMC	Y54LC64	XSPROM.EXE	M1-UN-DP48	
YMC	Y93LC46(128*8)	XSPROM.EXE	M1-UN-DP48	
YMC	Y93LC46(64*16)	XSPROM.EXE	M1-UN-DP48	
YMC	Y93LC66(256*16)	XSPROM.EXE	M1-UN-DP48	
YMC	Y93LC66(512*8)	XSPROM.EXE	M1-UN-DP48	
ZILOG	S3F80J9	XAMPU2.EXE	M1-UN-DP48	ADP-S3F80J9-SO
ZILOG	S3F8289	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
ZILOG	S3F828BX	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
ZILOG	S3F828BX(QFP80)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
ZILOG	S3F84I9	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
ZILOG	S3F84NB	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
ZILOG	S3F9444	XAMPU2.EXE	M1-UN-DP48	
ZILOG	S3F9454(DIP20)	XAMPU2.EXE	M1-UN-DP48	
ZILOG	S3F94C4	XAMPU2.EXE	M1-UN-DP48	
ZILOG	S3P7234	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
ZILOG	S3P7235	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
ZILOG	S3P72K8	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
ZILOG	S3P72N4	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	S3P7324	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
ZILOG	S3P7414	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
ZILOG	S3P8245(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
ZILOG	S3P8245(TQFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
ZILOG	S3P8249(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8245-Q
ZILOG	S3P8249(TQFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
ZILOG	S3P825A	XAMPU2.EXE	M1-UN-DP48	ADP-S3P825A-TQ
ZILOG	S3P8469(QFP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P7234-Q
ZILOG	S3P8469(SDIP)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P8469-SD
ZILOG	S3P863A	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
ZILOG	S3P863A(SDIP42)	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-SD
ZILOG	S3P9228	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
ZILOG	S3P9688	XAMPU2.EXE	M1-UN-DP48	ADP-S3P863A-QV2
ZILOG	Z8673312PSG	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E02 SL1925	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E04 (12PEC/12SEC)	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E04 1866	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E04 1903	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E04 2004	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E0412SSG 1866	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E08 (12PEC/12SEC)	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E08 1866	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E0812HSC 1903	XPGMZ8.EXE	M1-UN-DP48	ADP-Z86E0X-SS
ZILOG	Z86E0812PSC 1866	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E0812PSG 1866	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E0812SSC 1903	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E0812SSG 1866	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	Z86E21	XPGMZ8.EXE	M1-UN-DP48	CNV-PLCC-Z86E21
ZILOG	Z86E3016PSC	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E3016PSG	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E3016SSC	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	Z86E3016SSG	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	Z86E3312PSG	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E3412PSG	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E4016FSC	XPGMZ8.EXE	M1-UN-DP48	ADP-Z86E40-Q44
ZILOG	Z86E4016PSC	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E4312PSC	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E4312PSG	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	Z86E6116PSC	XPGMZ8.EXE	M1-UN-DP48	ADP-Z86E6X
ZILOG	Z86E6116PSG	XPGMZ8.EXE	M1-UN-DP48	ADP-Z86E6X
ZILOG	Z86E6116VSG	XPGMZ8.EXE	M1-UN-DP48	ADP-Z86E6X-PL
ZILOG	Z8937120PSG	XPGMZ8.EXE	M1-UN-DP48	ADP-Z89371
ZILOG	Z8937120VSC	XPGMZ8.EXE	M1-UN-DP48	ADP-Z89371-PL
ZILOG	Z8F0113HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0113HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0113PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0113PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0113SB005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0113SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0113SH005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0113SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F011AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F011AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F011AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F011AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F011APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F011APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F011APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F011APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F011ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F011ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F011ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F011ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F011ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0123HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0123SB005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F012AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F012AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F012AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F012AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F012APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F012APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F012APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F012APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F012ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F012ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F012ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F012ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F012ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0130HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0130HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0130PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0130PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0130QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-QFN28
ZILOG	Z8F0130SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0130SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0131HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0131HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0131PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0131PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0131QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-QFN28
ZILOG	Z8F0131SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0131SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0213HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0213HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0213PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0213PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0213SB005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0213SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0213SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F021AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F021AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F021AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F021AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F021APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F021APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F021APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F021APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F021ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F021ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F021ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F021ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F021ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0223HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0223HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0223PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0223PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0223SB005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0223SB005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0223SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0223SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F022AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F022AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F022AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F022AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F022APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F022APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F022APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F022APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F022ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F022ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F022ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F022ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F022ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0230HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0230HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0230PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0230PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0230QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F0230SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0230SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0231HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0231HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0231PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0231PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0231QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F0231SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0231SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0411HH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0411HH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0411HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0411PH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0411PH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0412PJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0412PJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0412SJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0412SJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0413HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0413HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0413PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0413PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0413SB005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0413SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0413SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F041AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F041AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F041AHH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F041AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F041AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F041APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F041APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F041APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F041APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F041ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F041ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F041ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F041ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F041ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0421HH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0421HH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0421PH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0421PH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0422PJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0422PJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0422SJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0422SJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F0423HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0423HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0423SB005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0423SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0423SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F042AHH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042AHH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042AHJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042AHJ020EG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F042APB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-DP8
ZILOG	Z8F042APH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F042APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F042APJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F042APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F042ASB020EG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F042ASB020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F042ASH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F042ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F042ASJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F042ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0430HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0430HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0430PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0430PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0430QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-QFN28
ZILOG	Z8F0430SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0430SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0431HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0431HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0431PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0431PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0431QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-QFN28
ZILOG	Z8F0431SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0431SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F043AHH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F043AHJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F043APH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F043APJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F043AQJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-QFN28
ZILOG	Z8F043ASH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F043ASJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0811HH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0811HH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0811HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0811PH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0811PH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0812PJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0812PJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0812SJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0812SJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0812SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0813HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0813HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0813PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0813PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0813SB005SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F042A-SO8
ZILOG	Z8F0813SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0813SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F081AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F081AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F081AHJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F081APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F081APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F081ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F081ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0821HH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0821HH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0821PH020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0821PH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0822PJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0822PJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0822SJ020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0822SJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0823HH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0823HJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0823PH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0823PJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0823SH005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0823SJ005SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F082AHH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F082AHJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F082APH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F082APJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F082ASH020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F082ASJ020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0830HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0830HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0830PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0830PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0830QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F0830SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0830SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0831HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0831HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0831PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0831PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0831QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F0831SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0831SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F083AHH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F083AHJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F083APH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F083APJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F083AQJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F083ASH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F083ASJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0880HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0880HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F0880PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0880PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F0880SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F0880SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F1232HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F1232HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F1232PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F1232PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F1232QJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-QFN28
ZILOG	Z8F1232SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F1232SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F1233HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F1233PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F1233SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F1601AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F1601AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F1601PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F1601PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F1601VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F1601VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F1602AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F1602AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F1602VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F1602VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F1621AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F1621AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F1621PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F1621PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F1621VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F1621VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F1622AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F1622AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F1622VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F1622VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F1680HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F1680PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F1680PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F1680SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F1680SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F2401AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2401AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2401PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F2401PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F2401VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F2401VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F2402AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F2402AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F2402VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F2402VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F2421AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2421AN020EG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2421AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2421AN020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F2421PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F2421PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F2421VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F2421VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F2422AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F2422AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F2422VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F2480HH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F2480HJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-SS
ZILOG	Z8F2480PH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F2480PJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX
ZILOG	Z8F2480SH020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F2480SJ020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F0XXX-S
ZILOG	Z8F3201AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F3201AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F3201PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F3201PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F3201VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F3201VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXXX-PL44
ZILOG	Z8F3202AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F3202AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F3202VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	Z8F3202VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F3221AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F3221AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F3221PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F3221PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F3221VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F3221VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F3222AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F3222AR020SG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F3222VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F3222VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F4801AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F4801AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F4801PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F4801PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F4801VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F4801VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F4802AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F4802AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F4802VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F4802VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F4803FT020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F4803FT020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F4821AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F4821AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F4821PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F4821PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F4821VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F4821VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F4822AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F4822AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F4822VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F4822VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F4823FT020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F4823FT020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F6401PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F6401VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F6402AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F6402VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F6403FT020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F6421AN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F6421AN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF44
ZILOG	Z8F6421PM020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F6421PM020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-DP40
ZILOG	Z8F6421VN020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F6421VN020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FXXX-PL44
ZILOG	Z8F6422AR020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F6422AR020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-TQ64
ZILOG	Z8F6422VS020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F6422VS020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-PL68
ZILOG	Z8F6423FT020EC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8F6423FT020SC	XAZ8F.EXE	M1-UN-DP48	ADP-Z8F64XX-QF80
ZILOG	Z8FMC04100AKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-QF32
ZILOG	Z8FMC04100QKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-MLF32
ZILOG	Z8FMC08100AKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-QF32
ZILOG	Z8FMC08100QKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-MLF32
ZILOG	Z8FMC16100AKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-QF32
ZILOG	Z8FMC16100QKSG	XAZ8F.EXE	M1-UN-DP48	ADP-Z8FMC16100-MLF32
ZILOG	ZGP323H/LSH2004(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2004G(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2008G(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2016G(SSOP20)	XZGP51.EXE	M1-UN-SS34	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	ZGP323H/LSH2032(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2032G(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2804(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2804G(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2808G(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2816G(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2832(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSH2832G(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323H/LSP2004G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2008G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2016	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2032	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2032G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2804G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2808G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2816G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2832	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP2832G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP4008G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP4032	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSP4032G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323H/LSS2004(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2004G(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2008G(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2016(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2016G(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2032(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2804G(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2808(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2808G(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2816(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2816G(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2832(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323H/LSS2832G(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323HEH2832G(SSO28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323HSP2016G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323HSP4004G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323LSH2008(SSOP20)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323LSH2808(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323LSH2816(SSOP28)	XZGP51.EXE	M1-UN-SS34	
ZILOG	ZGP323LSP4016G	XZGP51.EXE	M1-UN-DP48	
ZILOG	ZGP323LSS2008(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323LSS2032G(SOP20)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZGP323LSS2804(SOP28)	XZGP51.EXE	M1-UN-SO28	
ZILOG	ZLF645E0H2064G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645-SS
ZILOG	ZLF645E0H2864G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645-SS
ZILOG	ZLF645E0H4864G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645-SS48
ZILOG	ZLF645E0P2064G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645
ZILOG	ZLF645E0P2864G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645
ZILOG	ZLF645E0S2064G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645-S
ZILOG	ZLF645E0S2864G	XAZ8F.EXE	M1-UN-DP48	ADP-ZLF645-S
ZILOG	ZLP12840H2828C	XZLP.EXE	M1-UN-SS34	
ZILOG	ZLP12840H2832G	XZLP.EXE	M1-UN-SS34	
ZILOG	ZLP12840H2864G	XZLP.EXE	M1-UN-SS34	
ZILOG	ZLP12840H2896G	XZLP.EXE	M1-UN-SS34	
ZILOG	ZLP12840K2828E	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2028C	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2028G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2032G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2064G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2096G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2828C	XZLP.EXE	M1-UN-DP48	

Device-Liste für ALL-100A und ALL-100AP

Hersteller	Bausteintyp	Treiberfile	Modul	ADP/CNV/TOP falls notwendig
ZILOG	ZLP12840P2828G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2832G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2864G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840P2896G	XZLP.EXE	M1-UN-DP48	
ZILOG	ZLP12840S2028C	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP12840S2032G	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP12840S2096G	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP12840S2828C	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP12840S2832G	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP12840S2896G	XZLP.EXE	M1-UN-SO28	
ZILOG	ZLP32300H2004G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2008G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2016G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2032C	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2032G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2804G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2808G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2816G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2832C	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300H2832G	XPGMZ8.EXE	M1-UN-SS34	
ZILOG	ZLP32300P2004G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2008G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2016G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2032C	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2032G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2804G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2808G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2816G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P2832C	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P4004G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P4008G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P4016G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P4032C	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300P4032G	XPGMZ8.EXE	M1-UN-DP48	
ZILOG	ZLP32300S2004G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2008G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2016G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2032C	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2032G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2804G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2808G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2816G	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2832C	XPGMZ8.EXE	M1-UN-SO28	
ZILOG	ZLP32300S2832G	XPGMZ8.EXE	M1-UN-SO28	
ZWAVE	ZM4101	XASIG.EXE	M1-ZW4101-QN56	
ZWAVE	ZW0102	XASIG.EXE	M1-UN-DP48	ADP-ZW0102-Q
ZWAVE	ZW0201	XASIG.EXE	M1-UN-DP48	ADP-ZW0201-QFN